

### STM32 microcontroller system memory boot mode

## Introduction

The bootloader is stored in the internal boot ROM memory (system memory) of STM32 devices. It is programmed by ST during production. Its main task is to download the application program to the internal Flash memory through one of the available serial peripherals (USART, CAN, USB, I<sup>2</sup>C, SPI, etc.). A communication protocol is defined for each serial interface, with a compatible command set and sequences.

This document applies to the products listed in [Table 1](#). They are referred as STM32 throughout the document.

**Table 1. Applicable products**

Type	Part number or product series
Microcontrollers	STM32L0 series: STM32L051xx, STM32L052xx, STM32L053xx, STM32L062xx, STM32L063xx STM32L1 series. STM32L4 series: STM32L476xx, STM32L486xx STM32F0 series: STM32F03xxx, STM32F04xxx, STM32F05xxx, STM32F07xxx STM32F1 series. STM32F2 series. STM32F3 series: STM32F301xx, STM32F302xx, STM32F303xx, STM32F318xx, STM32F328xx, STM32F334xx, STM32F358xx, STM32F373xx, STM32F378xx STM32F4 series: STM32F401xx, STM32F405xx, STM32F407xx, STM32F411xx, STM32F415xx, STM32F417xx, STM32F427xx, STM32F429xx, STM32F437xx, STM32F439xx, STM32F446xx

The main features of the bootloader are the following:

- It uses an embedded serial interface to download the code with a predefined communication protocol
- It transfers and updates the Flash memory code, the data, and the vector table sections

This application note presents the general concept of the bootloader. It describes the supported peripherals and hardware requirements to be considered when using the bootloader of STM32 devices. However the specifications of the low-level communication protocol for each supported serial peripheral are documented in separate documents. For specifications of the USART protocol used in the bootloader, refer to AN3155. For the specification of the CAN protocol used in the bootloader, refer to AN3154. For the specification of the DFU (USB device) protocol used in the bootloader, refer to AN3156. For the specification of the I<sup>2</sup>C protocol used in the bootloader, refer to AN4221. For the specification of the SPI protocol used in the bootloader, refer to AN4286.

# Contents

<b>1</b>	<b>Related documents</b>	<b>11</b>
<b>2</b>	<b>Glossary</b>	<b>11</b>
<b>3</b>	<b>General bootloader description</b>	<b>14</b>
3.1	Bootloader activation	14
3.2	Bootloader identification	15
3.3	Hardware connection requirements	19
3.4	Bootloader Memory Management	21
<b>4</b>	<b>STM32F10xxx devices bootloader</b>	<b>23</b>
4.1	Bootloader configuration	23
4.2	Bootloader selection	24
4.3	Bootloader version	24
<b>5</b>	<b>STM32F105xx/107xx devices bootloader</b>	<b>25</b>
5.1	Bootloader configuration	25
5.2	Bootloader selection	27
5.3	Bootloader version	28
5.3.1	How to identify STM32F105xx/107xx bootloader versions	28
5.3.2	Bootloader unavailability on STM32F105xx/STM32F107xx devices with a date code below 937	29
5.3.3	USART bootloader Get-Version command returns 0x20 instead of 0x22	30
5.3.4	PA9 excessive power consumption when USB cable is plugged in bootloader V2.0	30
<b>6</b>	<b>STM32F10xxx XL-density devices bootloader</b>	<b>31</b>
6.1	Bootloader configuration	31
6.2	Bootloader selection	32
6.3	Bootloader version	32
<b>7</b>	<b>STM32L1xxx6(8/B) devices bootloader</b>	<b>33</b>
7.1	Bootloader configuration	33

7.2	Bootloader selection .....	34
7.3	Bootloader version .....	34
<b>8</b>	<b>STM32L1xxxC devices bootloader .....</b>	<b>35</b>
8.1	Bootloader configuration .....	35
8.2	Bootloader selection .....	37
8.3	Bootloader version .....	37
<b>9</b>	<b>STM32L1xxxD devices bootloader .....</b>	<b>38</b>
9.1	Bootloader configuration .....	38
9.2	Bootloader selection .....	40
9.3	Bootloader version .....	41
<b>10</b>	<b>STM32F2xxxx devices bootloader .....</b>	<b>42</b>
10.1	Bootloader V2.x .....	42
10.1.1	Bootloader configuration .....	42
10.1.2	Bootloader selection .....	43
10.1.3	Bootloader version .....	44
10.2	Bootloader V3.x .....	45
10.2.1	Bootloader configuration .....	45
10.2.2	Bootloader selection .....	47
10.2.3	Bootloader version .....	48
<b>11</b>	<b>STM32F40xxx/41xxx devices bootloader .....</b>	<b>49</b>
11.1	Bootloader V3.x .....	49
11.1.1	Bootloader configuration .....	49
11.1.2	Bootloader selection .....	51
11.1.3	Bootloader version .....	52
11.2	Bootloader V9.x .....	53
11.2.1	Bootloader configuration .....	53
11.2.2	Bootloader selection .....	57
11.2.3	Bootloader version .....	58
<b>12</b>	<b>STM32F05xxx and STM32F030x8 devices bootloader .....</b>	<b>59</b>
12.1	Bootloader configuration .....	59
12.2	Bootloader selection .....	60

12.3	Bootloader version .....	60
<b>13</b>	<b>STM32F03xxx devices bootloader .....</b>	<b>61</b>
13.1	Bootloader configuration .....	61
13.2	Bootloader selection .....	62
13.3	Bootloader version .....	62
<b>14</b>	<b>STM32F373xx devices bootloader .....</b>	<b>63</b>
14.1	Bootloader configuration .....	63
14.2	Bootloader selection .....	65
14.3	Bootloader version .....	65
<b>15</b>	<b>STM32F302xB(C)/303xB(C) devices bootloader .....</b>	<b>66</b>
15.1	Bootloader configuration .....	66
15.2	Bootloader selection .....	68
15.3	Bootloader version .....	68
<b>16</b>	<b>STM32F378xx devices bootloader .....</b>	<b>69</b>
16.1	Bootloader configuration .....	69
16.2	Bootloader selection .....	70
16.3	Bootloader version .....	70
<b>17</b>	<b>STM32F358xx devices bootloader .....</b>	<b>71</b>
17.1	Bootloader configuration .....	71
17.2	Bootloader selection .....	72
17.3	Bootloader version .....	72
<b>18</b>	<b>STM32F42xxx/43xxx devices bootloader .....</b>	<b>73</b>
18.1	Bootloader V7.x .....	73
18.1.1	Bootloader configuration .....	73
18.1.2	Bootloader selection .....	76
18.1.3	Bootloader version .....	78
18.2	Bootloader V9.x .....	78
18.2.1	Bootloader configuration .....	78
18.2.2	Bootloader selection .....	83
18.2.3	Bootloader version .....	85

---

<b>19</b>	<b>STM32F04xxx devices bootloader</b> .....	<b>86</b>
	19.1 Bootloader configuration .....	86
	19.2 Bootloader selection .....	88
	19.3 Bootloader version .....	88
<b>20</b>	<b>STM32F07xxx devices bootloader</b> .....	<b>89</b>
	20.1 Bootloader configuration .....	89
	20.2 Bootloader selection .....	91
	20.3 Bootloader version .....	91
<b>21</b>	<b>STM32F301xx/302x4(6/8) devices bootloader</b> .....	<b>92</b>
	21.1 Bootloader configuration .....	92
	21.2 Bootloader selection .....	94
	21.3 Bootloader version .....	94
<b>22</b>	<b>STM32F318xx devices bootloader</b> .....	<b>95</b>
	22.1 Bootloader configuration .....	95
	22.2 Bootloader selection .....	96
	22.3 Bootloader version .....	97
<b>23</b>	<b>STM32F303x4(6/8)/334xx/328xx devices bootloader</b> .....	<b>98</b>
	23.1 Bootloader configuration .....	98
	23.2 Bootloader selection .....	99
	23.3 Bootloader version .....	99
<b>24</b>	<b>STM32F401xB(C) devices bootloader</b> .....	<b>100</b>
	24.1 Bootloader configuration .....	100
	24.2 Bootloader selection .....	104
	24.3 Bootloader version .....	105
<b>25</b>	<b>STM32F401xD(E) devices bootloader</b> .....	<b>106</b>
	25.1 Bootloader configuration .....	106
	25.2 Bootloader selection .....	110
	25.3 Bootloader version .....	111

---

<b>26</b>	<b>STM32F411xx devices bootloader</b> .....	<b>112</b>
26.1	Bootloader configuration .....	112
26.2	Bootloader selection .....	116
26.3	Bootloader version .....	117
<b>27</b>	<b>STM32L1xxx6(8/B)A devices bootloader</b> .....	<b>118</b>
27.1	Bootloader configuration .....	118
27.2	Bootloader selection .....	119
27.3	Bootloader version .....	119
<b>28</b>	<b>STM32L1xxxE devices bootloader</b> .....	<b>120</b>
28.1	Bootloader configuration .....	120
28.2	Bootloader selection .....	122
28.3	Bootloader version .....	123
<b>29</b>	<b>STM32L05xxx/06xxx devices bootloader</b> .....	<b>124</b>
29.1	Bootloader configuration .....	124
29.2	Bootloader selection .....	126
29.3	Bootloader version .....	126
<b>30</b>	<b>STM32L476xx/486xx devices bootloader</b> .....	<b>127</b>
30.1	Bootloader configuration .....	127
30.2	Bootloader selection .....	130
30.3	Bootloader version .....	132
<b>31</b>	<b>STM32F446xx devices bootloader</b> .....	<b>133</b>
31.1	Bootloader configuration .....	133
31.2	Bootloader selection .....	137
31.3	Bootloader version .....	138
<b>32</b>	<b>Device-dependent bootloader parameters</b> .....	<b>139</b>
<b>33</b>	<b>Bootloader timing</b> .....	<b>141</b>
33.1	Bootloader Startup timing .....	141
33.2	USART connection timing .....	143

---

33.3	USB connection timing .....	144
33.4	I2C connection timing .....	146
33.5	SPI connection timing .....	147
<b>34</b>	<b>Revision history .....</b>	<b>149</b>

## List of tables

Table 1.	Applicable products	1
Table 2.	Bootloader activation patterns	14
Table 3.	Embedded bootloaders	16
Table 4.	STM32 F2 and F4 Voltage Range configuration using bootloader	22
Table 5.	Supported memory area by Write, Read, Erase and Go Commands	22
Table 6.	STM32F10xxx configuration in System memory boot mode	23
Table 7.	STM32F10xxx bootloader versions	24
Table 8.	STM32F105xx/107xx configuration in System memory boot mode	25
Table 9.	STM32F105xx/107xx bootloader versions	28
Table 10.	STM32F10xxx XL-density configuration in System memory boot mode	31
Table 11.	STM32F10xxx XL-density bootloader versions	32
Table 12.	STM32L1xxx6(8/B) configuration in System memory boot mode	33
Table 13.	STM32L1xxx6(8/B) bootloader versions	34
Table 14.	STM32L1xxxC configuration in System memory boot mode	35
Table 15.	STM32L1xxxC bootloader versions	37
Table 16.	STM32L1xxxD configuration in System memory boot mode	38
Table 17.	STM32L1xxxD bootloader versions	41
Table 18.	STM32F2xxxx configuration in System memory boot mode	42
Table 19.	STM32F2xxxx bootloader V2.x versions	44
Table 20.	STM32F2xxxx configuration in System memory boot mode	45
Table 21.	STM32F2xxxx bootloader V3.x versions	48
Table 22.	STM32F40xxx/41xxx configuration in System memory boot mode	49
Table 23.	STM32F40xxx/41xxx bootloader V3.x versions	52
Table 24.	STM32F40xxx/41xxx configuration in System memory boot mode	53
Table 25.	STM32F40xxx/41xxx bootloader V9.x versions	58
Table 26.	STM32F05xxx and STM32F030x8 devices configuration in System memory boot mode	59
Table 27.	STM32F05xxx and STM32F030x8 devices bootloader versions	60
Table 28.	STM32F03xxx configuration in System memory boot mode	61
Table 29.	STM32F03xxx bootloader versions	62
Table 30.	STM32F373xx configuration in System memory boot mode	63
Table 31.	STM32F373xx bootloader versions	65
Table 32.	STM32F302xB(C)/303xB(C) configuration in System memory boot mode	66
Table 33.	STM32F302xB(C)/303xB(C) bootloader versions	68
Table 34.	STM32F378xx configuration in System memory boot mode	69
Table 35.	STM32F378xx bootloader versions	70
Table 36.	STM32F358xx configuration in System memory boot mode	71
Table 37.	STM32F358xx bootloader versions	72
Table 38.	STM32F42xxx/43xxx configuration in System memory boot mode	73
Table 39.	STM32F42xxx/43xxx bootloader V7.x versions	78
Table 40.	STM32F42xxx/43xxx configuration in System memory boot mode	79
Table 41.	STM32F42xxx/43xxx bootloader V9.x versions	85
Table 42.	STM32F04xxx configuration in System memory boot mode	86
Table 43.	STM32F04xxx bootloader versions	88
Table 44.	STM32F07xxx configuration in System memory boot mode	89
Table 45.	STM32F07xxx bootloader versions	91
Table 46.	STM32F301xx/302x4(6/8) configuration in System memory boot mode	92
Table 47.	STM32F301xx/302x4(6/8) bootloader versions	94
Table 48.	STM32F318xx configuration in System memory boot mode	95



Table 49.	STM32F318xx bootloader versions . . . . .	97
Table 50.	STM32F303x4(6/8)/334xx/328xx configuration in System memory boot mode . . . . .	98
Table 51.	STM32F303x4(6/8)/334xx/328xx bootloader versions . . . . .	99
Table 52.	STM32F401xB(C) configuration in System memory boot mode. . . . .	100
Table 53.	STM32F401xB(C) bootloader versions . . . . .	105
Table 54.	STM32F401xD(E) configuration in System memory boot mode. . . . .	106
Table 55.	STM32F401xD(E) bootloader versions . . . . .	111
Table 56.	STM32F411xx configuration in System memory boot mode . . . . .	112
Table 57.	STM32F411xx bootloader versions . . . . .	117
Table 58.	STM32L1xxx6(8/B)A configuration in System memory boot mode . . . . .	118
Table 59.	STM32L1xxx6(8/B)A bootloader versions . . . . .	119
Table 60.	STM32L1xxxE configuration in System memory boot mode . . . . .	120
Table 61.	STM32L1xxxE bootloader versions . . . . .	123
Table 62.	STM32L05xxx/06xxx configuration in System memory boot mode . . . . .	124
Table 63.	STM32L05xxx/06xxx bootloader versions . . . . .	126
Table 64.	STM32L476xx/486xx configuration in System memory boot mode . . . . .	127
Table 65.	STM32L476xx/486xx bootloader V10.x versions . . . . .	132
Table 66.	STM32F446xx configuration in System memory boot mode . . . . .	133
Table 67.	STM32F446xx bootloader V9.x versions . . . . .	138
Table 68.	Bootloader device-dependent parameters . . . . .	139
Table 69.	Bootloader startup timings of STM32 devices . . . . .	141
Table 70.	USART bootloader minimum timings of STM32 devices . . . . .	143
Table 71.	USB bootloader minimum timings of STM32 devices. . . . .	145
Table 72.	I2C bootloader minimum timings of STM32 devices. . . . .	147
Table 73.	SPI bootloader minimum timings of STM32 devices . . . . .	148
Table 74.	Document revision history . . . . .	149

## List of figures

Figure 1.	USART Connection .....	19
Figure 2.	USB Connection .....	19
Figure 3.	I2C Connection .....	20
Figure 4.	SPI Connection .....	20
Figure 5.	CAN Connection .....	21
Figure 6.	Bootloader for STM32F10xxx with USART1 .....	24
Figure 7.	Bootloader selection for STM32F105xx/107xx devices .....	27
Figure 8.	Bootloader selection for STM32F10xxx XL-density devices .....	32
Figure 9.	Bootloader selection for STM32L1xxx6(8/B) devices .....	34
Figure 10.	Bootloader selection for STM32L1xxxC devices .....	37
Figure 11.	Bootloader selection for STM32L1xxxD devices .....	40
Figure 12.	Bootloader V2.x selection for STM32F2xxxx devices .....	43
Figure 13.	Bootloader V3.x selection for STM32F2xxxx devices .....	47
Figure 14.	Bootloader V3.x selection for STM32F40xxx/41xxx devices .....	51
Figure 15.	Bootloader V9.x selection for STM32F40xxx/41xxx .....	57
Figure 16.	Bootloader selection for STM32F05xxx and STM32F030x8 devices .....	60
Figure 17.	Bootloader selection for STM32F03xxx devices .....	62
Figure 18.	Bootloader selection for STM32F373xx devices .....	65
Figure 19.	Bootloader selection for STM32F302xB(C)/303xB(C) devices .....	68
Figure 20.	Bootloader selection for STM32F378xx devices .....	70
Figure 21.	Bootloader selection for STM32F358xx devices .....	72
Figure 22.	Dual Bank Boot Implementation for STM32F42xxx/43xxx Bootloader V7.x .....	76
Figure 23.	Bootloader V7.x selection for STM32F42xxx/43xxx .....	77
Figure 24.	Dual Bank Boot Implementation for STM32F42xxx/43xxx Bootloader V9.x .....	83
Figure 25.	Bootloader V9.x selection for STM32F42xxx/43xxx .....	84
Figure 26.	Bootloader selection for STM32F04xxx .....	88
Figure 27.	Bootloader selection for STM32F07xxx .....	91
Figure 28.	Bootloader selection for STM32F301xx/302x4(6/8) .....	94
Figure 29.	Bootloader selection for STM32F318xx .....	96
Figure 30.	Bootloader selection for STM32F303x4(6/8)/334xx/328xx .....	99
Figure 31.	Bootloader selection for STM32F401xB(C) .....	104
Figure 32.	Bootloader selection for STM32F401xD(E) .....	110
Figure 33.	Bootloader selection for STM32F411xx .....	116
Figure 34.	Bootloader selection for STM32L1xxx6(8/B)A devices .....	119
Figure 35.	Bootloader selection for STM32L1xxxE devices .....	122
Figure 36.	Bootloader selection for STM32L05xxx/06xxx .....	126
Figure 37.	Dual Bank Boot Implementation for STM32L476xx/486xx Bootloader v10.x .....	130
Figure 38.	Bootloader V10.x selection for STM32L476xx/486xx .....	131
Figure 39.	Bootloader V9.x selection for STM32F446xx .....	137
Figure 40.	Bootloader Startup timing description .....	141
Figure 41.	USART connection timing description .....	143
Figure 42.	USB connection timing description .....	145
Figure 43.	I2C connection timing description .....	146
Figure 44.	SPI connection timing description .....	147

# 1 Related documents

For each supported product (listed in [Table 1](#)), please refer to the following documents available from [www.st.com](http://www.st.com):

- Datasheet or databrief
- Reference manual

# 2 Glossary

## F0 Series:

**STM32F05xxx and STM32F030x8 devices** is used to refer to STM32F051x4, STM32F051x6, STM32F051x8, STM32F058x8 and STM32F030x8 devices.

**STM32F03xxx** is used to refer to STM32F031x4, STM32F031x6, STM32F030F4, STM32F038x6 and STM32F030x6 devices.

**STM32F04xxx** is used to refer to STM32F042x4 and STM32F042x6 devices.

**STM32F07xxx** is used to refer to STM32F072x8 and STM32F072xB and STM32F071xB devices.

## F1 Series:

**STM32F10xxx** is used to refer to Low-density, Medium-density, High-density, Low-density value line, Medium-density value line and High-density value line devices:

**Low-density devices** are STM32F101xx, STM32F102xx and STM32F103xx microcontrollers where the Flash memory density ranges between 16 and 32 Kbytes.

**Medium-density devices** are STM32F101xx, STM32F102xx and STM32F103xx microcontrollers where the Flash memory density ranges between 64 and 128 Kbytes.

**High-density devices** are STM32F101xx and STM32F103xx microcontrollers where the Flash memory density ranges between 256 and 512 Kbytes.

**Low-density value line devices** are STM32F100xx microcontrollers where the Flash memory density ranges between 16 and 32 Kbytes.

**Medium-density value line devices** are STM32F100xx microcontrollers where the Flash memory density ranges between 64 and 128 Kbytes.

**High-density value line devices** are STM32F100xx microcontrollers where the Flash memory density ranges between 256 and 512 Kbytes.

**STM32F105xx/107xx** is used to refer to STM32F105xx and STM32F107xx devices.

**STM32F10xxx XL-density** is used to refer to STM32F101xx and STM32F103xx devices where the Flash memory density ranges between 768 Kbytes and 1 Mbyte.

## F2 Series:

**STM32F2xxxx** is used to refer to STM32F215xx, STM32F205xx, STM32F207xx and STM32F217xx devices.

**F3 Series:**

**STM32F373xx** is used to refer to STM32F373x8, STM32F373xB and STM32F373xC devices.

**STM32F302xB(C)/303xB(C)** is used to refer to STM32F302xB, STM32F302xC, STM32F303xB and STM32F303xC devices.

**STM32F378xx** is used to refer to STM32F378xC devices.

**STM32F358xx** is used to refer to STM32F358xC devices.

**STM32F301xx/302x4(6/8)** is used to refer to STM32F301x4, STM32F301x6, STM32F301x8, STM32F302x4, STM32F302x6 and STM32F302x8 devices.

**STM32F318xx** is used to refer to STM32F318xC devices.

**STM32F303x4(6/8)/334xx/328xx** is used to refer to STM32F303x4, STM32F303x6, STM32F303x8, STM32F334x4, STM32F334x6, STM32F334x8, and STM32F328x8 devices.

**F4 Series:**

**STM32F40xxx/41xxx** is used to refer to STM32F405xx, STM32F407xx, STM32F415xx and SMT32F417xx devices.

**STM32F401xB(C)** is used to refer to STM32F401xB and STM32F401xC devices.

**STM32F401xD(E)** is used to refer to STM32F401xD and STM32F401xE devices.

**STM32F411xx** is used to refer to STM32F411xD and STM32F411xE devices.

**STM32F42xxx/43xxx** is used to refer to STM32F427xx, STM32F429xx, STM32F437xx and STM32F439xx devices

**STM32F446xx** is used to refer to STM32F446xE and STM32F446xC devices

**L0 Series:**

**STM32L05xxx/06xxx** is used to refer to STM32L051xx, STM32L052xx, STM32L053xx, STM32L062xx and STM32L063xx ultralow power devices.

**L1 Series:**

**STM32L1xxx6(8/B)** is used to refer to STM32L1xxV6T6, STM32L1xxV6H6, STM32L1xxR6T6, STM32L1xxR6H6, STM32L1xxC6T6, STM32L1xxC6H6, STM32L1xxV8T6, STM32L1xxV8H6, STM32L1xxR8T6, STM32L1xxR8H6, STM32L1xxC8T6, STM32L1xxC8H6, STM32L1xxVBT6, STM32L1xxVBH6, STM32L1xxRBT6, STM32L1xxRBH6, STM32L1xxCBT6 and STM32L1xxCBH6 ultralow power devices.

**STM32L1xxx6(8/B)A** is used to refer to STM32L1xxV6T6-A, STM32L1xxV6H6-A, STM32L1xxR6T6-A, STM32L1xxR6H6-A, STM32L1xxC6T6-A, STM32L1xxC6H6-A, STM32L1xxV8T6-A, STM32L1xxV8H6-A, STM32L1xxR8T6-A, STM32L1xxR8H6-A, STM32L1xxC8T6-A, STM32L1xxC8H6-A, STM32L1xxVBT6-A, STM32L1xxVBH6-A, STM32L1xxRBT6-A, STM32L1xxRBH6-A, STM32L1xxCBT6-A and STM32L1xxCBH6-A ultralow power devices.

**STM32L1xxxC** is used to refer to STM32L1xxVCT6, STM32L1xxVCH6, STM32L1xxRCT6, STM32L1xxUCY6, STM32L1xxCCT6 and STM32L1xxCCU6 ultralow power devices.

**STM32L1xxxD** is used to refer to STM32L1xxZDT6, STM32L1xxQDH6, STM32L1xxVDT6, STM32L1xxRDY6, STM32L1xxRDT6, STM32L1xxZCT6,

STM32L1xxQCH6, STM32L1xxRCY6, STM32L1xxVCT6-A and STM32L1xxRCT6-A ultralow power devices.

**STM32L1xxxE** is used to refer to STM32L1xxZET6, STM32L1xxQEH6, STM32L1xxVET6, STM32L1xxVEY6, and STM32L1xxRET6 ultralow power devices.

**L4 Series:**

**STM32L476xx/486xx** is used to refer to STM32L476xE, STM32L476xG and STM32L486xG devices

*Note:* *BL\_USART\_Loop* refers to the *USART Bootloader execution loop*.  
*BL\_CAN\_Loop* refers to the *CAN Bootloader execution loop*.  
*BL\_I2C\_Loop* refers to the *I2C Bootloader execution loop*.  
*BL\_SPI\_Loop* refers to the *SPI Bootloader execution loop*.

### 3 General bootloader description

#### 3.1 Bootloader activation

The bootloader is activated by applying one of these patterns:

**Table 2. Bootloader activation patterns**

Patterns	Condition
Pattern1	Boot0(Pin) = 1 and Boot1(Pin) = 0
Pattern2	Boot0(Pin) = 1 and nBoot1(bit) = 1
Pattern3	Boot0 (Pin)= 1, Boot1(Pin) = 0 and BFB2 (bit) = 1
	Boot0(Pin) = 0, BFB2 (bit) = 0 and both banks don't contain valid code
	Boot0(Pin) = 1, Boot1(Pin) = 0, BFB2 (bit) = 0 and both banks don't contain valid code
Pattern4	Boot0 (Pin)= 1, Boot1(Pin) = 0 and BFB2 (bit) = 1
	Boot0(Pin) = 0, BFB2 (bit) = 0 and both banks don't contain valid code
	Boot0(Pin) = 1, Boot1(Pin) = 0 and BFB2 (bit) = 0
Pattern5	Boot0 (Pin)= 1, Boot1(Pin) = 0 and BFB2 (bit) = 0
	Boot0(Pin) = 0, BFB2 (bit) = 1 and both banks don't contain valid code
	Boot0(Pin) = 1, Boot1(Pin) = 0 and BFB2 (bit) = 1
Pattern6	Boot0(Pin) = 1, nBoot1(bit) = 1 and nBoot0_SW(bit) = 1
	nBoot0(bit) = 0, nBoot1(bit) = 1 and nBoot0_SW(bit) = 0
	Boot0(Pin) = 0, nBoot0_SW(bit) = 1 and main flash empty

*Note: The bootloader activation procedure is not the same for all STM32 products. In each STM32 product bootloader section we specify which pattern is used to execute bootloader.*

In addition to patterns described above, user might execute Bootloader by performing a jump to system memory from user code (refer to table 64 for system memory address). Before jumping to Bootloader user must:

- Disable all peripheral clocks
- Disable used PLL
- Disable interrupts
- Clear pending interrupts

System memory boot mode can be exited by getting out from bootloader activation condition and generating hardware reset or using Go command to execute user code.

*Note: For some products with dual bank mechanism, the jump to Bootloader might result in jumping again to user code (and thus Bootloader communication protocol is not executed). Please refer to product's "Dual Bank Boot Implementation" flowchart for more details. i.e. In order to jump and execute Bootloader communication protocol, you might configure SYSCFG register by software to map System Memory on address 0x00000000 prior to jumping, when this feature is available.*



*Note: If you choose to execute the Go command, the peripheral registers used by the bootloader are not initialized to their default reset values before jumping to the user application. They should be reconfigured in the user application if they are used. So, if the IWDG is being used in the application, the IWDG prescaler value has to be adapted to meet the requirements of the application (since the prescaler was set to its maximum value).*

## 3.2 Bootloader identification

Depending on the STM32 device used, the bootloader may support one or more embedded serial peripherals used to download the code to the internal Flash memory. The bootloader identifier (ID) provides information about the supported serial peripherals.

For a given STM32 device, the bootloader is identified by means of the:

1. **Bootloader (protocol) version:** version of the serial peripheral (USART, CAN, USB, etc.) communication protocol used in the bootloader. This version can be retrieved using the bootloader Get Version command.
2. **Bootloader identifier (ID):** version of the STM32 device bootloader, coded on one byte in the **0xXY** format, where:
  - **X** specifies the embedded serial peripheral(s) used by the device bootloader:
    - X = 1: one USART is used
    - X = 2: two USARTs are used
    - X = 3: USART, CAN and DFU are used
    - X = 4: USART and DFU are used
    - X = 5: USART and I<sup>2</sup>C are used
    - X = 6: I<sup>2</sup>C is used
    - X = 7: USART, CAN, DFU and I<sup>2</sup>C are used
    - X = 8: I<sup>2</sup>C and SPI are used
    - X = 9: USART, CAN, DFU, I<sup>2</sup>C and SPI are used
    - X = 10: USART, DFU and I<sup>2</sup>C are used
    - X = 11: USART, I<sup>2</sup>C and SPI are used
    - X = 12: USART and SPI are used
    - X = 13: USART, DFU, I<sup>2</sup>C and SPI are used
  - **Y** specifies the device bootloader version  
 Let us take the example of a bootloader ID equal to 0x10. This means that it is the first version of the device bootloader that uses only one USART.  
 The bootloader ID is programmed in the last byte address - 1 of the device system memory and can be read by using the bootloader "Read memory" command or by direct access to the system memory via JTAG/SWD.

The table below provides identification information about the bootloaders embedded in STM32 devices.

Table 3. Embedded bootloaders

STM32 series	Device		Supported serial peripherals	Bootloader ID		Bootloader (protocol) version
				ID	Memory location	
F0	STM32F05xxx and STM32F030x8 devices		USART1/USART2	0x21	0x1FFFF7A6	USART (V3.1)
	STM32F03xxx		USART1	0x10	0x1FFFF7A6	USART (V3.1)
	STM32F04xxx		USART1/USART2/ I2C1/ DFU (USB Device FS)	0xA0	0x1FFFF6A6	USART (V3.1) DFU (V2.2) I2C (V1.0)
	STM32F07xxx		USART1/USART2/ I2C1/ DFU (USB Device FS)	0xA1	0x1FFFF6A6	USART (V3.1) DFU (V2.2) I2C (V1.0)
F1	STM32F10xxx	Low-density	USART1	NA	NA	USART (V2.2)
		Medium-density	USART1	NA	NA	USART (V2.2)
		High-density	USART1	NA	NA	USART (V2.2)
		Medium-density value line	USART1	0x10	0x1FFFF7D6	USART (V2.2)
		High-density value line	USART1	0x10	0x1FFFF7D6	USART (V2.2)
	STM32F105xx/107xx		USART1 / USART2 (remapped) / CAN2 (remapped) / DFU (USB Device)	NA	NA	USART (V2.2 <sup>(1)</sup> ) CAN (V2.0) DFU(V2.2)
STM32F10xxx XL-density		USART1/USART2 (remapped)	0x21	0x1FFFF7D6	USART (V3.0)	
F2	STM32F2xxxx		USART1/USART3	0x20	0x1FFF77DE	USART (V3.0)
			USART1/USART3/ CAN2/ DFU (USB Device FS)	0x33	0x1FFF77DE	USART (V3.1) CAN (V2.0) DFU (V2.2)
F3	STM32F373xx		USART1/USART2/ DFU (USB Device FS)	0x41	0x1FFFF7A6	USART (V3.1) DFU (V2.2)
	STM32F378xx		USART1/USART2/ I2C1	0x50	0x1FFFF7A6	USART (V3.1) I2C (V1.0)
	STM32F302xB(C)/303xB(C)		USART1/USART2/ DFU (USB Device FS)	0x41	0x1FFFF796	USART (V3.1) DFU (V2.2)
	STM32F358xx		USART1/USART2/ I2C1	0x50	0x1FFFF796	USART (V3.1) I2C (V1.0)
	STM32F301xx/302x4(6/8)		USART1/USART2/ DFU (USB Device FS)	0x40	0x1FFFF796	USART (V3.1) DFU (V2.2)
	STM32F318xx		USART1/USART2/ I2C1/ I2C3	0x50	0x1FFFF796	USART (V3.1) I2C (V1.0)
	STM32F303x4(6/8)/334xx/328xx		USART1/USART2/ I2C1	0x50	0x1FFFF796	USART (V3.1) I2C (V1.0)



Table 3. Embedded bootloaders (continued)

STM32 series	Device	Supported serial peripherals	Bootloader ID		Bootloader (protocol) version
			ID	Memory location	
F4	STM32F40xxx/41xxx	USART1/USART3/ CAN2/ DFU (USB Device FS)	0x31	0x1FFF77DE	USART (V3.1) CAN (V2.0) DFU (V2.2)
		USART1/USART3/ CAN2 / DFU (USB Device FS) /I2C1/I2C2/I2C3/SPI1/ SPI2	0x90	0x1FFF77DE	USART (V3.1) CAN (V2.0) DFU (V2.2) SPI(V1.1) I2C (V1.0)
	STM32F42xxx/43xxx	USART1/USART3/ CAN2 /DFU (USB Device FS) / I2C1/I2C2/I2C3	0x70	0x1FFF76DE	USART (V3.1) CAN (V2.0) DFU (V2.2) I2C (V1.0)
		USART1/USART3/ CAN2 / DFU (USB Device FS) / I2C1/I2C2/I2C3/SPI1/ SPI2/ SPI4	0x90	0x1FFF76DE	USART (V3.1) CAN (V2.0) DFU (V2.2) SPI(V1.1) I2C (V1.0)
	STM32F401xB(C)	USART1/USART2/ DFU (USB Device FS)/ I2C1/I2C2/I2C3/ SPI1/SPI2/ SPI3	0xD1	0x1FFF76DE	USART (V3.1) DFU (V2.2) SPI(V1.1) I2C (V1.0)
	STM32F401xD(E)	USART1/USART2/ DFU (USB Device FS)/ I2C1/I2C2/I2C3/ SPI1/SPI2/ SPI3	0xD1	0x1FFF76DE	USART (V3.1) DFU (V2.2) SPI(V1.1) I2C (V1.1)
	STM32F411xx	USART1/USART2/ DFU (USB Device FS)/ I2C1/I2C2/I2C3/ SPI1/SPI2/ SPI3	0xD0	0x1FFF76DE	USART (V3.1) DFU (V2.2) SPI(V1.1) I2C (V1.1)
	STM32F446xx	USART1/USART3/ CAN2 / DFU (USB Device FS) / I2C1/I2C2/I2C3/SPI1/ SPI2/ SPI4	0x90	0x1FFF76DE	USART (V3.1) CAN (V2.0) DFU (V2.2) SPI(V1.1) I2C (V1.2)
L0	STM32L05xxx/06xxx	USART1/USART2/SPI 1/ SPI2	0xC0	0x1FF00FFE	USART (V3.1) SPI (V1.1)

**Table 3. Embedded bootloaders (continued)**


STM32 series	Device	Supported serial peripherals	Bootloader ID		Bootloader (protocol) version
			ID	Memory location	
L1	STM32L1xxx6(8/B)	USART1/USART2	0x20	0x1FF00FFE	USART (V3.0)
	STM32L1xxx6(8/B)A	USART1/USART2	0x20	0x1FF00FFE	USART (V3.1)
	STM32L1xxxC	USART1/USART2/ DFU (USB Device FS)	0x40	0x1FF01FFE	USART (V3.1) DFU (V2.2)
	STM32L1xxxD	USART1/USART2/ DFU (USB Device FS)	0x45	0x1FF01FFE	USART (V3.1) DFU (V2.2)
	STM32L1xxxE	USART1/USART2/ DFU (USB Device FS)	0x40	0x1FF01FFE	USART (V3.1) DFU (V2.2)
L4	STM32L476xx/486xx	USART1/USART2/ USART3/ I2C1/ I2C2/ I2C3/ DFU (USB Device FS)	0xA3	0x1FFF6FFE	USART (V3.1) DFU (V2.2) I2C (V1.2)

1. For connectivity line devices, the USART bootloader returns V2.0 instead of V2.2 for the protocol version. For more details please refer to the "STM32F105xx and STM32F107xx revision Z" errata sheet available from <http://www.st.com>.

### 3.3 Hardware connection requirements

To use the USART bootloader, the host has to be connected to the (RX) and (TX) pins of the desired USARTx interface via a serial cable.

Figure 1. USART Connection

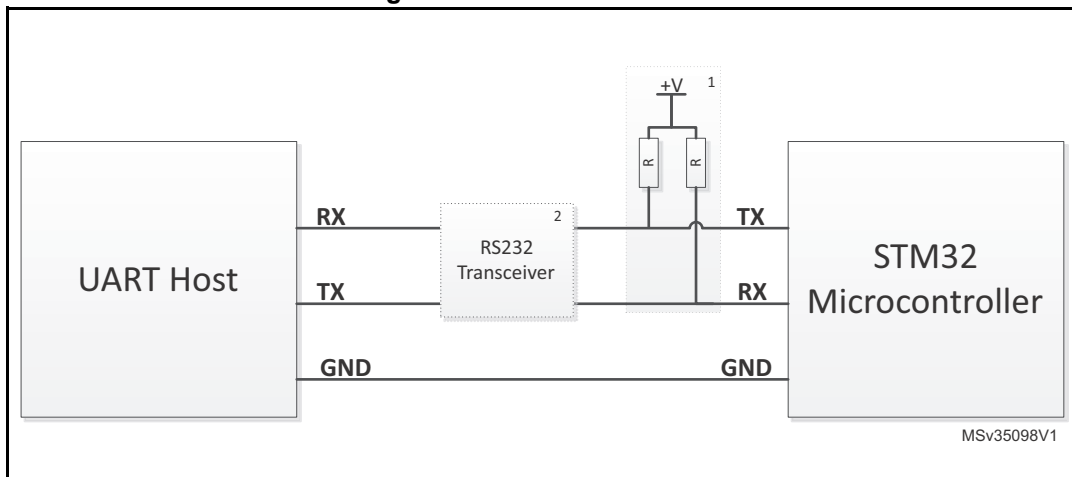


1. A Pull-UP resistor should be added, if pull-up resistor are not connected in host side.
2. An RS232 transceiver must be connected to adapt voltage level (3.3V - 12V) between STM32 device and host.

*Note:* +V typically 3.3 V and R value typically 100KOhm. This value depend on the application and the used hardware.

To use the DFU, connect the microcontroller's USB interface to a USB host (i.e. PC).

Figure 2. USB Connection

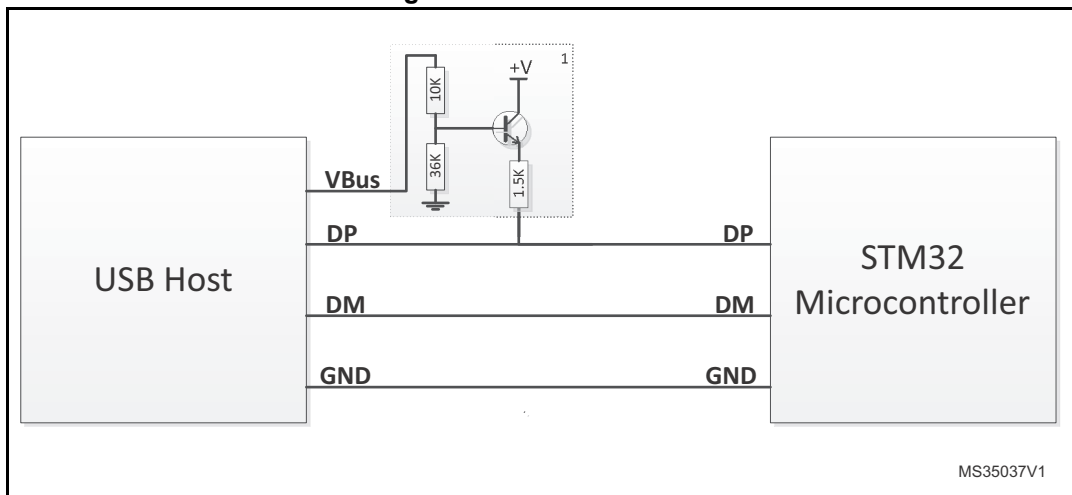


1. This additional circuit permits to connect a Pull-Up resistor to (DP) pin using VBus when needed. Refer to product section (Table which describes STM32 Configuration in system memory boot mode) to know if an external pull-up resistor must be connected to (DP) pin.

*Note:* +V typically 3.3 V. This value depends on the application and the used hardware.

To use the I2C bootloader, connect the host (master) and the desired I2Cx interface (slave) together via the data (SDA) and clock (SCL) pins. A 1.8 KOhm pull-up resistor has to be connected to both (SDA) and (SCL) lines.


Figure 3. I2C Connection

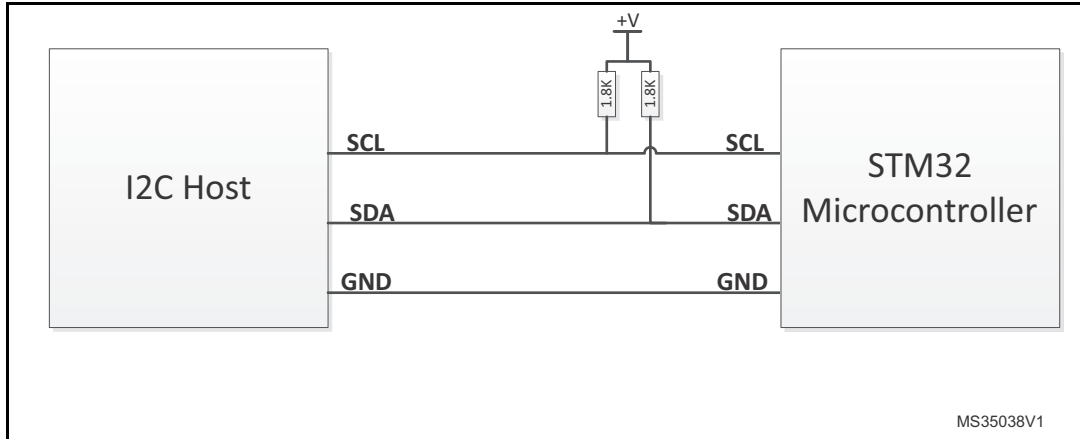

Note: +V typically 3.3 V. This value depends on the application and the used hardware.

To use the SPI bootloader, connect the host (master) and the desired SPIx interface (slave) together via the (MOSI), (MISO) and (SCK) pins. The (NSS) pin must be connected to (GND). A pull-down resistor should be connected to the (SCK) line.

Figure 4. SPI Connection

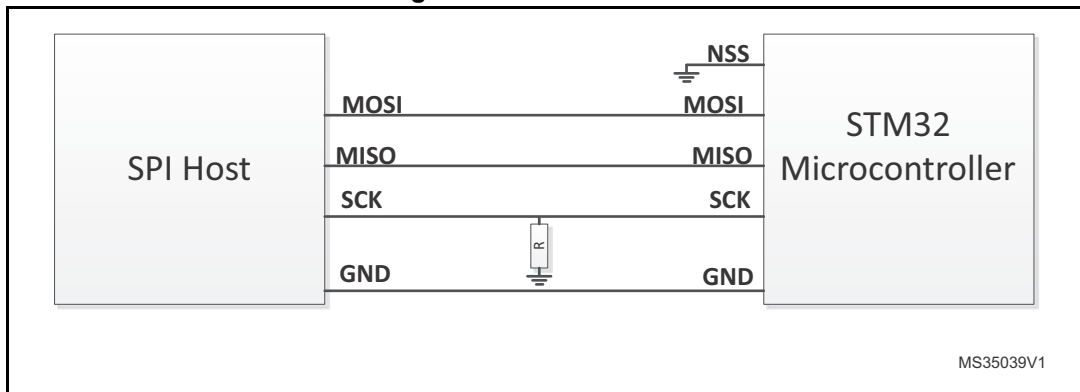

Note: R value typically 10KOhm. This value depends on the application and the used hardware.

To use the CAN interface, the host has to be connected to the (RX) and (TX) pins of the desired CANx interface via CAN transceiver and a serial cable. A 120 Ohm resistor should be added as terminating resistor.



location, make sure that the relative protection bit (in the last 16 bytes of the OTP memory) is not reset.

- For STM32 F2 and F4 series the internal flash write operation format depends on the voltage range. By default write operation are allowed by one byte format (Half-Word, Word and Double-Word operations are not allowed). To increase the speed of write operation, the user should apply the adequate voltage range that allows write operation by Half-Word, Word or Double-Word and update this configuration on the fly by the bootloader software through a virtual memory location. This memory location is not physical but can be read and written using usual bootloader read/write operations according to the protocol in use. This memory location contains 4 bytes which are described in table below. It can be accessed by 1, 2, 3 or 4 bytes. However, reserved bytes should remain at their default values (0xFF), otherwise the request will be NACKed.

**Table 4. STM32 F2 and F4 Voltage Range configuration using bootloader**

Address	Size	Description
0xFFFF0000	1 byte	This byte controls the current value of the voltage range. 0x00: voltage range [1.8 V, 2.1 V] 0x01: voltage range [2.1 V, 2.4 V] 0x02: voltage range [2.4 V, 2.7 V] 0x03: voltage range [2.7 V, 3.6 V] 0x04: voltage range [2.7 V, 3.6 V] and double word write/erase operation is used. In this case it is mandatory to supply 9 V through the VPP pin (refer to the product reference manual for more details about the double-word write procedure). Other: all other values are not supported and will be NACKed.
0xFFFF0001	1 byte	Reserved. 0xFF: default value. Other: all other values are not supported and will be NACKed.
0xFFFF0002	1 byte	Reserved. 0xFF: default value. Other: all other values are not supported and will be NACKed.
0xFFFF0003	1 byte	Reserved. 0xFF: default value. Other: all other values are not supported and will be NACKed.

The table below lists the valid memory area depending on the Bootloader commands.

**Table 5. Supported memory area by Write, Read, Erase and Go Commands**

Memory Area	Write command	Read command	Erase command	Go command
Flash	Supported	Supported	Supported	Supported
RAM	Supported	Supported	Not Supported	Supported
System Memory	Not Supported	Supported	Not Supported	Not Supported
Data Memory	Supported	Supported	Not Supported	Not Supported
OTP Memory	Supported	Supported	Not Supported	Not Supported

## 4 STM32F10xxx devices bootloader

### 4.1 Bootloader configuration

The STM32F10xxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 6. STM32F10xxx configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL.
	RAM	-	512 bytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	2 Kbytes starting from address 0x1FFF0000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output push-pull	PA9 pin: USART1 in transmission mode
	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 4.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 6. Bootloader for STM32F10xxx with USART1**

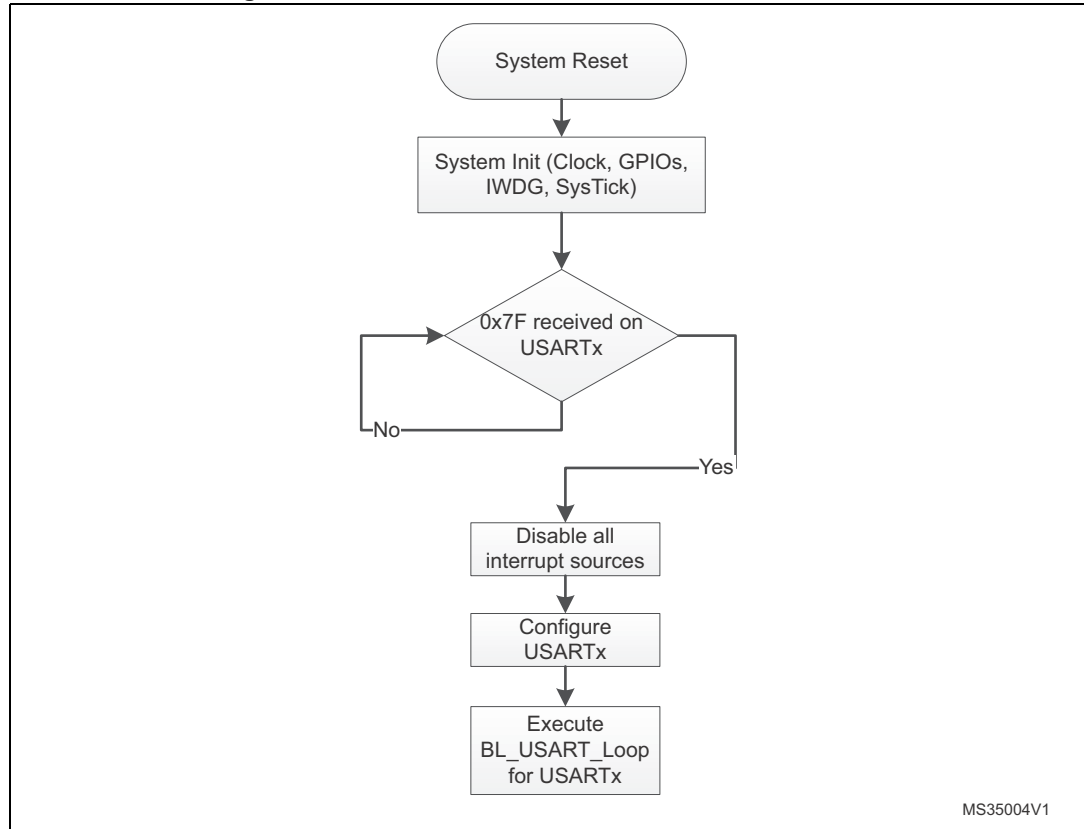

## 4.3 Bootloader version

The following table lists the STM32F10xxx devices bootloader versions:

**Table 7. STM32F10xxx bootloader versions**

Bootloader version number	Description
V2.0	Initial bootloader version
V2.1	<ul style="list-style-type: none"> <li>– Updated Go Command to initialize the main stack pointer</li> <li>– Updated Go command to return NACK when jump address is in the Option byte area or System memory area</li> <li>– Updated Get ID command to return the device ID on two bytes</li> <li>– Update the bootloader version to V2.1</li> </ul>
V2.2	<ul style="list-style-type: none"> <li>– Updated Read Memory, Write Memory and Go commands to deny access with a NACK response to the first 0x200 bytes of RAM memory used by the bootloader</li> <li>– Updated Readout Unprotect command to initialize the whole RAM content to 0x0 before ROP disable operation</li> </ul>



## 5 STM32F105xx/107xx devices bootloader

### 5.1 Bootloader configuration

The STM32F105xx/107xx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 8. STM32F105xx/107xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL. This is used only for USART1 and USART2 bootloaders and during CAN2, USB detection for CAN and DFU bootloaders (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The external clock is mandatory only for DFU and CAN bootloaders and it must provide one of the following frequencies: 8 MHz, 14.7456 MHz or 25 MHz. For CAN bootloader, the PLL is used only to generate 48 MHz when 14.7456 MHz is used as HSE. For DFU bootloader, the PLL is used to generate a 48 MHz system clock from all supported external clock frequencies.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock will generate system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	System memory	-	18 Kbytes starting from address 0x1FFF B000 contain the bootloader firmware.
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output push-pull	PA9 pin: USART1 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.

**Table 8. STM32F105xx/107xx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 receive (remapped pin)
	USART2_TX pin	Output push-pull	PD5 pin: USART2 transmit (remapped pin)
CAN2 bootloader	CAN2	Enabled	Once initialized, the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during the CAN bootloader execution because CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 receives (remapped pin).
	CAN2_TX pin	Output push-pull	PB6 pin: CAN2 transmits (remapped pin).
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_VBUS pin	Input	PA9: Power supply voltage line
	USB_DM pin	Input/Output	PA11 pin: USB_DM line
	USB_DP pin		PA12 pin: USB_DP line. No external Pull-up resistor is required

The system clock is derived from the embedded internal high-speed RC for USARTx bootloader. This internal clock is used also for DFU and CAN bootloaders but only for the selection phase. An external clock (8 MHz, 14.7456 MHz or 25 MHz.) is required for DFU and CAN bootloader execution after the selection phase.

## 5.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 7. Bootloader selection for STM32F105xx/107xx devices**

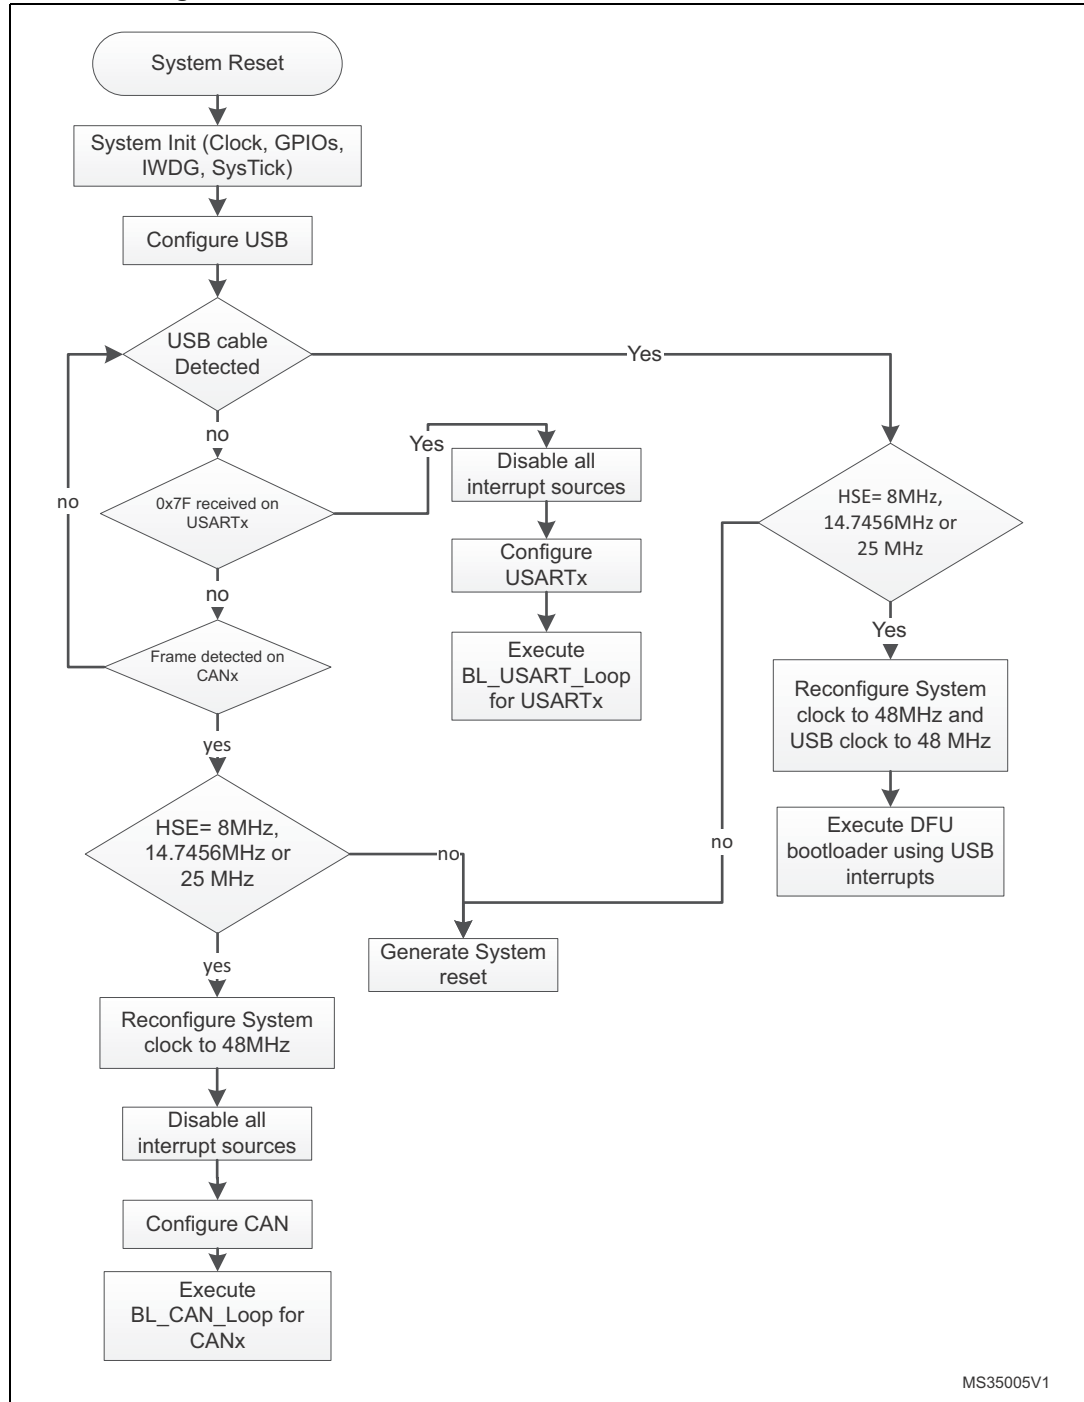

### 5.3 Bootloader version

The following table lists the STM32F105xx/107xx devices bootloader versions:

**Table 9. STM32F105xx/107xx bootloader versions**

Bootloader version number	Description
V1.0	Initial bootloader version
V2.0	<ul style="list-style-type: none"> <li>– Bootloader detection mechanism updated to fix the issue when GPIOs of unused peripherals in this bootloader are connected to low level or left floating during the detection phase. For more details please refer to <a href="#">Section 5.3.2</a>.</li> <li>– Vector table set to 0x1FFF B000 instead of 0x0000 0000</li> <li>– Go command updated (for all bootloaders): USART1, USART2, CAN2, GPIOA, GPIOB, GPIOD and SysTick peripheral registers are set to their default reset values</li> <li>– DFU bootloader: USB pending interrupt cleared before executing the Leave DFU command</li> <li>– DFU subprotocol version changed from V1.0 to V1.2</li> <li>– Bootloader version updated to V2.0</li> </ul>
V2.1	<ul style="list-style-type: none"> <li>– Fixed PA9 excessive consumption described in <a href="#">Section 5.3.4</a>.</li> <li>– Get-Version command (defined in AN3155) corrected. It returns 0x22 instead of 0x20 in bootloader V2.0. Refer to <a href="#">Section 5.3.3</a> for more details.</li> <li>– Bootloader version updated to V2.1</li> </ul>
V2.2	<ul style="list-style-type: none"> <li>– Fixed DFU option bytes descriptor (set to 'e' instead of 'g' because it is read/write and not erasable).</li> <li>– Fixed DFU polling timings for Flash Read/Write/Erase operations.</li> <li>– Robustness enhancements for DFU bootloader interface.</li> <li>– Updated bootloader version to V2.2.</li> </ul>

#### 5.3.1 How to identify STM32F105xx/107xx bootloader versions

Bootloader V1.0 is implemented on devices which date code is below 937 (refer to STM32F105xx and STM32F107xx datasheet for where to find the date code on the device marking). Bootloader V2.0 and V2.1 are implemented on devices with a date code higher or equal to 937.

There are two ways to distinguish between bootloader versions:

- When using the USART bootloader, the Get-Version command defined in AN2606 and AN3155 has been corrected in V2.1 version. It returns 0x22 instead of 0x20 as in bootloader V2.0.

- The values of the vector table at the beginning of the bootloader code are different. The user software (or via JTAG/SWD) reads 0x1FFFE945 at address 0x1FFFB004 for bootloader V2.0 0x1FFFE9A1 for bootloader V2.1, and 0x1FFFE9C1 for bootloader V2.2.
- The DFU version is the following:
  - V2.1 in bootloader V2.1
  - V2.2 in bootloader V2.2.It can be read through the `bcdDevice` field of the DFU Device Descriptor.

### 5.3.2 Bootloader unavailability on STM32F105xx/STM32F107xx devices with a date code below 937

#### Description

The bootloader cannot be used if the USART1\_RX (PA10), USART2\_RX (PD6, remapped), CAN2\_Rx (PB5, remapped), OTG\_FS\_DM (PA11), and/or OTG\_FS\_DP (PA12) pin(s) are held low or left floating during the bootloader activation phase.

The bootloader cannot be connected through CAN2 (remapped), DFU (OTG FS in Device mode), USART1 or USART2 (remapped).

On 64-pin packages, the USART2\_RX signal remapped PD6 pin is not available and it is internally grounded. In this case, the bootloader cannot be used at all.

#### Workaround

- For 64-pin packages  
None. The bootloader cannot be used.
- For 100-pin packages  
Depending on the used peripheral, the pins for the unused peripherals have to be kept at a high level during the bootloader activation phase as described below:
  - If USART1 is used to connect to the bootloader, PD6 and PB5 have to be kept at a high level.
  - If USART2 is used to connect to the bootloader, PA10, PB5, PA11 and PA12 have to be kept at a high level.
  - If CAN2 is used to connect to the bootloader, PA10, PD6, PA11 and PA12 have to be kept at a high level.
  - If DFU is used to connect to the bootloader, PA10, PB5 and PD6 have to be kept at a high level.

*Note:* This limitation applies only to STM32F105xx and STM32F107xx devices with a date code below 937. STM32F105xx and STM32F107xx devices with a date code higher or equal to 937 are not impacted. See STM32F105xx and STM32F107xx datasheets for where to find the date code on the device marking.

### 5.3.3 USART bootloader Get-Version command returns 0x20 instead of 0x22

#### Description

In USART mode, the Get-Version command (defined in AN3155) returns 0x20 instead of 0x22.

This limitation is present on bootloader versions V1.0 and V2.0, while it is fixed in bootloader version 2.1.

#### Workaround

None.

### 5.3.4 PA9 excessive power consumption when USB cable is plugged in bootloader V2.0

#### Description

When connecting a USB cable after booting from System-Memory mode, PA9 pin (connected to  $V_{BUS}=5\text{ V}$ ) is also shared with USART TX pin which is configured as alternate push-pull and forced to 0 since the USART peripheral is not yet clocked. As a consequence, a current higher than 25 mA is drained by PA9 I/O and may affect the I/O pad reliability.

This limitation is fixed in bootloader version 2.1 by configuring PA9 as alternate function push-pull when a correct 0x7F is received on RX pin and the USART is clocked. Otherwise, PA9 is configured as alternate input floating.

#### Workaround

None.

## 6 STM32F10xxx XL-density devices bootloader

### 6.1 Bootloader configuration

The STM32F10xxx XL-density bootloader is activated by applying pattern3 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader:

**Table 10. STM32F10xxx XL-density configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL.
	RAM	-	2 Kbytes starting from address 0x2000 0000 are used by the bootloader firmware.
	System memory	-	6 Kbytes starting from address 0x1FFF E000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output push-pull	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit.
	USART2_RX pin	Input	PD6 pin: USART2 receives (remapped pins).
	USART2_TX pin	Output push-pull	PD5 pin: USART2 transmits (remapped pins).
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 6.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 8. Bootloader selection for STM32F10xxx XL-density devices**

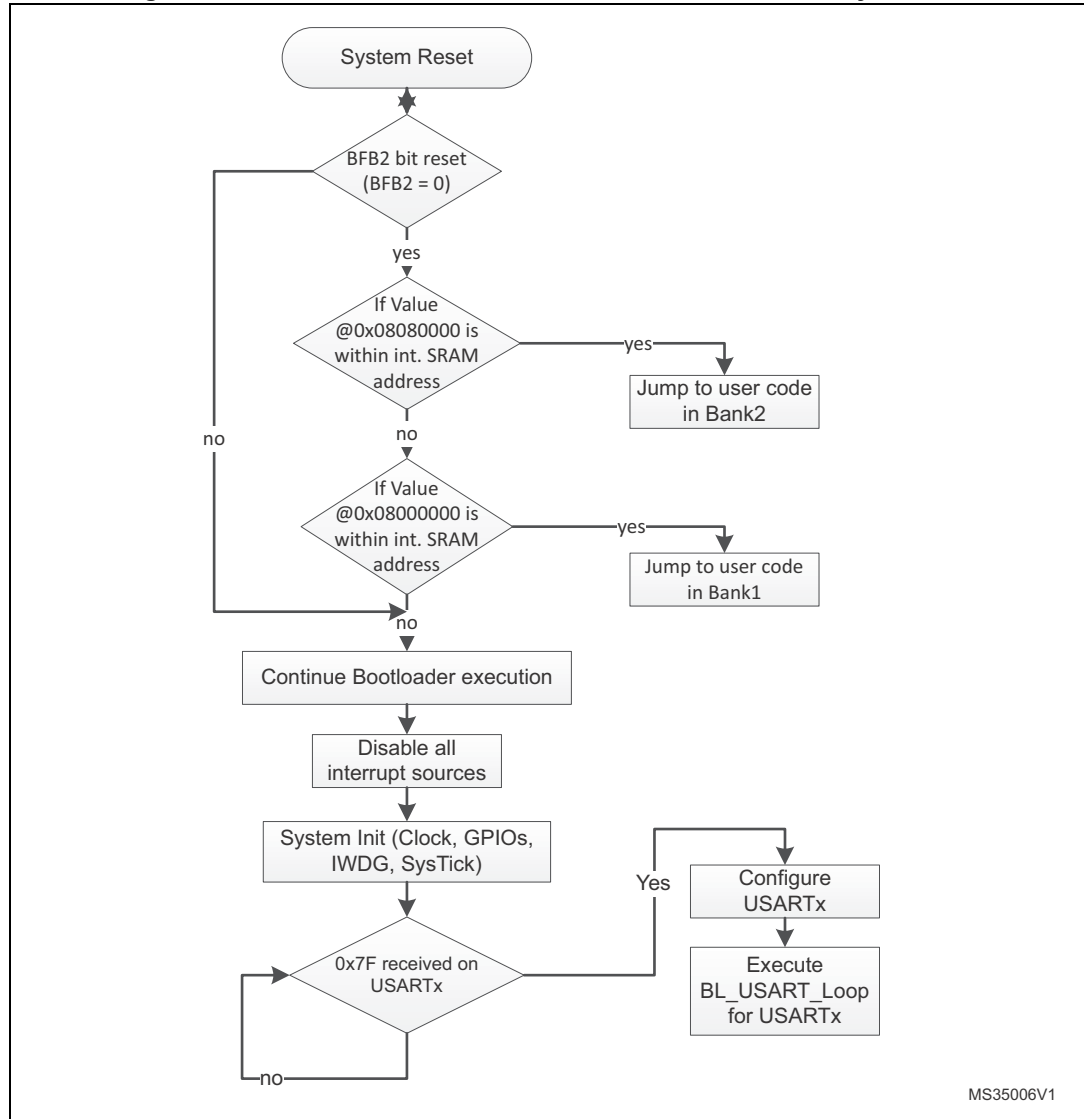

## 6.3 Bootloader version

The following table lists the STM32F10xxx XL-density devices bootloader versions:

**Table 11. STM32F10xxx XL-density bootloader versions**

Bootloader version number	Description
V2.1	Initial bootloader version



## 7 STM32L1xxx6(8/B) devices bootloader

### 7.1 Bootloader configuration

The STM32L1xxx6(8/B) bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 12. STM32L1xxx6(8/B) configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 16 MHz.
	RAM	-	2 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	4 Kbytes starting from address 0x1FF00000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to Voltage Range 1.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 7.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 9. Bootloader selection for STM32L1xxx6(8/B) devices**

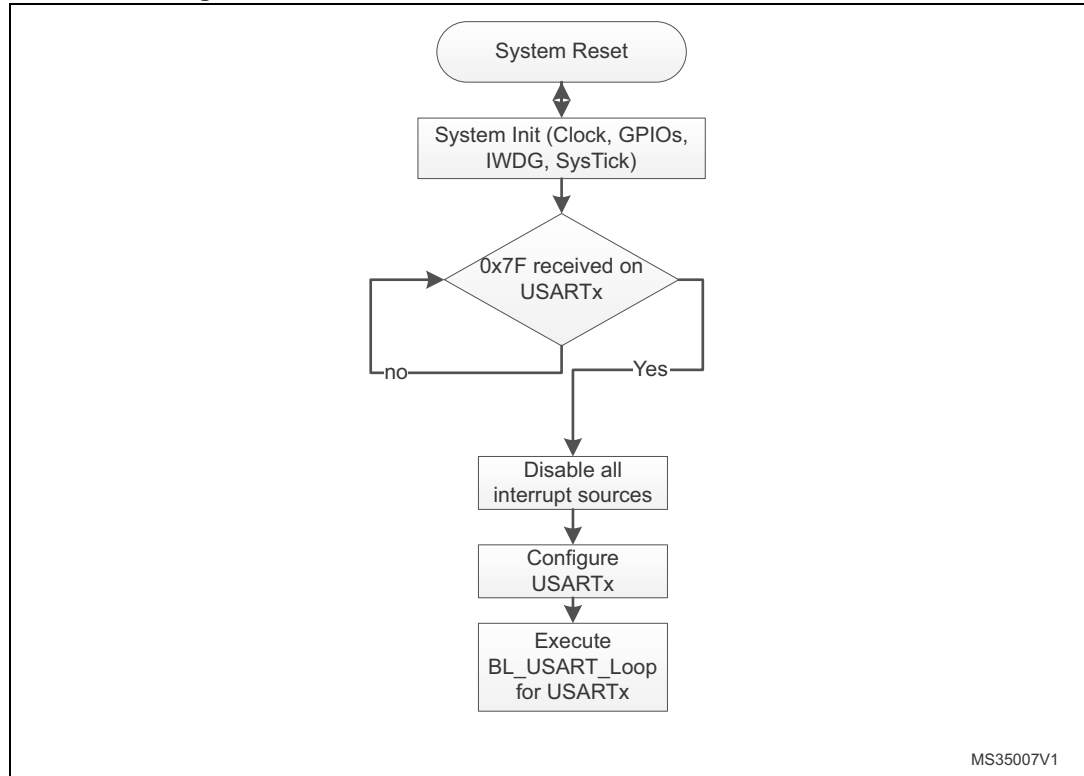

## 7.3 Bootloader version

The following table lists the STM32L1xxx6(8/B) devices bootloader versions:

**Table 13. STM32L1xxx6(8/B) bootloader versions**

Bootloader version number	Description	Known limitations
V2.0	Initial bootloader version	When a Read Memory command or Write Memory command is issued with an unsupported memory address and a correct address checksum (ie. address 0x6000 0000), the command is aborted by the bootloader device, but the NACK (0x1F) is not sent to the host. As a result, the next 2 bytes (which are the number of bytes to be read/written and its checksum) are considered as a new command and its checksum. <sup>(1)</sup>

1. If the “number of data - 1” (N-1) to be read/written is not equal to a valid command code, then the limitation is not perceived from the host since the command is NACKed anyway (as an unsupported new command).

## 8 STM32L1xxxC devices bootloader

### 8.1 Bootloader configuration

The STM32L1xxxC bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 14. STM32L1xxxC configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 16 MHz using the HSI. This is used only for USART1 and USART2 bootloaders and during USB detection for DFU bootloader (once the DFU bootloader is selected, the clock source is derived from the external crystal).
		HSE enabled	The external clock is mandatory only for the DFU bootloader and must be in the following range: [24, 16, 12, 8, 6, 4, 3, 2] MHz. The PLL is used to generate the USB 48 MHz clock and the 32 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates a system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog resets (in case the hardware IWDG option was previously enabled by the user).
	Power		Voltage range is set to Voltage Range 1.
	System memory	-	8 Kbytes starting from address 0x1FF0 0000. This area contains the bootloader firmware.
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is 8 bits, even parity and 1 stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for the USARTx bootloader.

**Table 14. STM32L1xxxC configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is 8 bits, even parity and 1 stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The system clock is derived from the embedded internal high-speed RC for the USARTx bootloader. This internal clock is also used for DFU bootloader but only for the selection phase. An external clock in the range of [24, 16, 12, 8, 6, 4, 3, 2] MHz is required for the execution of the DFU bootloader after the selection phase.

## 8.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 10. Bootloader selection for STM32L1xxxC devices**

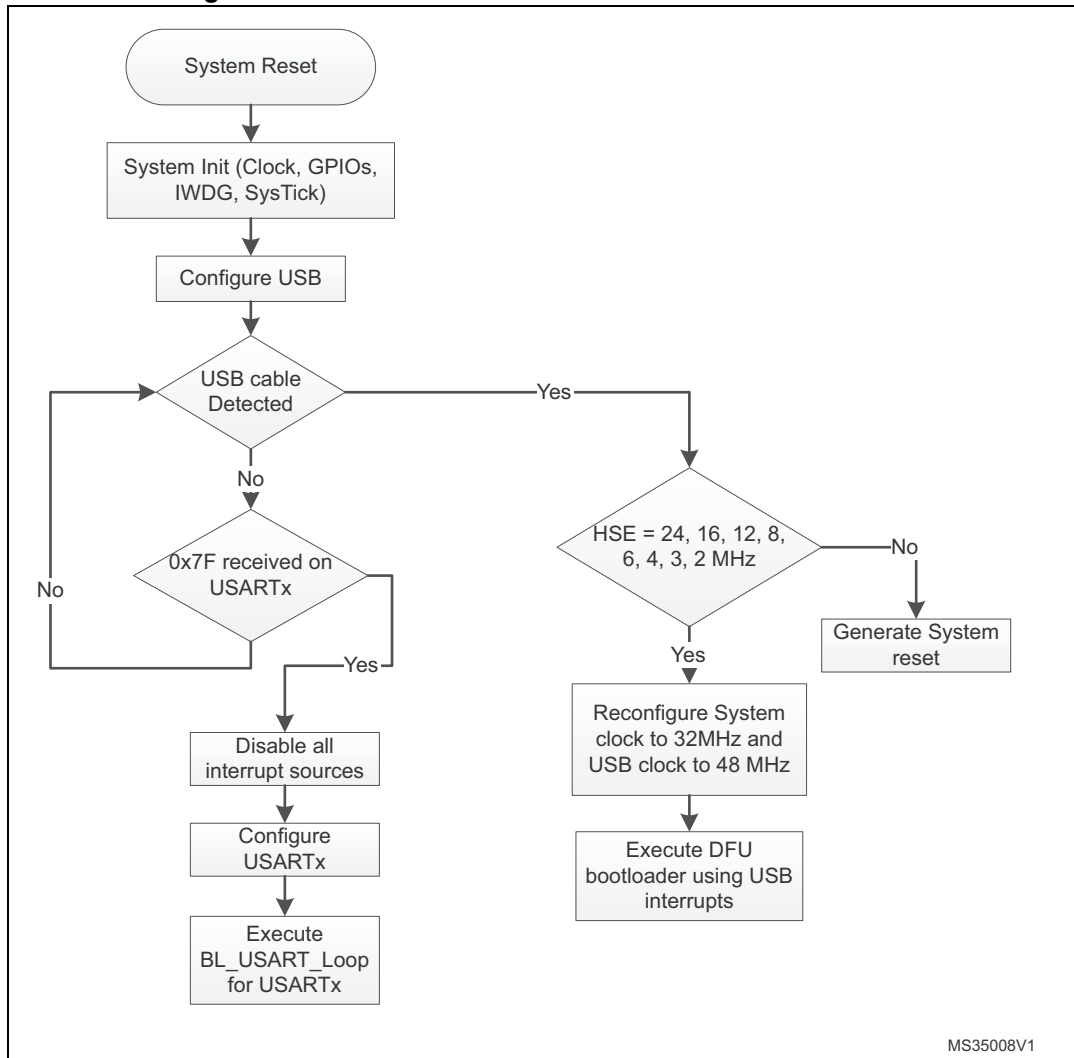

MS35008V1

## 8.3 Bootloader version

The following table lists the STM32L1xxxC devices bootloader versions:

**Table 15. STM32L1xxxC bootloader versions**

Bootloader version number	Description	Known limitations
V4.0	Initial bootloader version	For the USART interface, two consecutive NACKs instead of 1 NACK are sent when a Read Memory or Write Memory command is sent and the RDP level is active.

## 9 STM32L1xxxD devices bootloader

### 9.1 Bootloader configuration

The STM32L1xxxD bootloader is activated by applying pattern4 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 16. STM32L1xxxD configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 16 MHz using the HSI. This is used only for USART1 and USART2 bootloaders and during USB detection for DFU bootloader (once the DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The external clock is mandatory only for DFU bootloader and it must be in the following range: [24, 16, 12, 8, 6, 4, 3, 2] MHz. The PLL is used to generate the USB 48 MHz clock and the 32 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to Voltage Range 1.
	System memory	-	8 Kbytes starting from address 0x1FF0 0000. This area contains the bootloader firmware.
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.

Table 16. STM32L1xxxD configuration in System memory boot mode (continued)


Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The system clock is derived from the embedded internal high-speed RC for USARTx bootloader. This internal clock is used also for DFU bootloader but only for the selection phase. An external clock in the range of [24, 16, 12, 8, 6, 4, 3, 2] MHz is required for DFU bootloader execution after the selection phase.

## 9.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 11. Bootloader selection for STM32L1xxxD devices

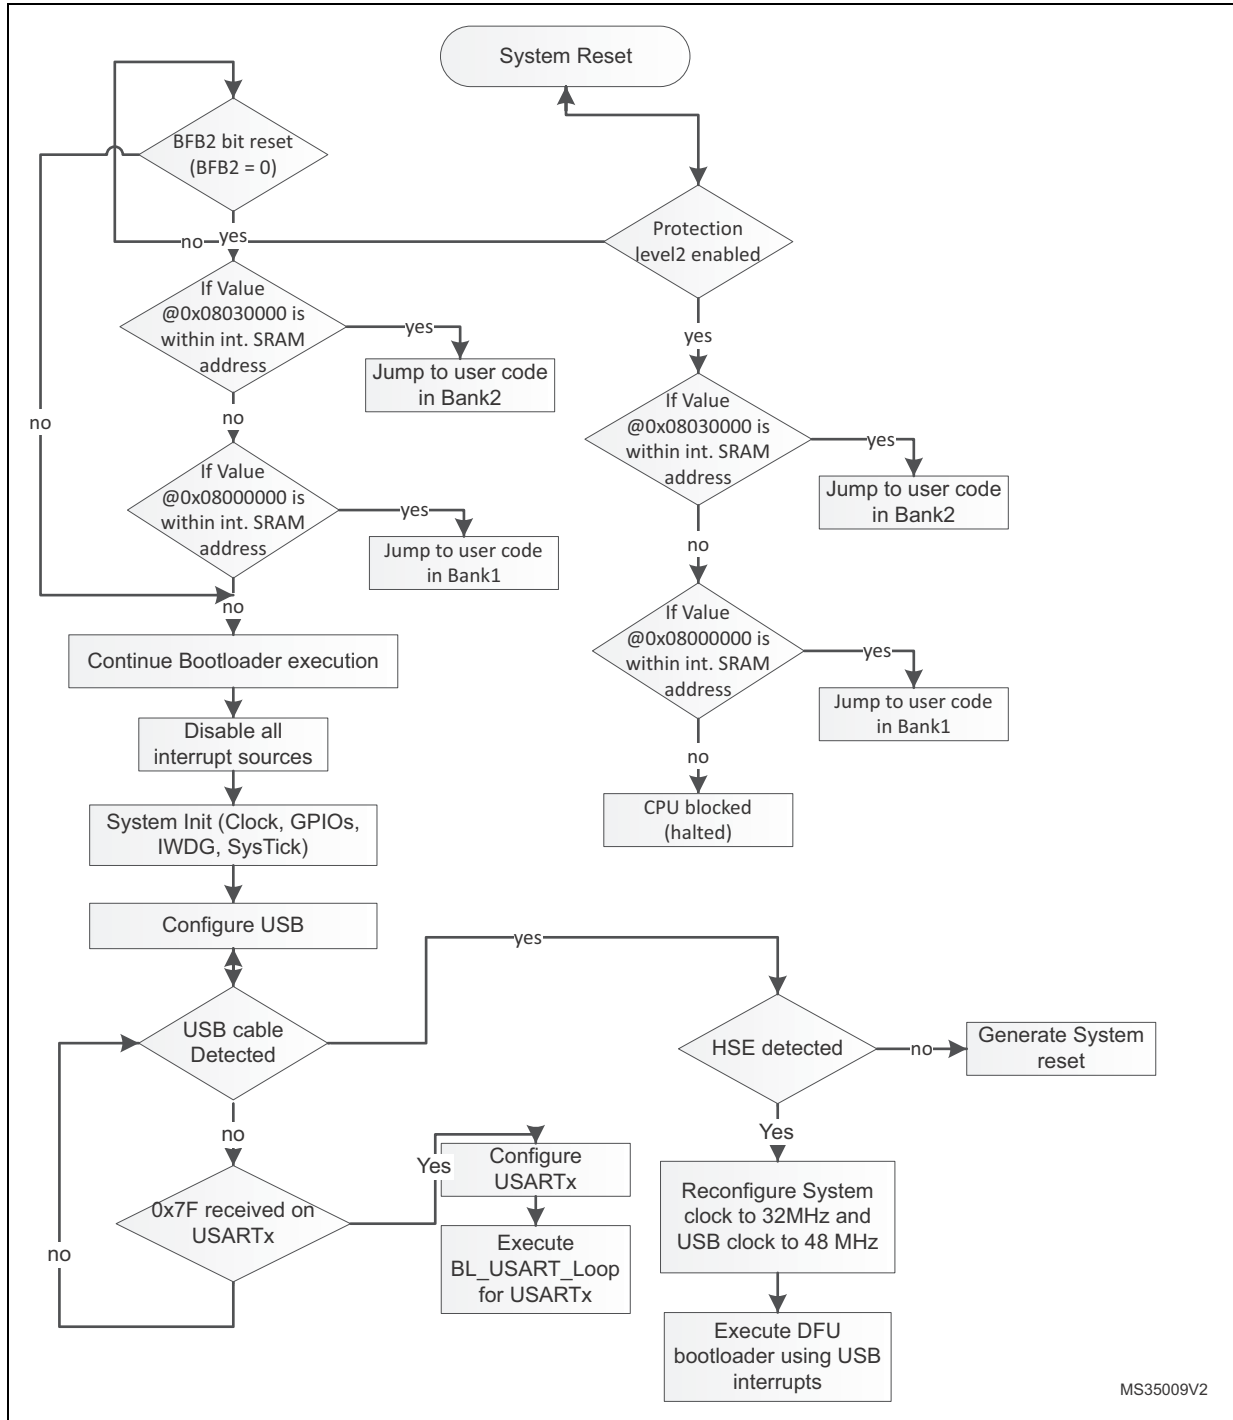

MS35009V2



### 9.3 Bootloader version

The following table lists the STM32L1xxxD devices bootloader versions:

**Table 17. STM32L1xxxD bootloader versions**

Bootloader version number	Description	Known limitations
V4.1	Initial bootloader version	<ul style="list-style-type: none"> <li>– In the bootloader code the PA13 (JTMS/SWDIO) I/O output speed is configured to 400 KHz, as consequence some debugger can not connect to the device in Serial Wire mode when the bootloader is running.</li> <li>– When the DFU bootloader is selected, the RTC is reset and thus all RTC information (calendar, alarm, ...) will be lost including backup registers. Note: When the USART bootloader is selected there is no change on the RTC configuration (including backup registers).</li> </ul>
V4.2	Fix V4.1 limitations (available on Rev.Z devices only.)	<ul style="list-style-type: none"> <li>– Stack overflow by 8 bytes when jumping to Bank1/Bank2 if BFB2=0 or when Read Protection level is set to 2. Workaround: the user code should force in the startup file the top of stack address before to jump to the main program. This can be done in the "Reset_Handler" routine.</li> <li>– When the Stack of the user code is placed outside the SRAM (ie. @ 0x2000C000) the bootloader cannot jump to that user code which is considered invalid. This might happen when using compilers which place the stack at a non-physical address at the top of the SRAM (ie. @ 0x2000C000). Workaround: place manually the stack at a physical address.</li> </ul>
V4.5	Fix V4.2 limitations. DFU interface robustness enhancements (available on Rev.Y devices only).	<ul style="list-style-type: none"> <li>– For the USART interface, two consecutive NACKs (instead of 1 NACK) are sent when a Read Memory or Write Memory command is sent and the RDP level is active.</li> </ul>

# 10 STM32F2xxxx devices bootloader

Two bootloader versions are available on STM32F2xxxx devices:

- V2.0 supporting USART1 and USART3  
This version is embedded in STM32F2xxxx devices revision B.
- V3.2 supporting USART1, USART3, CAN2 and DFU (USB FS Device)  
This version is embedded in STM32F2xxxx devices revision X and Y.

## 10.1 Bootloader V2.x

### 10.1.1 Bootloader configuration

The STM32F2xxxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 18. STM32F2xxxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz.
	RAM	-	8 Kbytes starting from address 0x2000 0000.
	System memory	-	30688 bytes starting from address 0x1FFF 0000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit.
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode

**Table 18. STM32F2xxxx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.

The system clock is derived from the embedded internal high-speed RC. No external quartz is required for the bootloader code.

### 10.1.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 12. Bootloader V2.x selection for STM32F2xxxx devices**

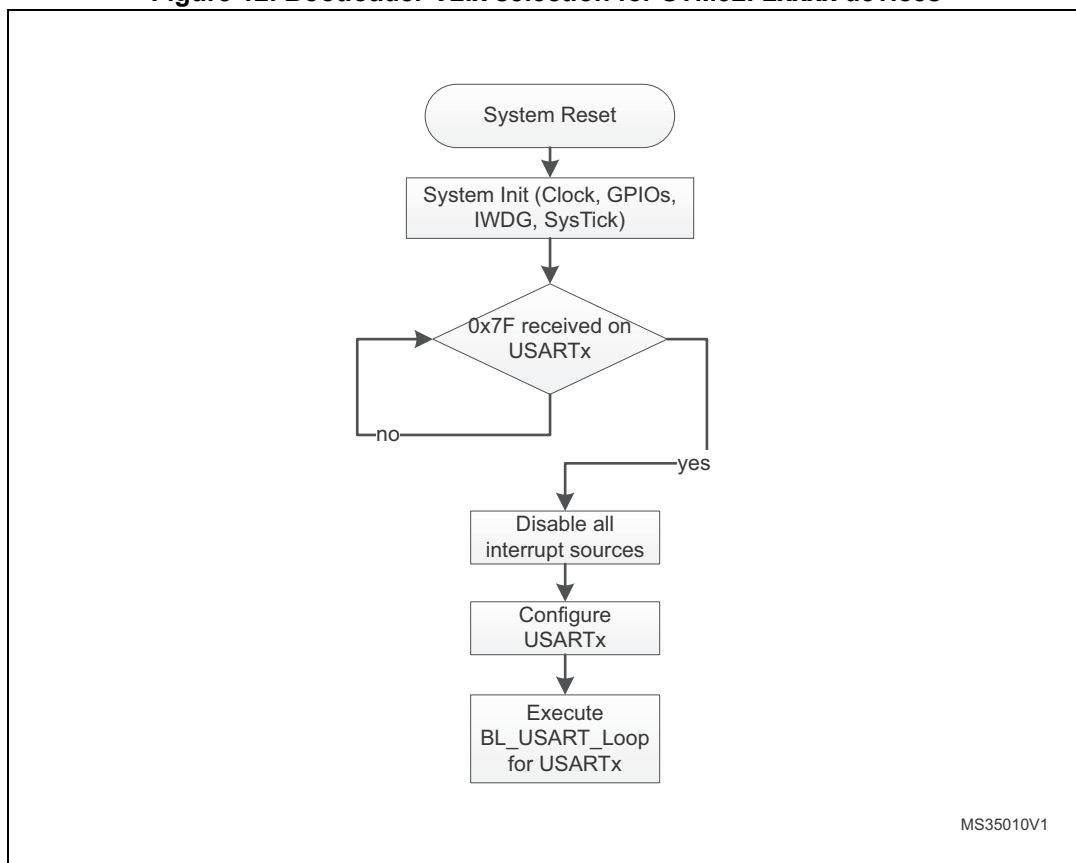

### 10.1.3 Bootloader version

This following table lists the STM32F2xxxx devices V2.x bootloader versions:

**Table 19. STM32F2xxxx bootloader V2.x versions**

Bootloader version number	Description	Known limitations
V2.0	Initial V2.x bootloader version	When a Read Memory command or Write Memory command is issued with an unsupported memory address and a correct address checksum (ie. address 0x6000 0000), the command is aborted by the bootloader device, but the NACK (0x1F) is not sent to the host. As a result, the next 2 bytes (which are the number of bytes to be read/written and its checksum) are considered as a new command and its checksum. For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection. <sup>(1)</sup>

1. If the “number of data - 1” (N-1) to be read/written is not equal to a valid command code (0x00, 0x01, 0x02, 0x11, 0x21, 0x31, 0x43, 0x44, 0x63, 0x73, 0x82 or 0x92), then the limitation is not perceived from the host since the command is NACKed anyway (as an unsupported new command).

## 10.2 Bootloader V3.x

### 10.2.1 Bootloader configuration

The STM32F2xxxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 20. STM32F2xxxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USARTx interfaces are selected (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the CAN or the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	8 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	30688 bytes starting from address 0x1FF0 0000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

**Table 20. STM32F2xxxx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit.
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit.
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized, the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during CAN2 bootloader execution because CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

### 10.2.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 13. Bootloader V3.x selection for STM32F2xxxx devices**

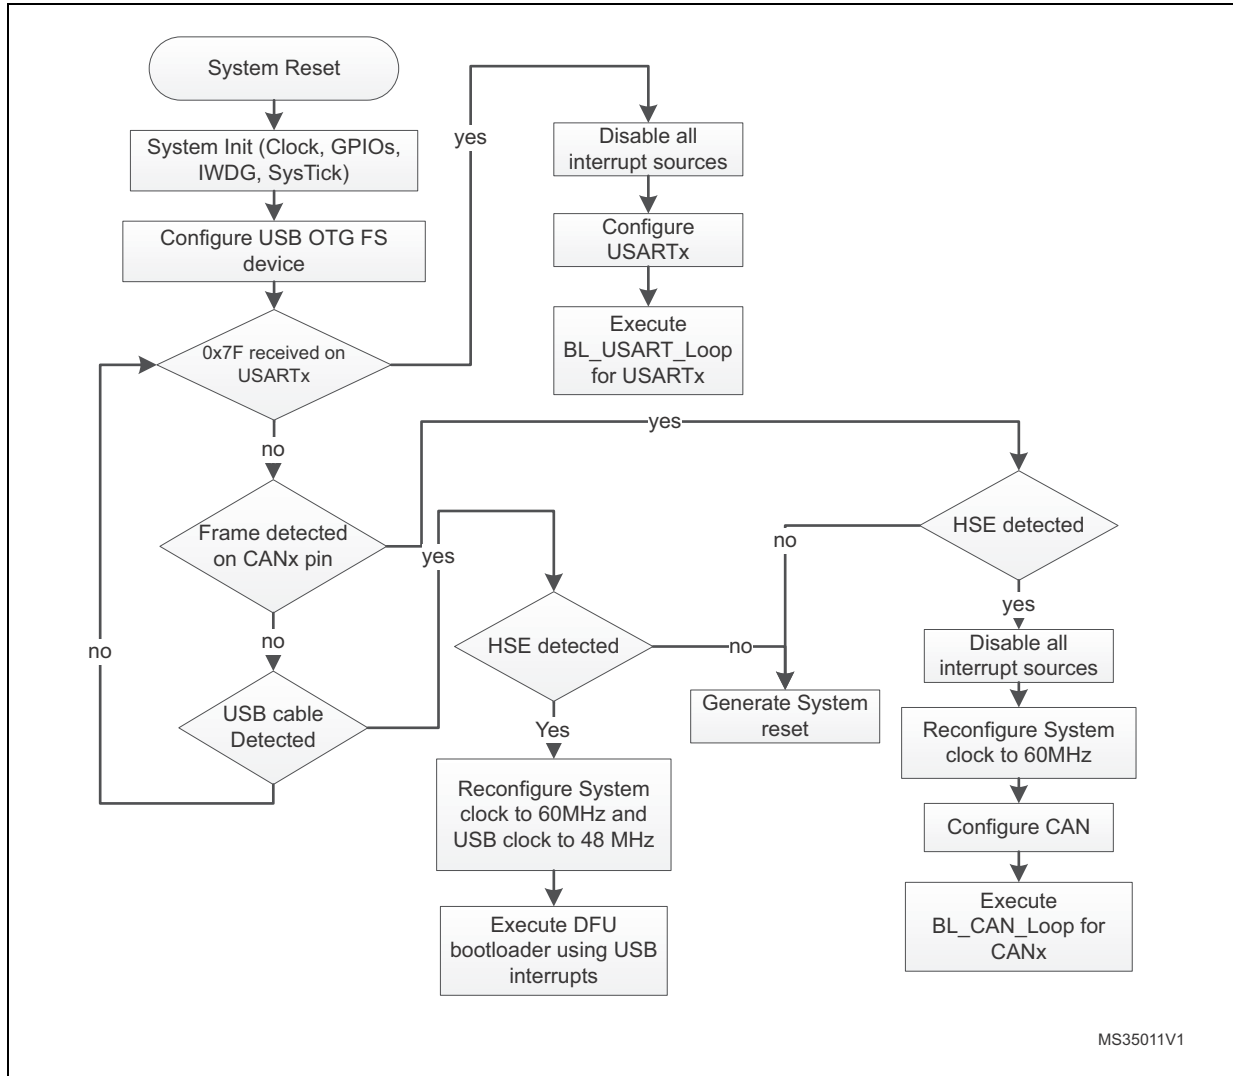

### 10.2.3 Bootloader version

The following table lists the STM32F2xxxx devices V3.x bootloader versions:

**Table 21. STM32F2xxxx bootloader V3.x versions**

Bootloader version number	Description	Known limitations
V3.2	Initial V3.x bootloader version.	<ul style="list-style-type: none"> <li>– When a Read Memory command or Write Memory command is issued with an unsupported memory address and a correct address checksum (ie. address 0x6000 0000), the command is aborted by the bootloader device, but the NACK (0x1F) is not sent to the host. As a result, the next 2 bytes (which are the number of bytes to be read/written and its checksum) are considered as a new command and its checksum<sup>(1)</sup>.</li> <li>– Option bytes, OTP and Device Feature descriptors (in DFU interface) are set to “g” instead of “e” (not erasable memory areas).</li> </ul>
V3.3	Fix V3.2 limitations. DFU interface robustness enhancement.	<ul style="list-style-type: none"> <li>– For the USART interface, two consecutive NACKs (instead of 1 NACK) are sent when a Read Memory or Write Memory command is sent and the RDP level is active.</li> <li>– For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection.</li> </ul>

1. If the “number of data - 1” (N-1) to be read/written is not equal to a valid command code (0x00, 0x01, 0x02, 0x11, 0x21, 0x31, 0x43, 0x44, 0x63, 0x73, 0x82 or 0x92), then the limitation is not perceived from the host since the command is NACKed anyway (as an unsupported new command).



# 11 STM32F40xxx/41xxx devices bootloader

## 11.1 Bootloader V3.x

### 11.1.1 Bootloader configuration

The STM32F40xxx/41xxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 22. STM32F40xxx/41xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USARTx interfaces are selected (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the CAN or the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	8 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	30688 bytes starting from address 0x1FFF0000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

**Table 22. STM32F40xxx/41xxx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit.
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized, the USART3 configuration is: 8 bits, even parity and 1 Stop bit.
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized, the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during CAN2 bootloader execution because CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

### 11.1.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 14. Bootloader V3.x selection for STM32F40xxx/41xxx devices

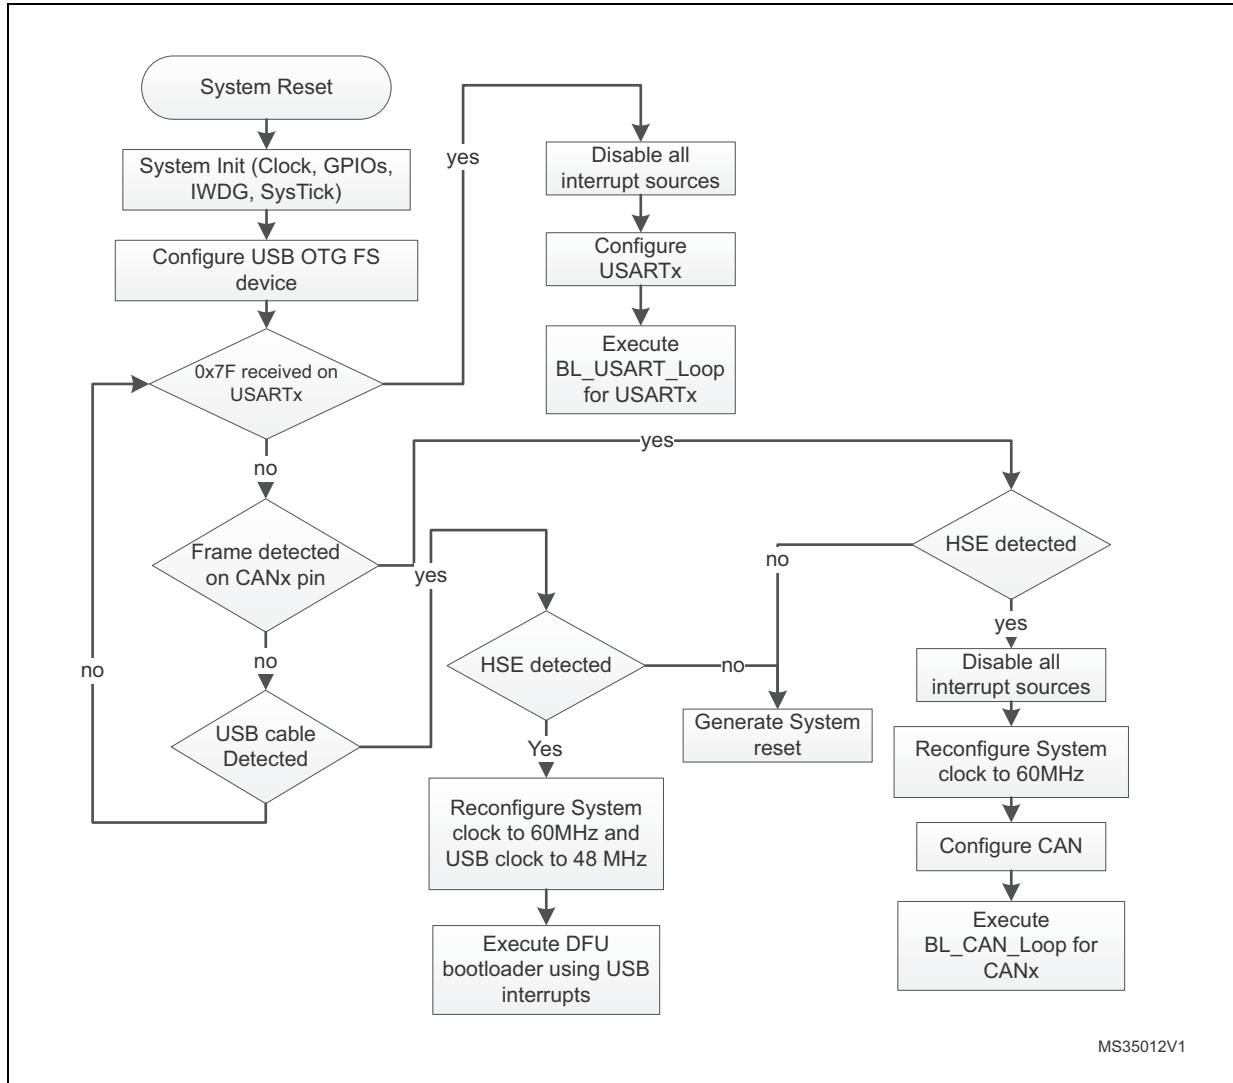

MS35012V1

### 11.1.3 Bootloader version

The following table lists the STM32F40xxx/41xxx devices V3.x bootloader versions:

**Table 23. STM32F40xxx/41xxx bootloader V3.x versions**

Bootloader version number	Description	Known limitations
V3.0	Initial bootloader version	<ul style="list-style-type: none"> <li>– When a Read Memory command or Write Memory command is issued with an unsupported memory address and a correct address checksum (ie. address 0x6000 0000), the command is aborted by the bootloader device, but the NACK (0x1F) is not sent to the host. As a result, the next 2 bytes (which are the number of bytes to be read/written and its checksum) are considered as a new command and its checksum<sup>(1)</sup>.</li> <li>– Option bytes, OTP and Device Feature descriptors (in DFU interface) are set to “g” instead of “e” (not erasable memory areas).</li> </ul>
V3.1	Fix V3.0 limitations. DFU interface robustness enhancement.	<ul style="list-style-type: none"> <li>– For the USART interface, two consecutive NACKs (instead of 1 NACK) are sent when a Read Memory or Write Memory command is sent and the RDP level is active.</li> <li>– For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection.</li> </ul>

1. If the “number of data - 1” (N-1) to be read/written is not equal to a valid command code (0x00, 0x01, 0x02, 0x11, 0x21, 0x31, 0x43, 0x44, 0x63, 0x73, 0x82 or 0x92), then the limitation is not perceived from the host since the command is NACKed anyway (as an unsupported new command).

## 11.2 Bootloader V9.x

### 11.2.1 Bootloader configuration

The STM32F40xxx/41xxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 24. STM32F40xxx/41xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or SPI or I2C interfaces are selected (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the CAN or the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

**Table 24. STM32F40xxx/41xxx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during CAN2 bootloader execution because CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111010x (where x = 0 for write and x = 1 for read).
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111010x (where x = 0 for write and x = 1 for read).
	I2C2_SCL pin	Input/Output	PF1 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PF0 pin: data line is used in open-drain mode.

Table 24. STM32F40xxx/41xxx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111010x (where x = 0 for write and x = 1 for read).
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PC9 pin: data line is used in open-drain mode.
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PI3 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PI2 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PI1 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PI0 pin: Slave Chip Select pin used in Push-pull pull-down mode.
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.


The system clock is derived from the embedded internal high-speed RC for USARTx, I2Cx and SPIx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.



### 11.2.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 15. Bootloader V9.x selection for STM32F40xxx/41xxx

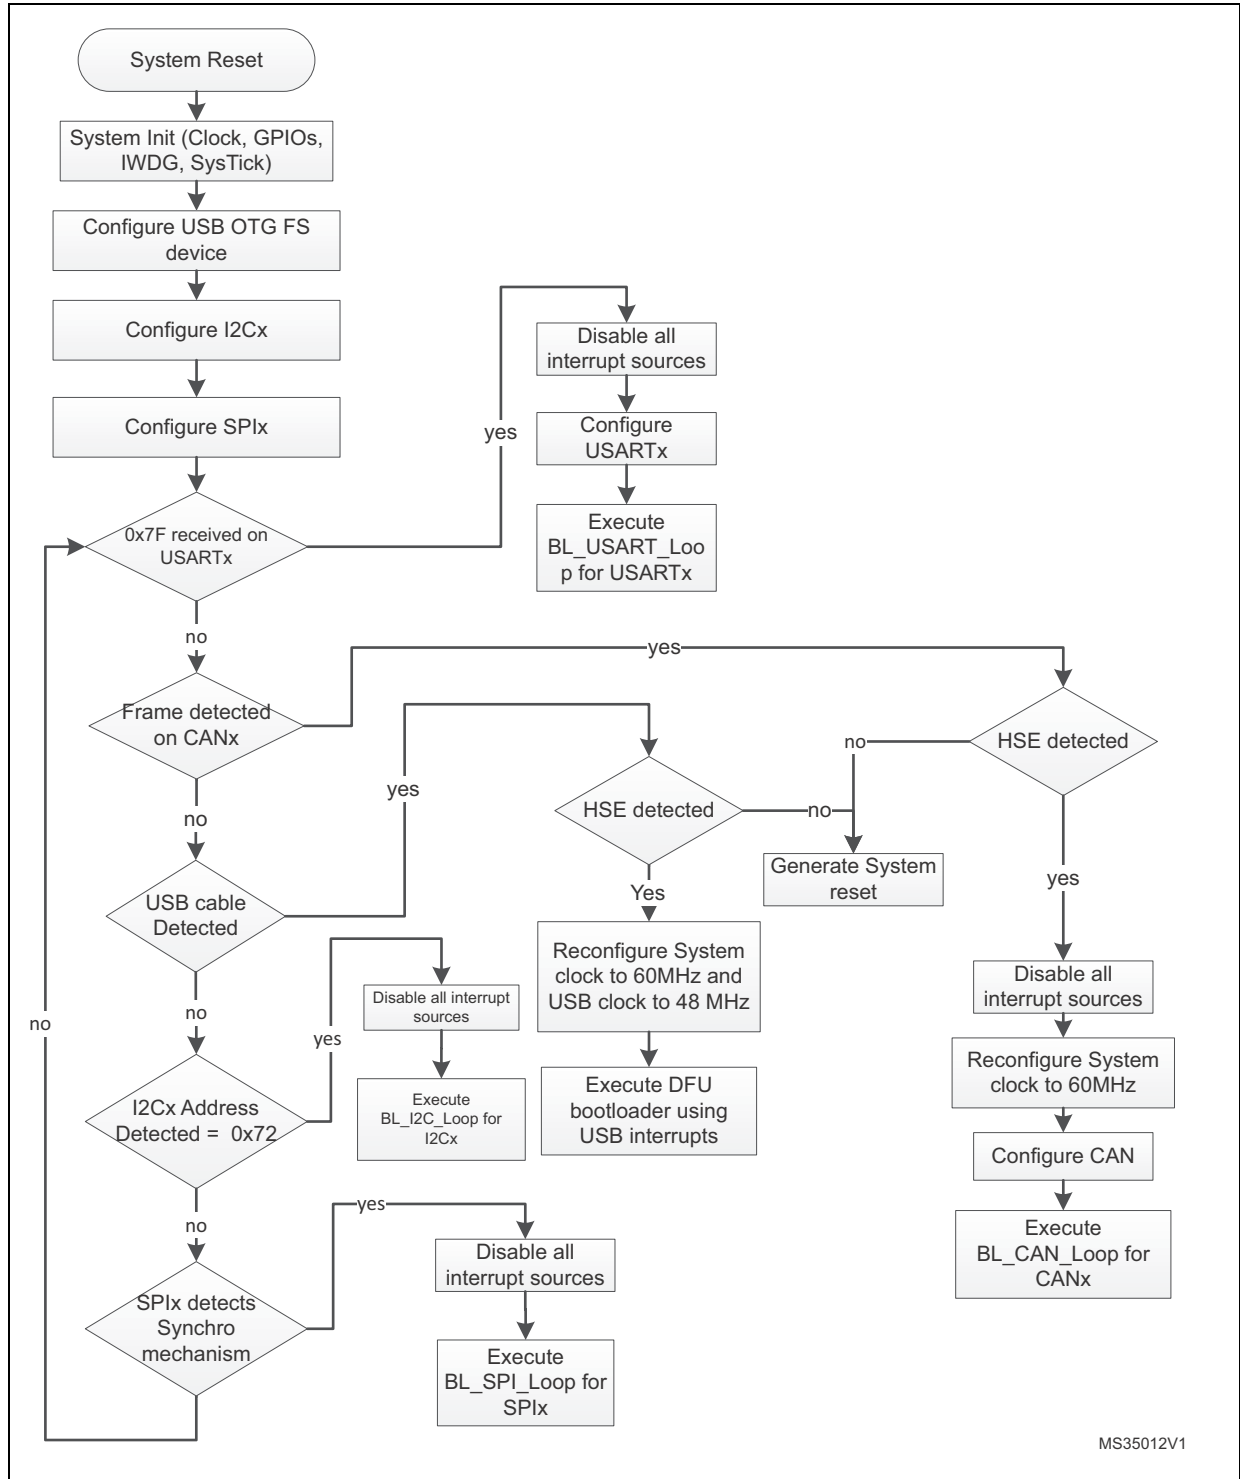

MS35012V1

### 11.2.3 Bootloader version

The following table lists the STM32F40xxx/41xxx devices V9.x bootloader versions.

**Table 25. STM32F40xxx/41xxx bootloader V9.x versions**

Bootloader version number	Description	Known limitations
V9.0	<p>This bootloader is an updated version of Bootloader v3.1.</p> <p>This new version of bootloader supports I2C1, I2C2, I2C3, SPI1 and SPI2 interfaces.</p> <p>The RAM used by this bootloader is increased from 8Kb to 12Kb.</p> <p>The ID of this bootloader is 0x90.</p> <p>The connection time is increased.</p>	<ul style="list-style-type: none"> <li>– For the USART interface, two consecutive NACKs (instead of 1 NACK) are sent when a Read Memory or Write Memory command is sent and the RDP level is active.</li> <li>– For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection.</li> </ul>

## 12 STM32F05xxx and STM32F030x8 devices bootloader

### 12.1 Bootloader configuration

The STM32F05xxx and STM32F030x8 devices bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 26. STM32F05xxx and STM32F030x8 devices configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI Enabled	The system clock frequency is 24 MHz (using PLL clocked by HSI). 1 Flash Wait State.
	RAM	-	2 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	3 Kbytes starting from address 0x1FFFEC00, contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset in case the hardware IWDG option was previously enabled by the user.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode.
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode.
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is 8 bits, even parity and 1 Stop bit.
	USART2_RX pin	Input	PA15 pin: USART2 in reception mode.
	USART2_TX pin	Output	PA14 pin: USART2 in transmission mode.
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.


The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

*Note: After the STM32F05xxx and STM32F030x8 devices have booted in bootloader mode, the serial wire debug (SWD) communication is no more possible until the system is reset, because SWD uses PA14 pin (SWCLK) which is already used by the bootloader (USART2\_TX).*

## 12.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 16. Bootloader selection for STM32F05xxx and STM32F030x8 devices

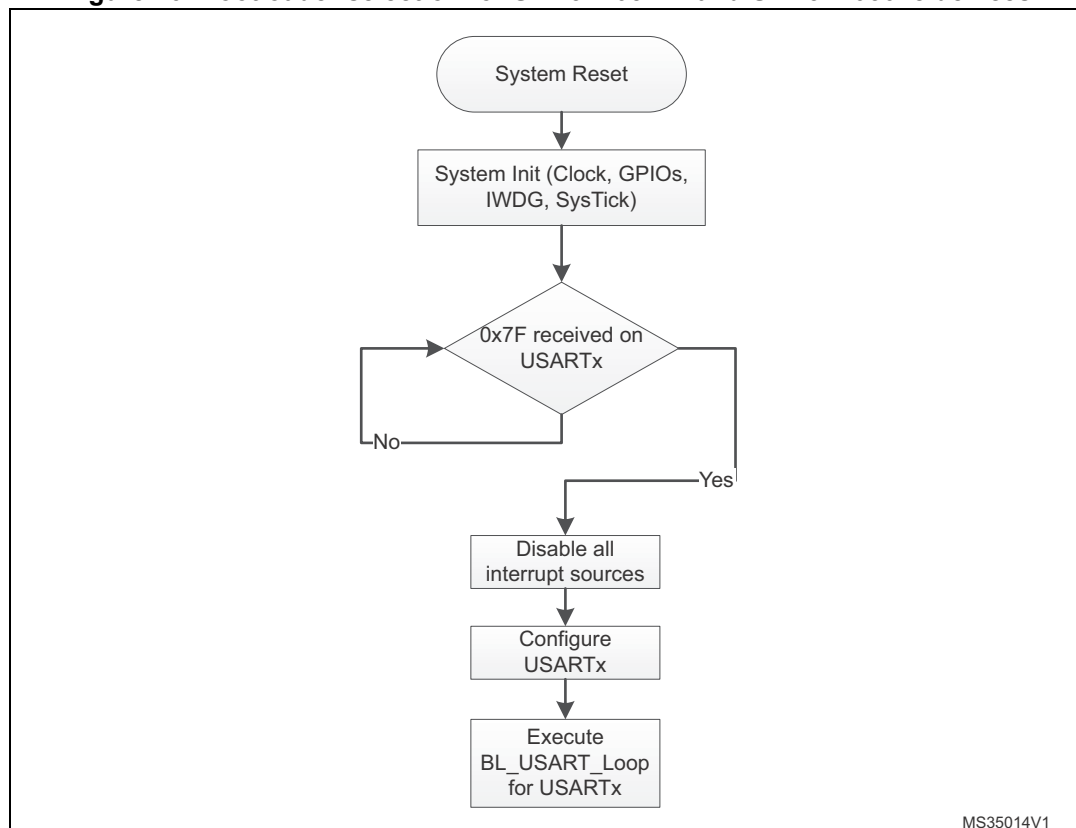

## 12.3 Bootloader version

The following table lists the STM32F05xxx and STM32F030x8 devices bootloader versions.

Table 27. STM32F05xxx and STM32F030x8 devices bootloader versions

Bootloader version number	Description	Known limitations
V2.1	Initial bootloader version	When the user application configures a value of HSI TRIM bits (in RCC_CR register) and then jumps to the bootloader, the HSITRIM value is set (0) at bootloader startup. For the USART interface, two consecutive NACKs instead of 1 NACK are sent when a Read Memory or Write Memory command is sent and the RDP level is active.

## 13 STM32F03xxx devices bootloader

### 13.1 Bootloader configuration

The STM32F03xxx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 28. STM32F03xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI Enabled	The system clock frequency is 24 MHz (using PLL clocked by HSI). 1 Flash Wait State.
	RAM	-	2 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	3 Kbytes starting from address 0x1FFFEC00 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset in case the hardware IWDG option was previously enabled by the user.
USART1 bootloader (on PA10/PA9)	USART1	Enabled	Once initialized, the USART1 configuration is 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode.
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode.
USART1 bootloader (on PA14/PA15)	USART1	Enabled	Once initialized, the USART1 configuration is 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA15 pin: USART1 in reception mode.
	USART1_TX pin	Output	PA14 pin: USART1 in transmission mode.
USART1 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.


The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

*Note:* After the STM32F03xxx devices has booted in bootloader mode, serial wire debug (SWD) communication is no longer possible until the system is reset. This is because the SWD uses the PA14 pin (SWCLK) which is already used by the bootloader (USART1\_TX).

### 13.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 17. Bootloader selection for STM32F03xxx devices**

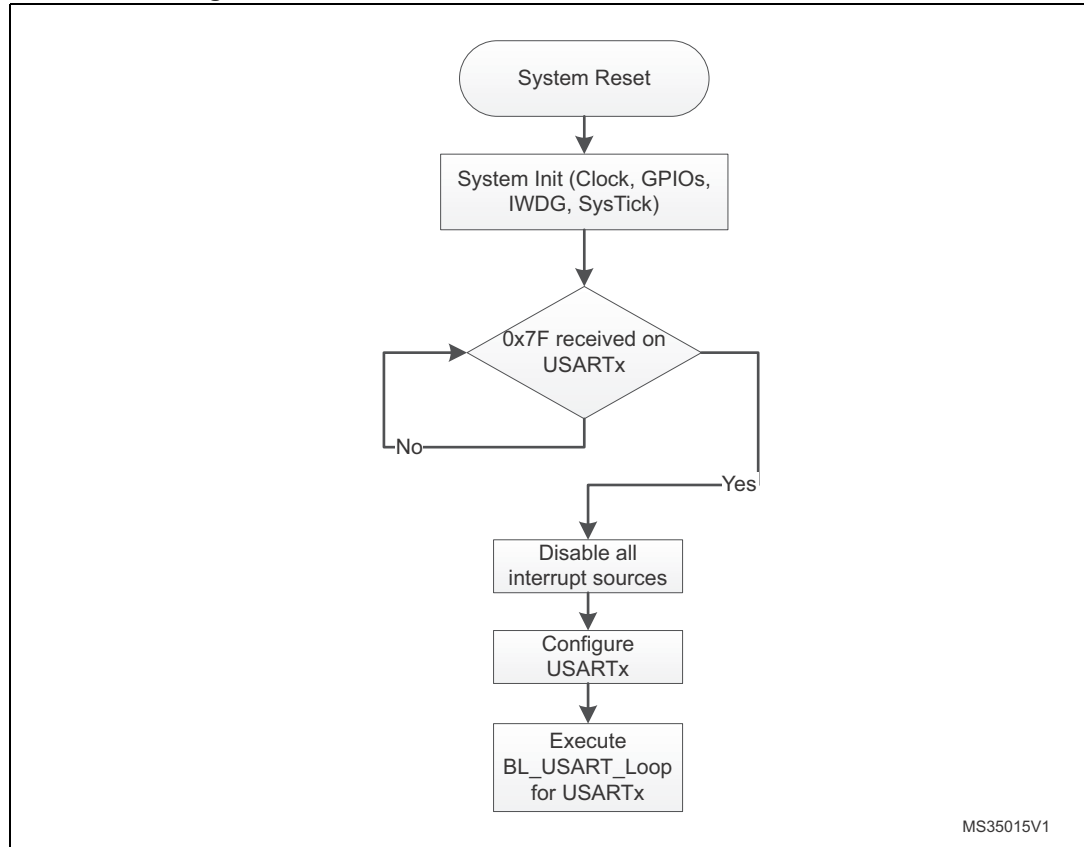

### 13.3 Bootloader version

The following table lists the STM32F03xxx devices bootloader versions.

**Table 29. STM32F03xxx bootloader versions**

Bootloader version number	Description	Known limitations
V1.0	Initial bootloader version	For the USART interface, two consecutive NACKs instead of 1 NACK are sent when a Read Memory or Write Memory command is sent and the RDP level is active.

## 14 STM32F373xx devices bootloader

### 14.1 Bootloader configuration

The STM32F373xx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 30. STM32F373xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	At startup, the system clock frequency is configured to 48 MHz using the HSI. If an external clock (HSE) is not present, the system is kept clocked from the HSI.
		HSE enabled	The external clock can be used for all bootloader interfaces and should have one the following values 24, 18,16, 12, 9, 8, 6, 4, 3 MHz. The PLL is used to generate the USB 48 MHz clock and the 48 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	System memory	-	8 Kbytes starting from address 0x1FFFD800. This area contains the bootloader firmware
	RAM	-	5 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode

**Table 30. STM32F373xx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The bootloader has two case of operation depending on the presence of the external clock (HSE) at bootloader startup:

- If HSE is present and has a value of 24, 18, 16, 12, 9, 8, 6, 4 or 3 MHz, the system clock is configured to 48 MHz with HSE as clock source. The DFU interface, USART1 and USART2 are functional and can be used to communicate with the bootloader device.
- If HSE is not present, the HSI is kept as default clock source and only USART1 and USART2 are functional.


*Note: The external clock (HSE) must be kept if it's connected at bootloader startup because it will be used as system clock source.*



## 14.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 18. Bootloader selection for STM32F373xx devices**

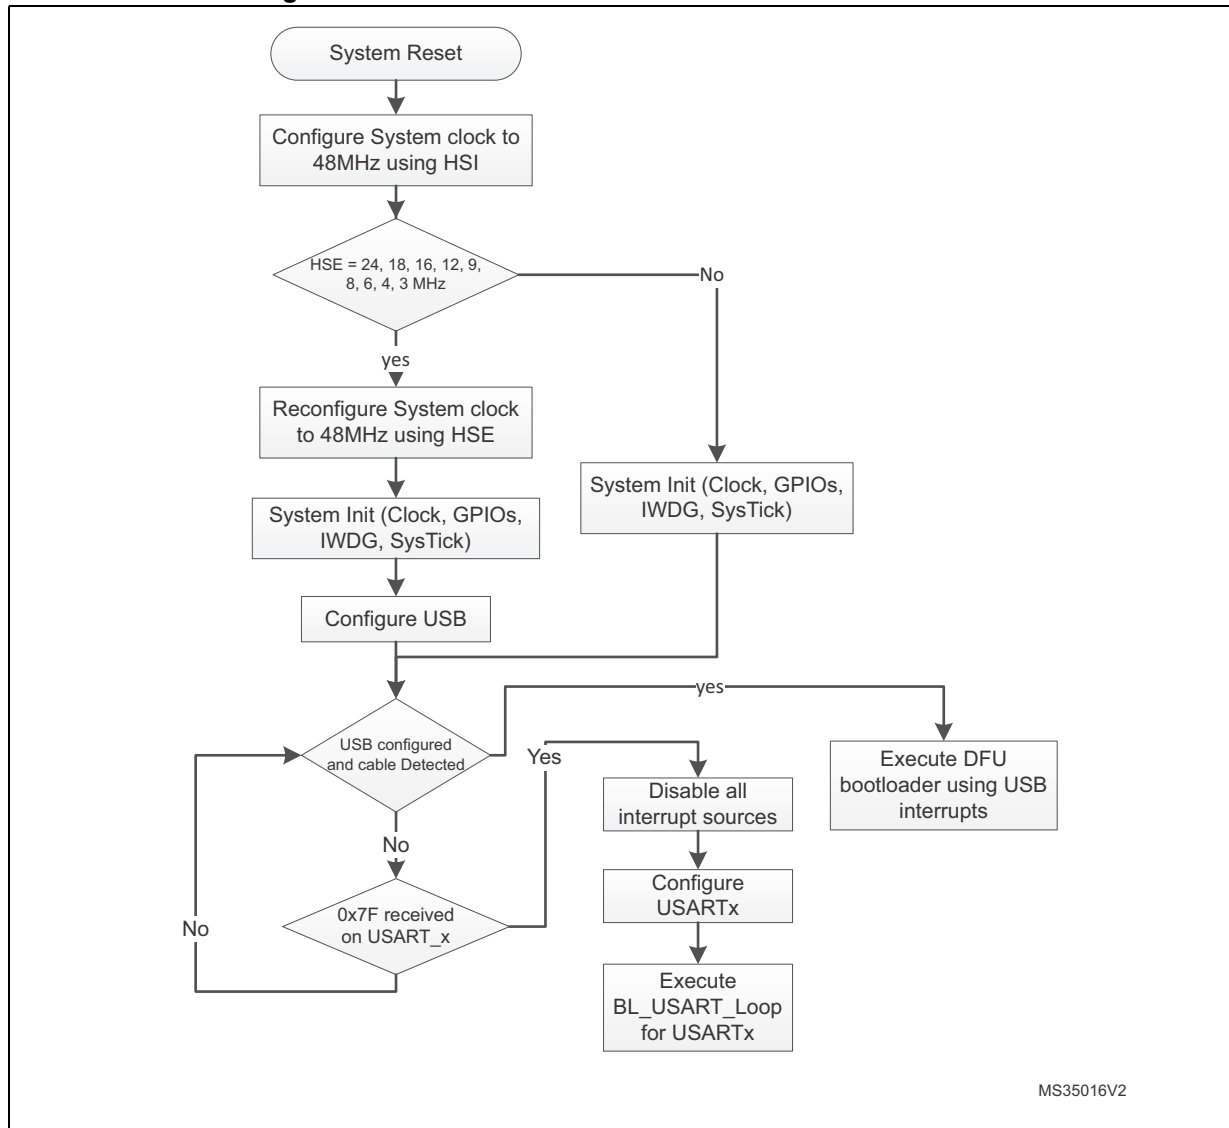

MS35016V2

## 14.3 Bootloader version

The following table lists the STM32F373xx devices bootloader versions.

**Table 31. STM32F373xx bootloader versions**

Bootloader version number	Description	Known limitations
V4.1	Initial bootloader version	None

# 15 STM32F302xB(C)/303xB(C) devices bootloader

## 15.1 Bootloader configuration

The STM32F302xB(C)/303xB(C) bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 32. STM32F302xB(C)/303xB(C) configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	At startup, the system clock frequency is configured to 48 MHz using the HSI. If an external clock (HSE) is not present, the system is kept clocked from the HSI.
		HSE enabled	The external clock can be used for all bootloader interfaces and should have one the following values 24, 18,16, 12, 9, 8, 6, 4, 3 MHz. The PLL is used to generate the USB 48 MHz clock and the 48 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	System memory	-	8 Kbytes starting from address 0x1FFFD800. This area contains the bootloader firmware
	RAM	-	5 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode

Table 32. STM32F302xB(C)/303xB(C) configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The bootloader has two case of operation depending on the presence of the external clock (HSE) at bootloader startup:


- If HSE is present and has a value of 24, 18, 16, 12, 9, 8, 6, 4 or 3 MHz, the system clock is configured to 48 MHz with HSE as clock source. The DFU interface, USART1 and USART2 are functional and can be used to communicate with the bootloader device.
- If HSE is not present, the HSI is kept as default clock source and only USART1 and USART2 are functional.

*The external clock (HSE) must be kept if it's connected at bootloader startup because it will be used as system clock source.*

## 15.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 19. Bootloader selection for STM32F302xB(C)/303xB(C) devices**

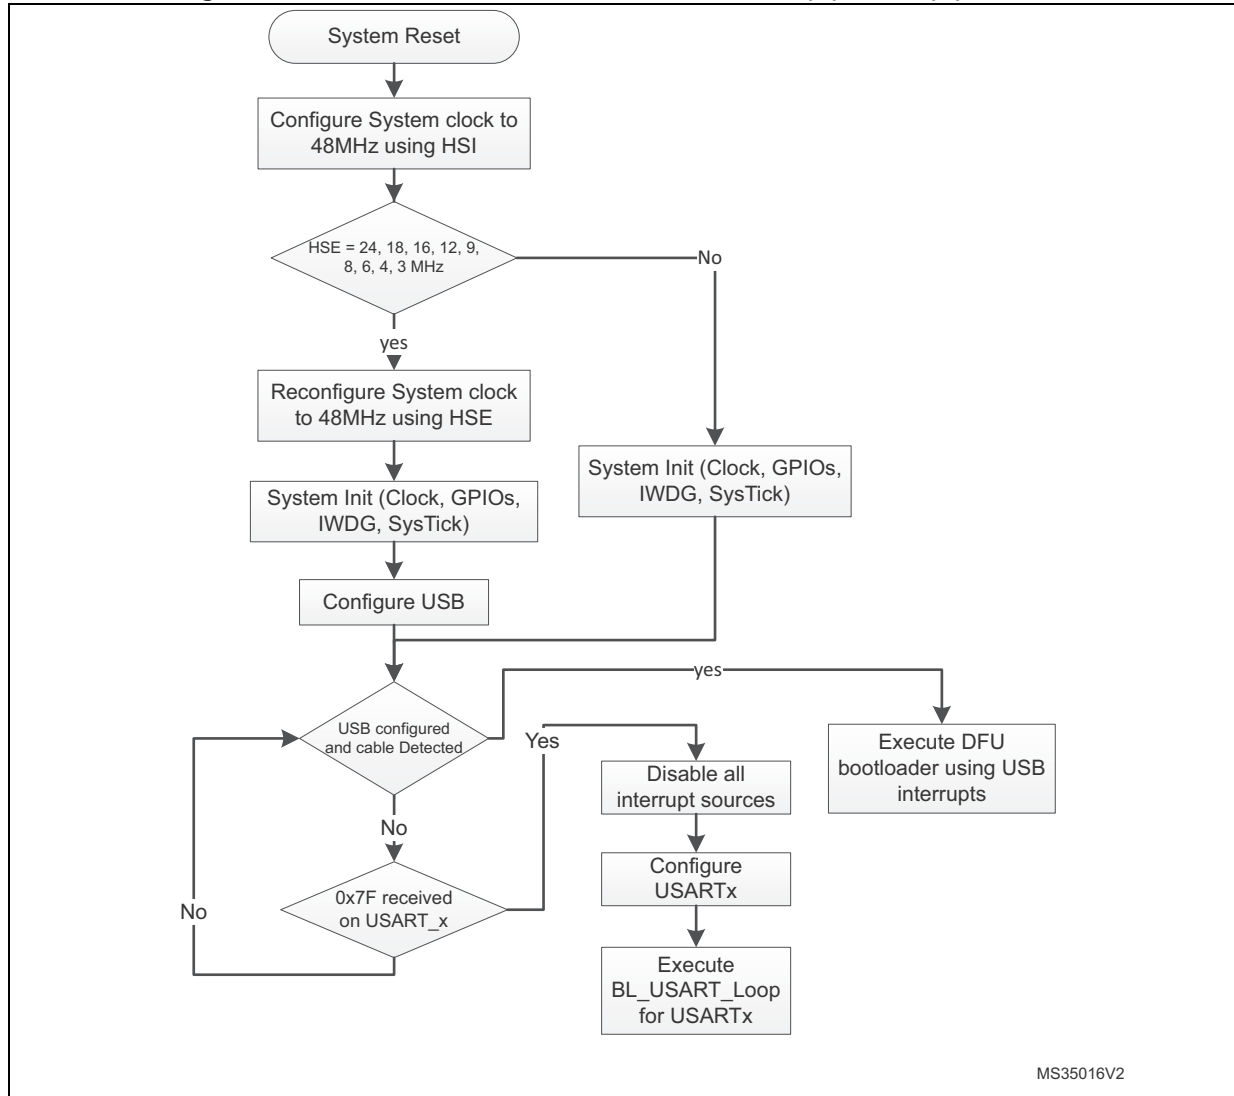

## 15.3 Bootloader version

The following table lists the STM32F302xB(C)/303xB(C) devices bootloader versions.

**Table 33. STM32F302xB(C)/303xB(C) bootloader versions**

Bootloader version number	Description	Known limitations
V4.1	Initial bootloader version	None

## 16 STM32F378xx devices bootloader

### 16.1 Bootloader configuration

The STM32F378xx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 34. STM32F378xx configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 8 MHz using the HSI.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user). Window feature is disabled.
	System memory	-	8 Kbytes starting from address 0x1FFFD800. This area contains the bootloader firmware
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode.
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode.
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode.
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode.
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0110111x (where x = 0 for write and x = 1 for read).
	I2C1_SCL pin	Input/ Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/ Output	PB7 pin: data line is used in open-drain mode.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 16.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 20. Bootloader selection for STM32F378xx devices

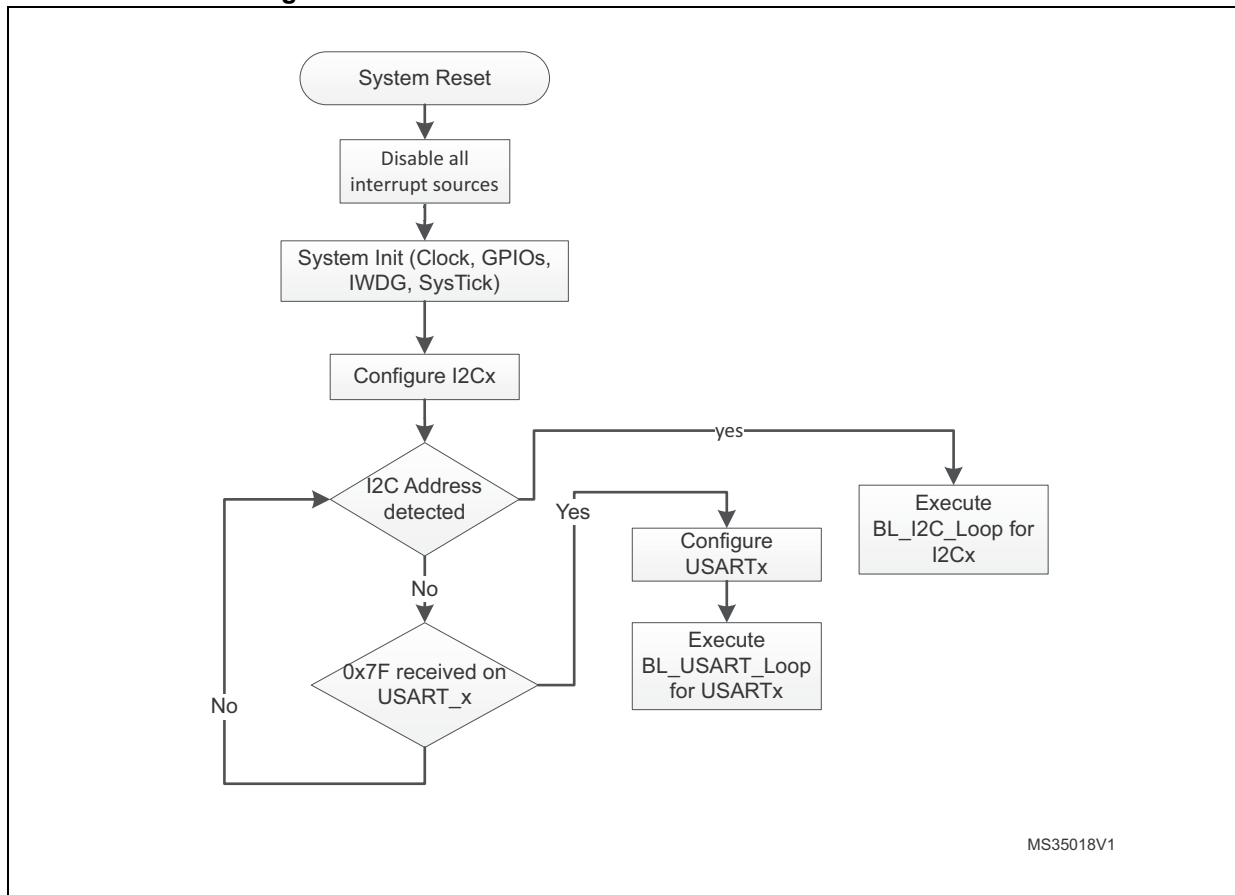

## 16.3 Bootloader version

The following table lists the STM32F378xx devices bootloader versions.

Table 35. STM32F378xx bootloader versions

Bootloader version number	Description	Known limitations
V5.0	Initial bootloader version	For USART1 and USART2 interfaces, the maximum baudrate supported by the bootloader is 57600 baud.

## 17 STM32F358xx devices bootloader

### 17.1 Bootloader configuration

The STM32F358xx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 36. STM32F358xx configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 8 MHz using the HSI.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user). Window feature is disabled.
	System memory	-	8 Kbytes starting from address 0x1FFFD800. This area contains the bootloader firmware.
	RAM	-	5 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode.
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode.
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode.
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode.
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0110111x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/ Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/ Output	PB7 pin: data line is used in open-drain mode.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 17.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 21. Bootloader selection for STM32F358xx devices

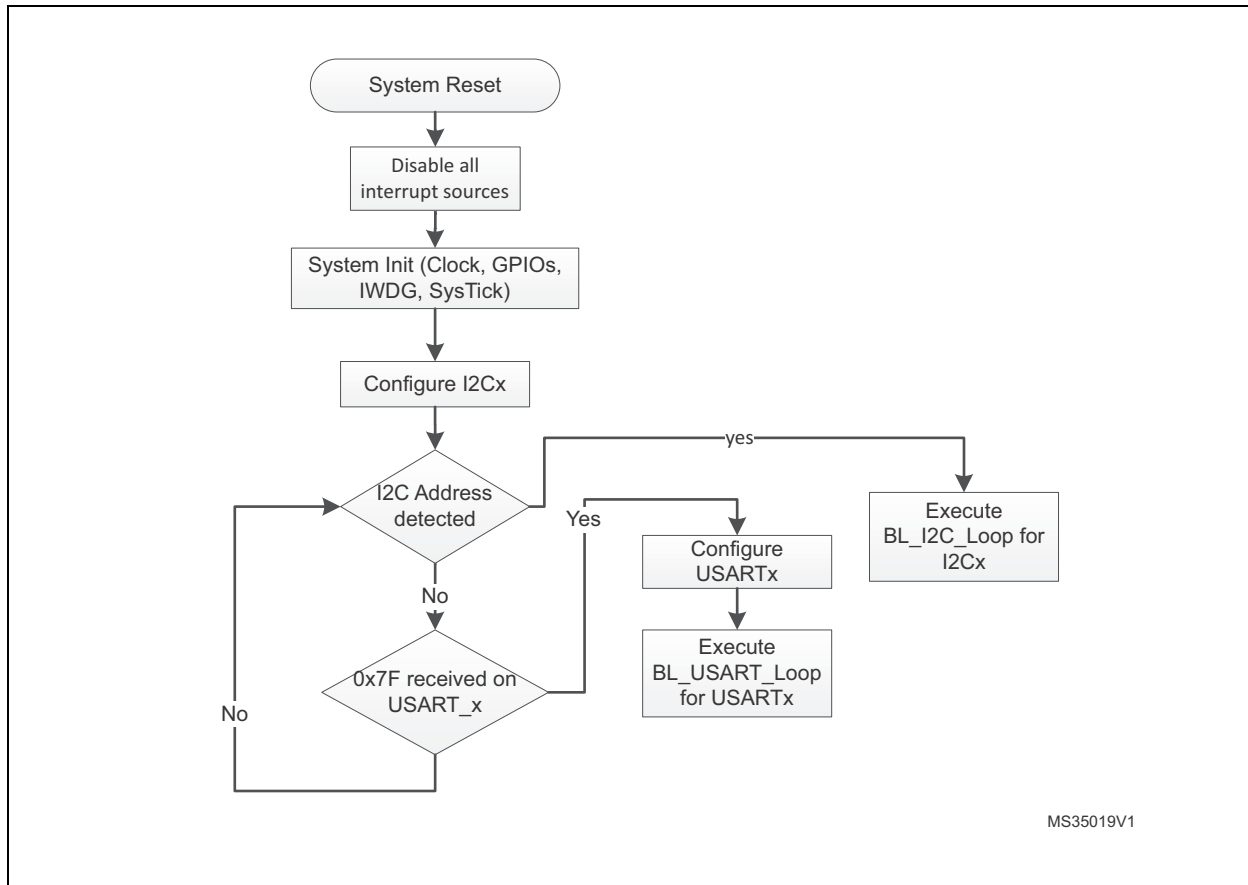

## 17.3 Bootloader version

The following table lists the STM32F358xx devices bootloader versions.

Table 37. STM32F358xx bootloader versions

Bootloader version number	Description	Known limitations
V5.0	Initial bootloader version	For USART1 and USART2 interfaces, the maximum baudrate supported by the bootloader is 57600 baud.



## 18 STM32F42xxx/43xxx devices bootloader

### 18.1 Bootloader V7.x

#### 18.1.1 Bootloader configuration

The STM32F42xxx/43xxx bootloader is activated by applying pattern5 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 38. STM32F42xxx/43xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 24 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or I2C interfaces are selected (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the CAN or the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	8 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

**Table 38. STM32F42xxx/43xxx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8 bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized the USART3 configuration is: 8 bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized the USART3 configuration is: 8 bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <i>Note: CAN1 is clocked during CAN2 bootloader execution because CAN1 manages the communication between CAN2 and SRAM.</i>
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111000x (where x = 0 for write and x = 1 for read).
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB9 pin: data line is used in open-drain mode.
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx and I2Cx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

### 18.1.2 Bootloader selection


The figure below shows the bootloader selection mechanism.

Figure 22. Dual Bank Boot Implementation for STM32F42xxx/43xxx Bootloader V7.x

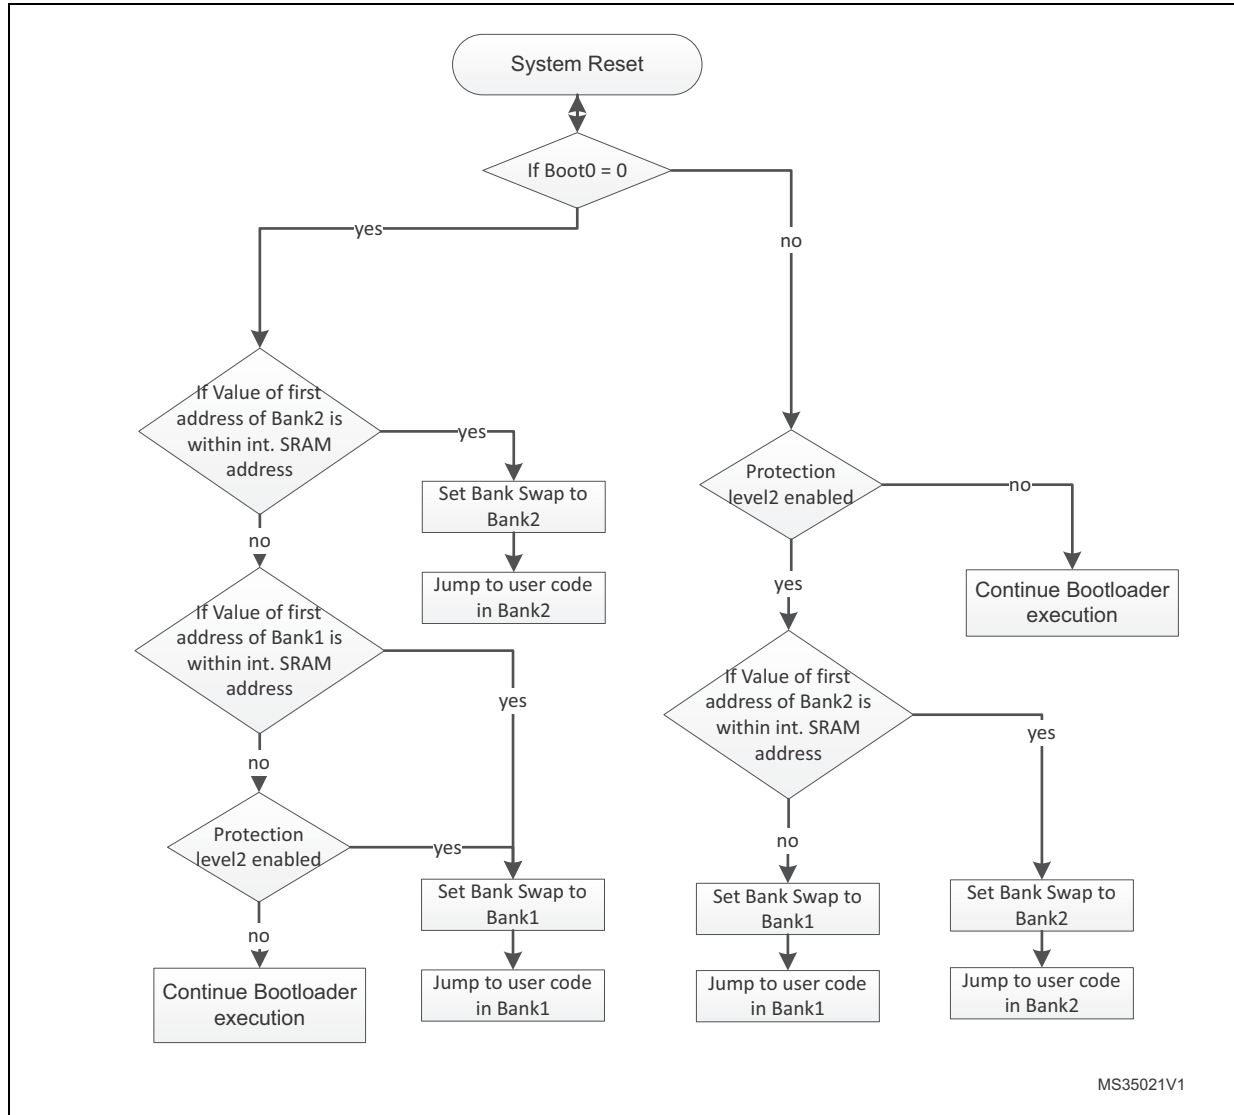

MS35021V1

Figure 23. Bootloader V7.x selection for STM32F42xxx/43xxx

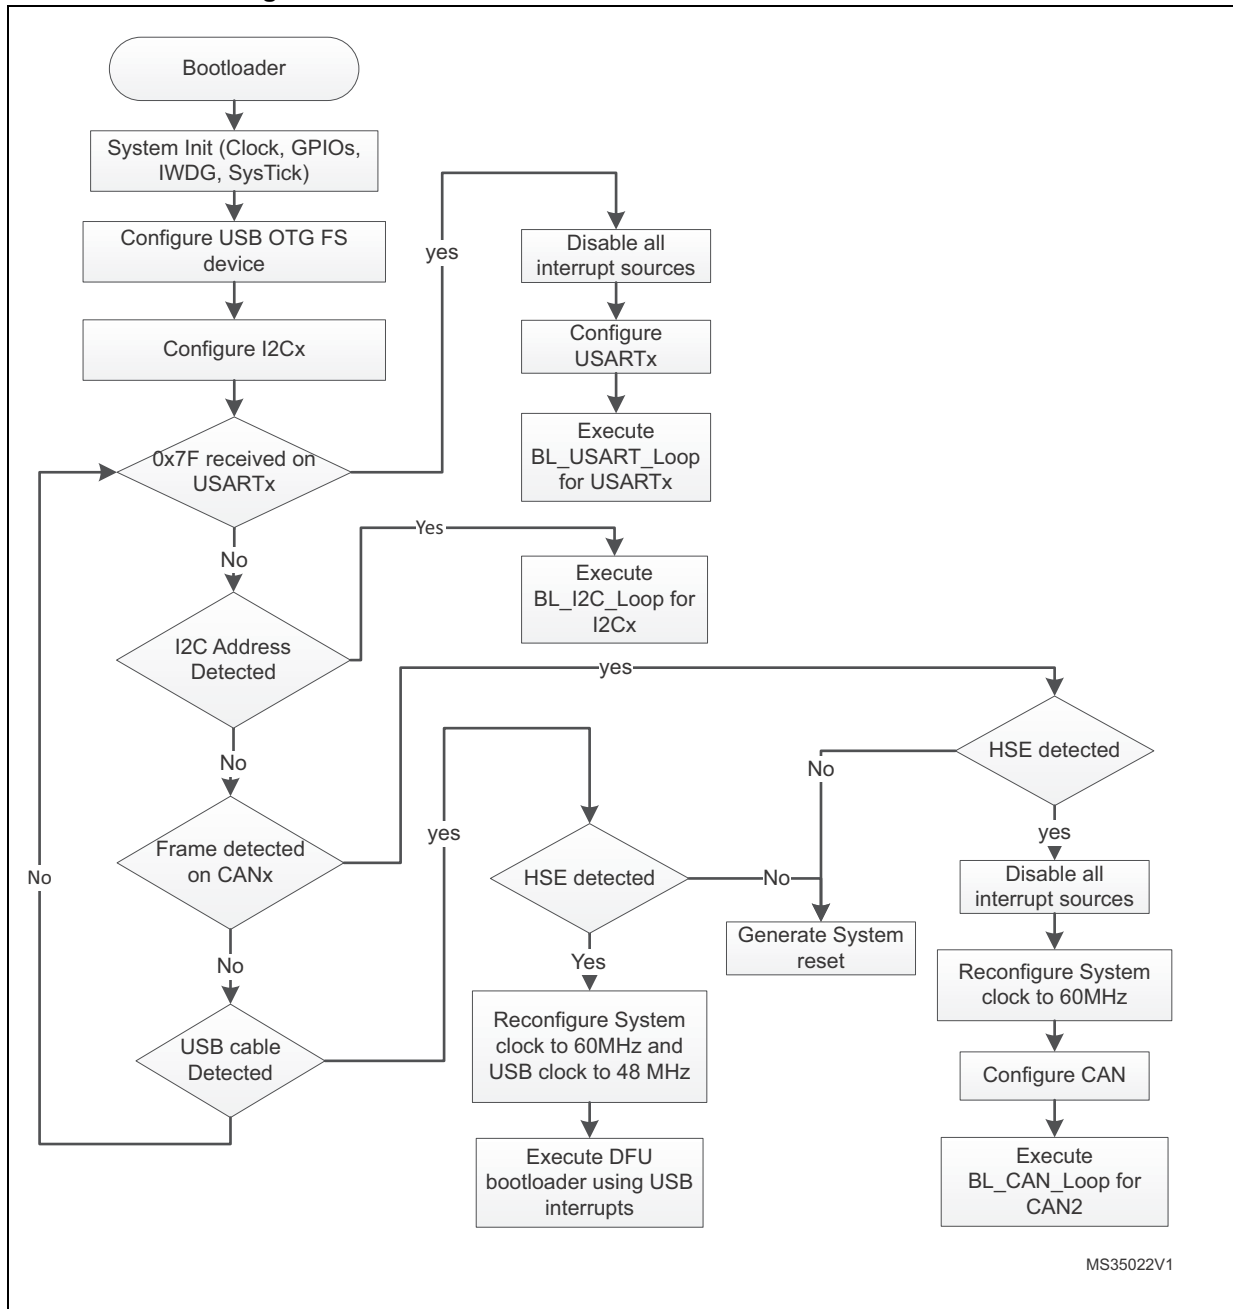

### 18.1.3 Bootloader version

The following table lists the STM32F42xxx/43xxx devices bootloader V7.x versions.

**Table 39. STM32F42xxx/43xxx bootloader V7.x versions**

Bootloader version number	Description	Known limitations
V7.0	Initial bootloader version	For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection.

## 18.2 Bootloader V9.x

### 18.2.1 Bootloader configuration

The STM32F42xxx/43xxx bootloader is activated by applying pattern5 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

Table 40. STM32F42xxx/43xxx configuration in System memory boot mode

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or SPI or I2C interfaces are selected (once CAN or DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the CAN or the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode

**Table 40. STM32F42xxx/43xxx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during CAN2 bootloader execution because CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111000x (where x = 0 for write and x = 1 for read).
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB9 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111000x (where x = 0 for write and x = 1 for read).
	I2C2_SCL pin	Input/Output	PF1 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PF0 pin: data line is used in open-drain mode.
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111000x (where x = 0 for write and x = 1 for read).
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PC9 pin: data line is used in open-drain mode.



Table 40. STM32F42xxx/43xxx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PI3 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PI2 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PI1 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PI0 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI4 bootloader	SPI4	Enabled	The SPI4 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI4_MOSI pin	Input	PE14 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI4_MISO pin	Output	PE13 pin: Slave data output line, used in Push-pull pull-down mode
	SP4_SCK pin	Input	PE12 pin: Slave clock line, used in Push-pull pull-down mode
	SPI4_NSS pin	Input	PE11 pin: Slave Chip Select pin used in Push-pull pull-down mode.

**Table 40. STM32F42xxx/43xxx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx, I2Cx and SPIx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

### 18.2.2 Bootloader selection

The figures below show the bootloader selection mechanism.

Figure 24. Dual Bank Boot Implementation for STM32F42xxx/43xxx Bootloader V9.x


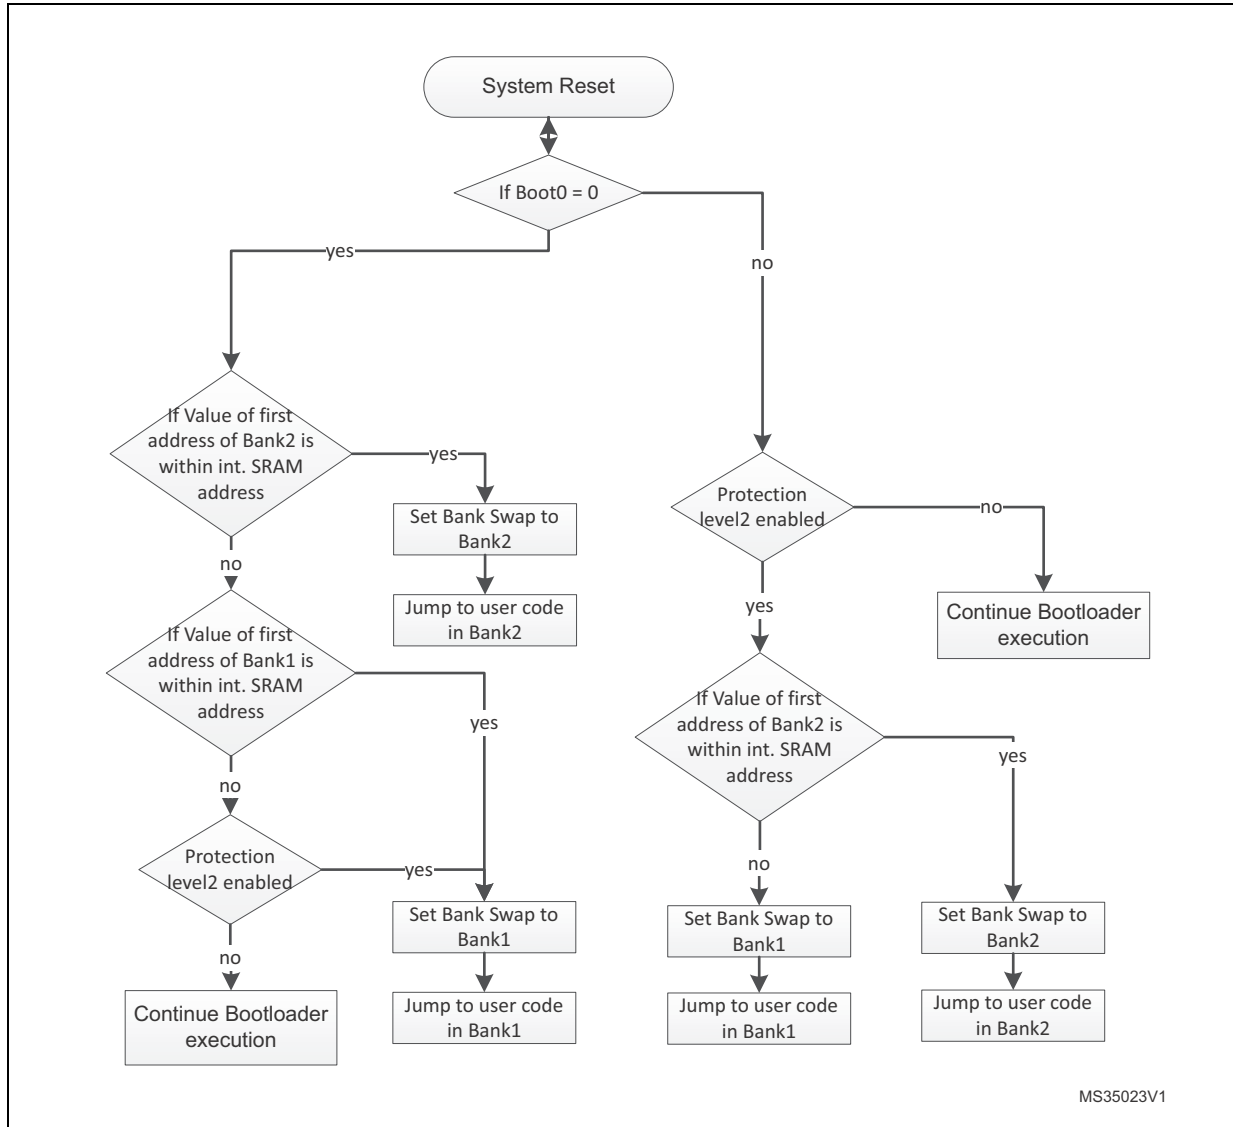


Figure 25. Bootloader V9.x selection for STM32F42xxx/43xxx

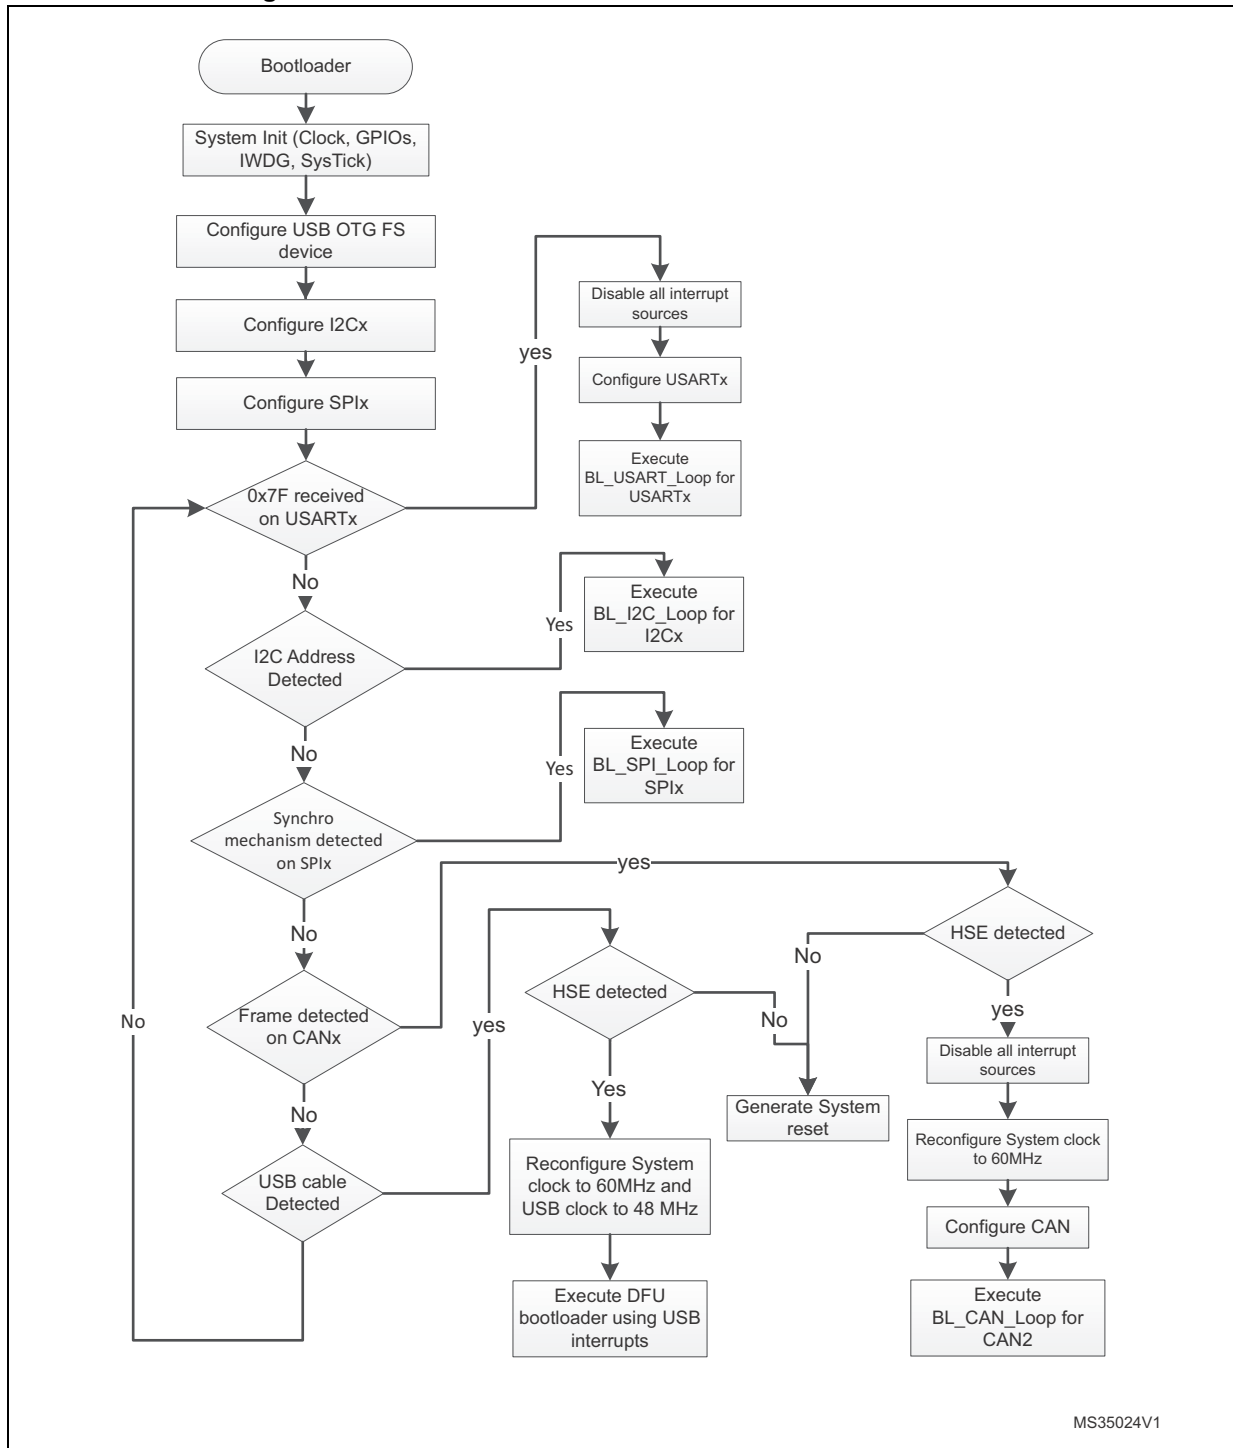

### 18.2.3 Bootloader version

The following table lists the STM32F42xxx/43xxx devices bootloader V9.x versions.

**Table 41. STM32F42xxx/43xxx bootloader V9.x versions**

Bootloader version number	Description	Known limitations
V9.0	This bootloader is an updated version of Bootloader v7.0. This new version of bootloader supports I2C2, I2C3, SPI1, SPI2 and SPI4 interfaces. The RAM used by this bootloader is increased from 8Kb to 12Kb. The ID of this bootloader is 0x90. The connection time is increased.	None
V9.1	This bootloader is an updated version of Bootloader v9.0. This new version implements the new I2C No-stretch commands (I2C protocol v1.1) and the capability of disabling PcROP when RDP1 is enabled with ReadOutUnprotect command for all protocols(USB, USART, CAN, I2C and SPI). The ID of this bootloader is 0x91	For the CAN interface, the Write Unprotect command is not functional. Instead you can use Write Memory command and write directly to the option bytes in order to disable the write protection.

## 19 STM32F04xxx devices bootloader

### 19.1 Bootloader configuration

The STM32F04xxx bootloader is activated by applying pattern6 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 42. STM32F04xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 48 MHz with HSI 48 MHz as clock source.
		-	The Clock Recovery System (CRS) is enabled for the DFU bootloaders to allow USB to be clocked by HSI 48 MHz.
	RAM	-	6 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	13 Kbytes starting from address 0x1FFFC400, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA15 pin: USART2 in reception mode
	USART2_TX pin	Output	PA14 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.

Table 42. STM32F04xxx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111110x (where x = 0 for write and x = 1 for read).
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external pull-up resistor is required.


*Note:* After the STM32F04xxx devices have booted in Bootloader mode using USART2, the serial wire debug (SWD) communication is no more possible until the system is reset, because SWD uses PA14 pin (SWCLK) which is already used by the Bootloader (USART2\_RX).

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 19.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 26. Bootloader selection for STM32F04xxx**

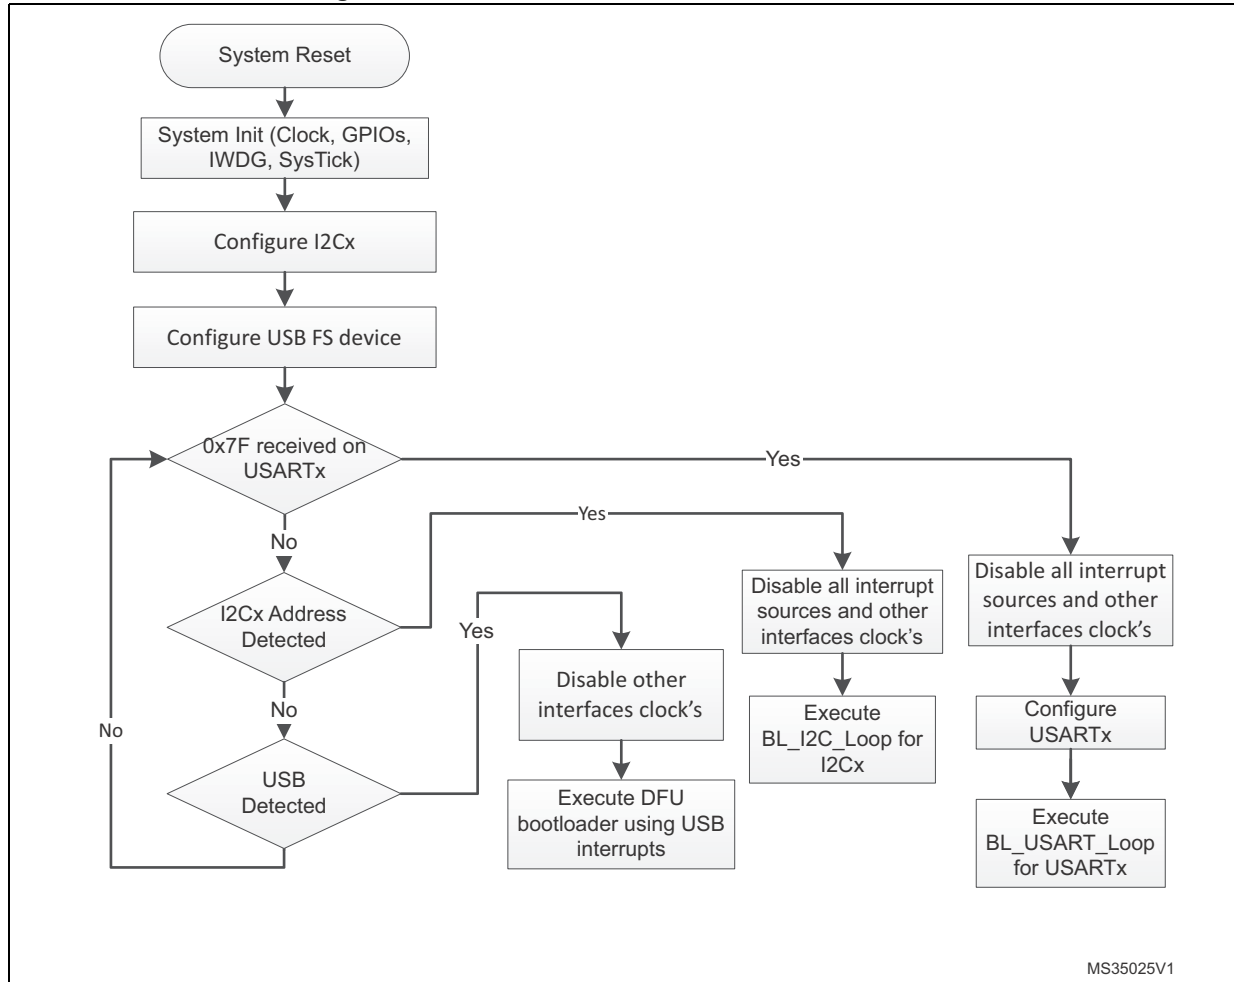

## 19.3 Bootloader version

The following table lists the STM32F04xxx devices bootloader versions:

**Table 43. STM32F04xxx bootloader versions**

Bootloader version number	Description	Known limitations
V10.0	Initial bootloader version	When the user application configures a value of HSI TRIM bits (in RCC_CR register) and then jumps to the bootloader, the HSITRIM value is set to (0) at bootloader startup



## 20 STM32F07xxx devices bootloader

### 20.1 Bootloader configuration

The STM32F07xxx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 44. STM32F07xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 48 MHz with HSI 48 MHz as clock source.
		-	The Clock Recovery System (CRS) is enabled for the DFU bootloaders to allow USB to be clocked by HSI 48 MHz.
	RAM	-	6 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	12 Kbytes starting from address 0x1FFFC800, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA15 pin: USART2 in reception mode
	USART2_TX pin	Output	PA14 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.

**Table 44. STM32F07xxx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111011x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external pull-up resistor is required.


*Note:* After the STM32F07xxx devices have booted in Bootloader mode using USART2, the serial wire debug (SWD) communication is no more possible until the system is reset, because SWD uses PA14 pin (SWCLK) which is already used by the Bootloader (USART2\_RX).

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 20.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 27. Bootloader selection for STM32F07xxx**

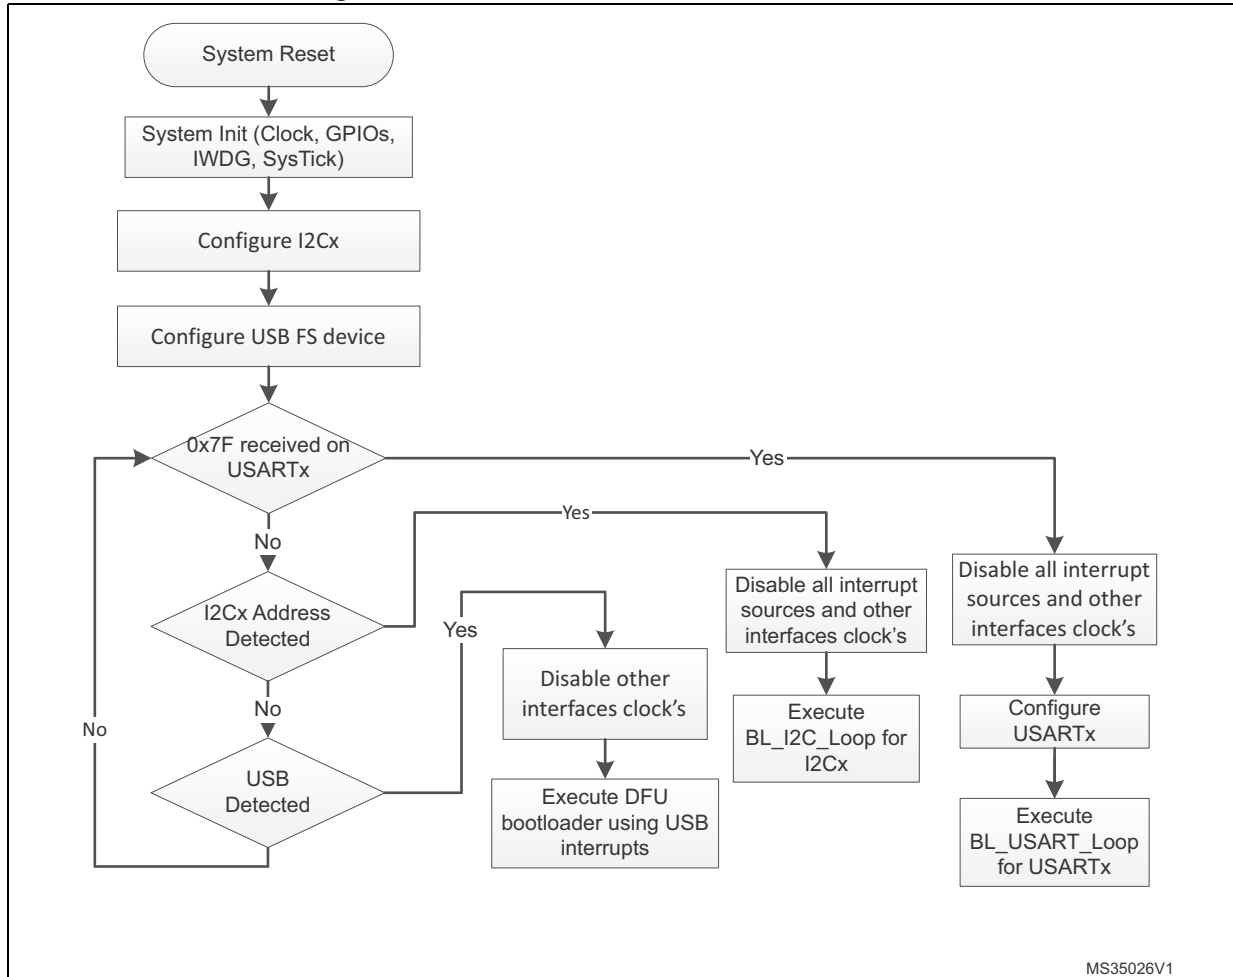

## 20.3 Bootloader version

The following table lists the STM32F07xxx devices bootloader versions:

**Table 45. STM32F07xxx bootloader versions**

Bootloader version number	Description	Known limitations
V10.1	Initial bootloader version	When the user application configures a value of HSI TRIM bits (in RCC_CR register) and then jumps to the bootloader, the HSITRIM value is set to (0) at bootloader startup

## 21 STM32F301xx/302x4(6/8) devices bootloader

### 21.1 Bootloader configuration

The STM32F301xx/302x4(6/8) bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 46. STM32F301xx/302x4(6/8) configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 48 MHz with HSI 48 MHz as clock source.
		HSE enabled	The external clock can be used for all bootloader interfaces and should have one the following values 24, 18,16, 12, 9, 8, 6, 4, 3 MHz. The PLL is used to generate the USB 48 MHz clock and the 48 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates system reset.
	RAM	-	6 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	8 Kbytes starting from address 0x1FFFD800, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode

Table 46. STM32F301xx/302x4(6/8) configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The bootloader has two case of operation depending on the presence of the external clock (HSE) at bootloader startup:


- If HSE is present and has a value of 24, 18, 16, 12, 9, 8, 6, 4 or 3 MHz, the system clock is configured to 48 MHz with HSE as clock source. The DFU interface, USART1 and USART2 are functional and can be used to communicate with the bootloader device.
- If HSE is not present, the HSI is kept as default clock source and only USART1 and USART2 are functional.

*The external clock (HSE) must be kept if it's connected at bootloader startup because it will be used as system clock source.*

## 21.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 28. Bootloader selection for STM32F301xx/302x4(6/8)**

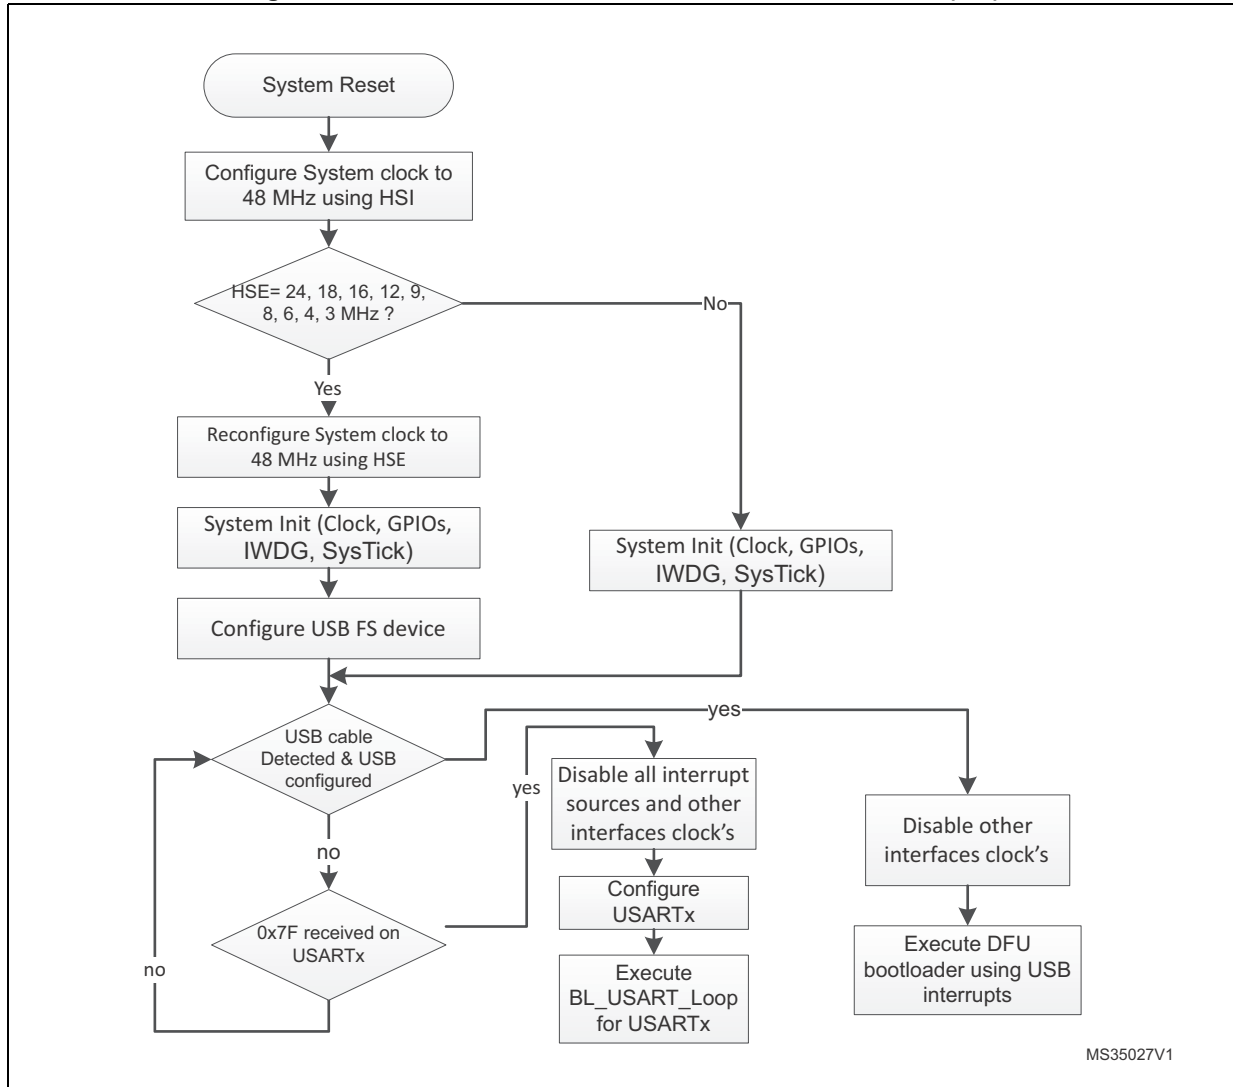

MS35027V1

## 21.3 Bootloader version

The following table lists the STM32F301xx/302x4(6/8) devices bootloader versions:

**Table 47. STM32F301xx/302x4(6/8) bootloader versions**

Bootloader version number	Description	Known limitations
V4.0	Initial bootloader version	None

## 22 STM32F318xx devices bootloader

### 22.1 Bootloader configuration

The STM32F318xx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 48. STM32F318xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz with HSI 8 MHz as clock source.
	RAM	-	6 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	8 Kbytes starting from address 0x1FFFD800, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111101x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.

**Table 48. STM32F318xx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111101x (where x = 0 for write and x = 1 for read) and digital filter disabled.
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PB5 pin: data line is used in open-drain mode.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 22.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 29. Bootloader selection for STM32F318xx**

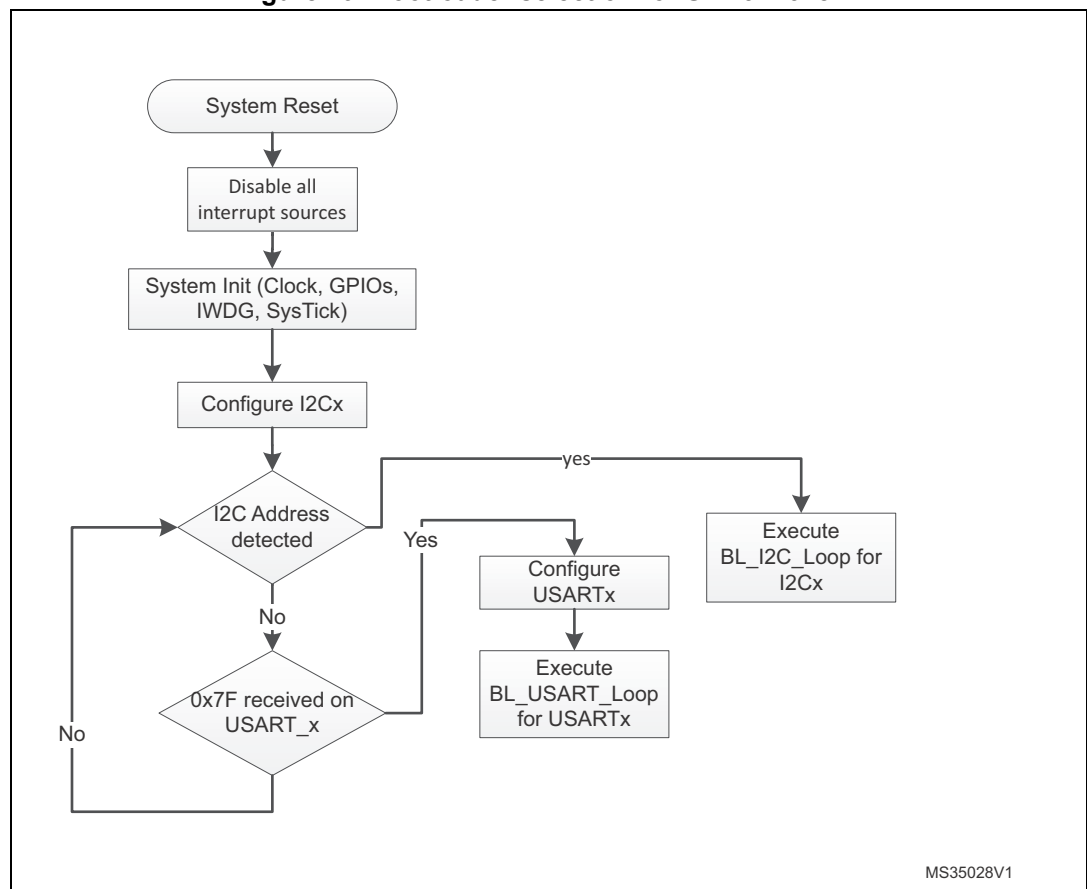



## 22.3 Bootloader version

The following table lists the STM32F318xx devices bootloader versions:

**Table 49. STM32F318xx bootloader versions**

<b>Bootloader version number</b>	<b>Description</b>	<b>Known limitations</b>
V5.0	Initial bootloader version	None

## 23 STM32F303x4(6/8)/334xx/328xx devices bootloader

### 23.1 Bootloader configuration

The STM32F303x4(6/8)/334xx/328xx bootloader is activated by applying pattern2 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 50. STM32F303x4(6/8)/334xx/328xx configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz with HSI 8 MHz as clock source.
	RAM	-	6 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	8 Kbytes starting from address 0x1FFFD800, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111111x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

### 23.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 30. Bootloader selection for STM32F303x4(6/8)/334xx/328xx

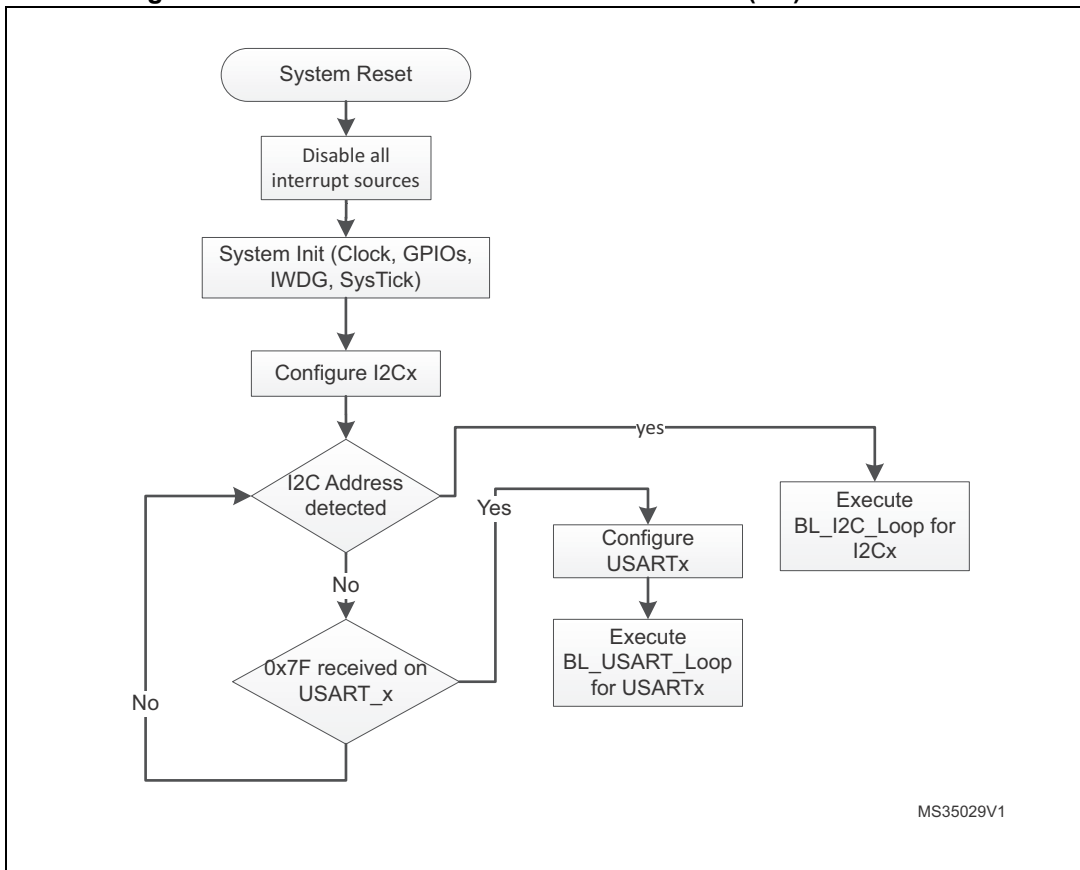

### 23.3 Bootloader version

The following table lists the STM32F303x4(6/8)/334xx/328xx devices bootloader versions:

Table 51. STM32F303x4(6/8)/334xx/328xx bootloader versions

Bootloader version number	Description	Known limitations
V5.0	Initial bootloader version	None

## 24 STM32F401xB(C) devices bootloader

### 24.1 Bootloader configuration

The STM32F401xB(C) bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 52. STM32F401xB(C) configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or SPI or I2C interfaces are selected (once DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

Table 52. STM32F401xB(C) configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C2_SCL pin	Input/Output	PB10 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PB3 pin: data line is used in open-drain mode.
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PB4 pin: data line is used in open-drain mode.

**Table 52. STM32F401xB(C) configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PB15 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PB14 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PB13 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PB12 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI3 bootloader	SPI3	Enabled	The SPI3 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI3_MOSI pin	Input	PC12 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI3_MISO pin	Output	PC11 pin: Slave data output line, used in Push-pull pull-down mode
	SPI3_SCK pin	Input	PC10 pin: Slave clock line, used in Push-pull pull-down mode
	SPI3_NSS pin	Input	PA15 pin: Slave Chip Select pin used in Push-pull pull-down mode.

**Table 52. STM32F401xB(C) configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx, I2Cx and SPIx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

## 24.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 31. Bootloader selection for STM32F401xB(C)**

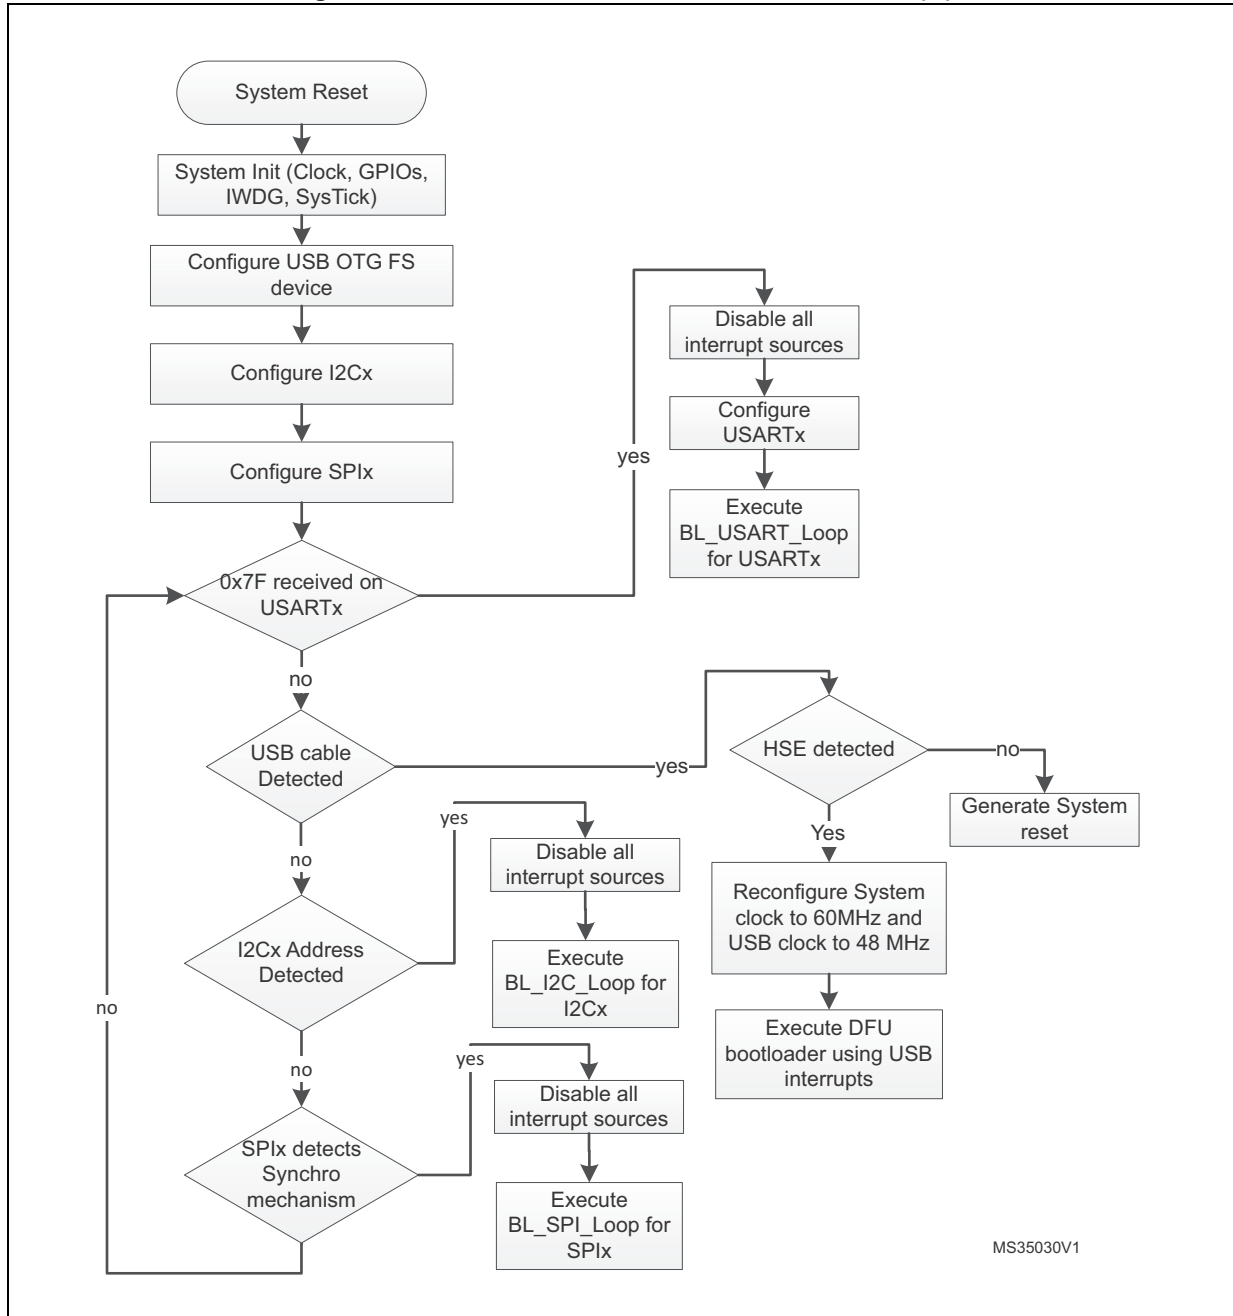

MS35030V1



## 24.3 Bootloader version

The following table lists the STM32F401xB(C) devices bootloader version.

**Table 53. STM32F401xB(C) bootloader versions**

<b>Bootloader version number</b>	<b>Description</b>	<b>Known limitations</b>
V13.0	Initial bootloader version	None

## 25 STM32F401xD(E) devices bootloader

### 25.1 Bootloader configuration

The STM32F401xD(E) bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 54. STM32F401xD(E) configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or SPI or I2C interfaces are selected (once DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.

Table 54. STM32F401xD(E) configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C2_SCL pin	Input/Output	PB10 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PB3 pin: data line is used in open-drain mode.
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PB4 pin: data line is used in open-drain mode.

**Table 54. STM32F401xD(E) configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PB15 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PB14 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PB13 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PB12 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI3 bootloader	SPI3	Enabled	The SPI3 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI3_MOSI pin	Input	PC12 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI3_MISO pin	Output	PC11 pin: Slave data output line, used in Push-pull pull-down mode
	SPI3_SCK pin	Input	PC10 pin: Slave clock line, used in Push-pull pull-down mode
	SPI3_NSS pin	Input	PA15 pin: Slave Chip Select pin used in Push-pull pull-down mode.

Table 54. STM32F401xD(E) configuration in System memory boot mode (continued)


Bootloader	Feature/Peripheral	State	Comment
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx, I2Cx and SPIx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

## 25.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 32. Bootloader selection for STM32F401xD(E)**

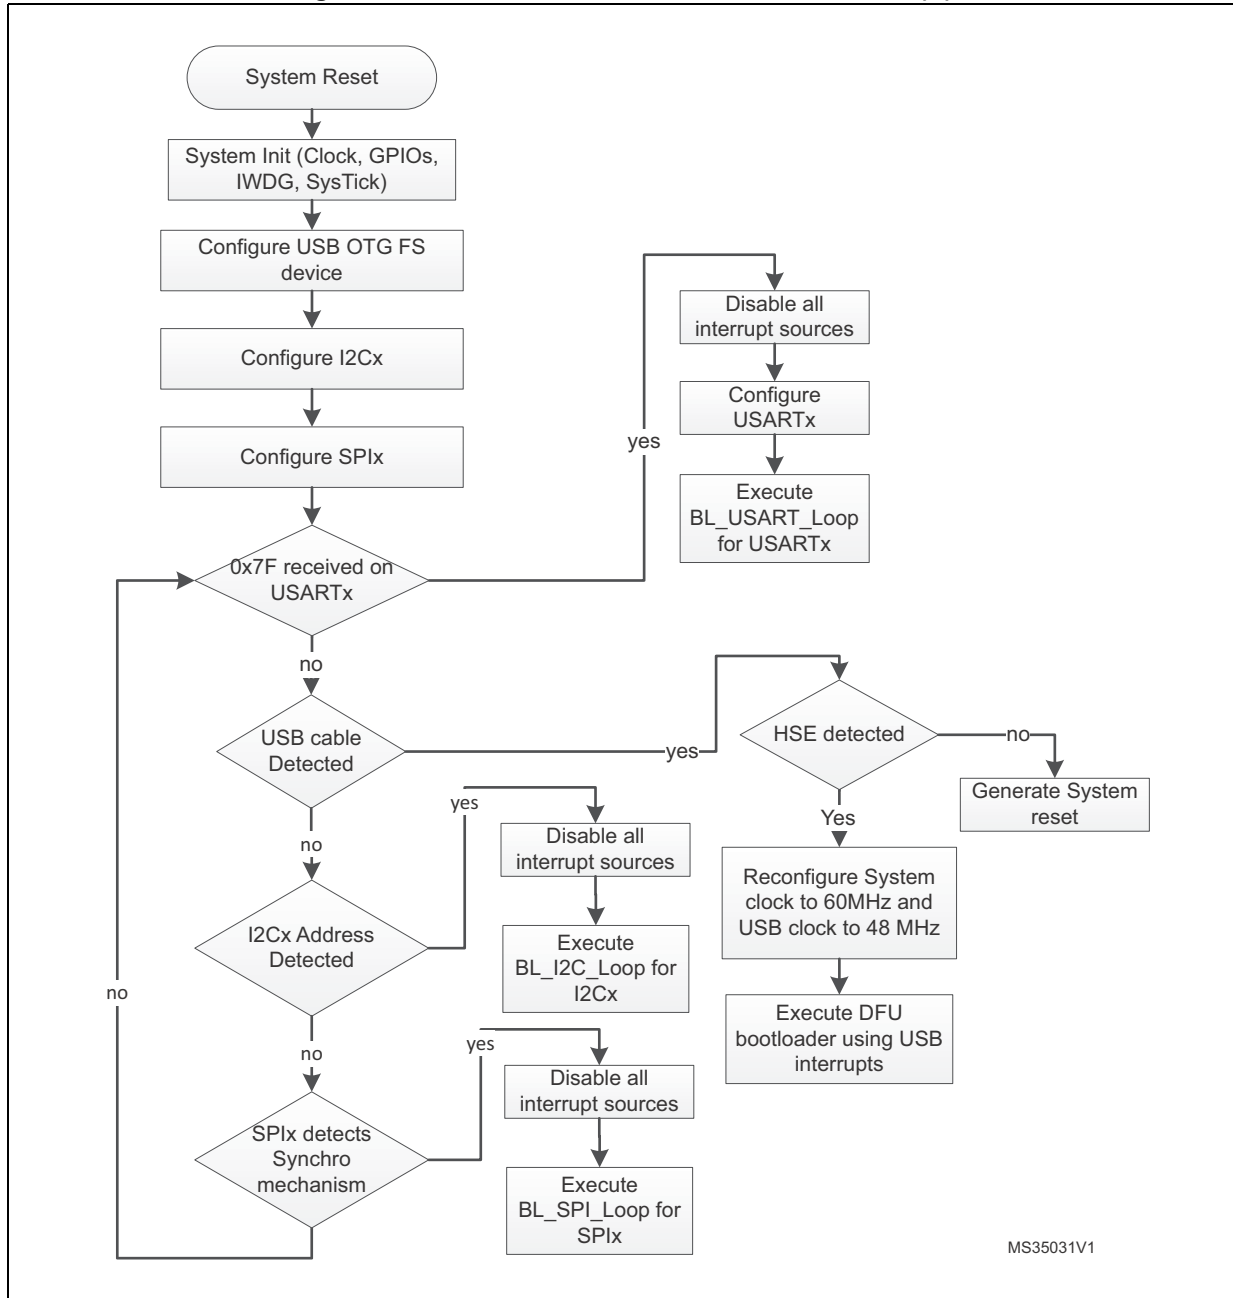

## 25.3 Bootloader version

The following table lists the STM32F401xD(E) devices bootloader version.

**Table 55. STM32F401xD(E) bootloader versions**

<b>Bootloader version number</b>	<b>Description</b>	<b>Known limitations</b>
V13.1	Initial bootloader version	None

## 26 STM32F411xx devices bootloader

### 26.1 Bootloader configuration

The STM32F411xx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 56. STM32F411xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 60 MHz using the PLL. The HSI clock source is used at startup (interface detection phase) and when USART or SPI or I2C interfaces are selected (once DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The system clock frequency is 60 MHz. The HSE clock source is used only when the DFU (USB FS Device) interfaces are selected. The external clock must provide a frequency multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to [1.62 V, 2.1 V]. In this range internal Flash write operations are allowed only in byte format (Half-Word, Word and Double-Word operations are not allowed). The voltage range can be configured in run time using bootloader commands.



Table 56. STM32F411xx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C2_SCL pin	Input/Output	PB10 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PB3 pin: data line is used in open-drain mode.
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111001x (where x = 0 for write and x = 1 for read)
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PB4 pin: data line is used in open-drain mode.

**Table 56. STM32F411xx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PB15 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PB14 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PB13 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PB12 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI3 bootloader	SPI3	Enabled	The SPI3 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI3_MOSI pin	Input	PC12 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI3_MISO pin	Output	PC11 pin: Slave data output line, used in Push-pull pull-down mode
	SPI3_SCK pin	Input	PC10 pin: Slave clock line, used in Push-pull pull-down mode
	SPI3_NSS pin	Input	PA15 pin: Slave Chip Select pin used in Push-pull pull-down mode.

**Table 56. STM32F411xx configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
	TIM11	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.

The system clock is derived from the embedded internal high-speed RC for USARTx, I2Cx and SPIx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.

## 26.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 33. Bootloader selection for STM32F411xx**

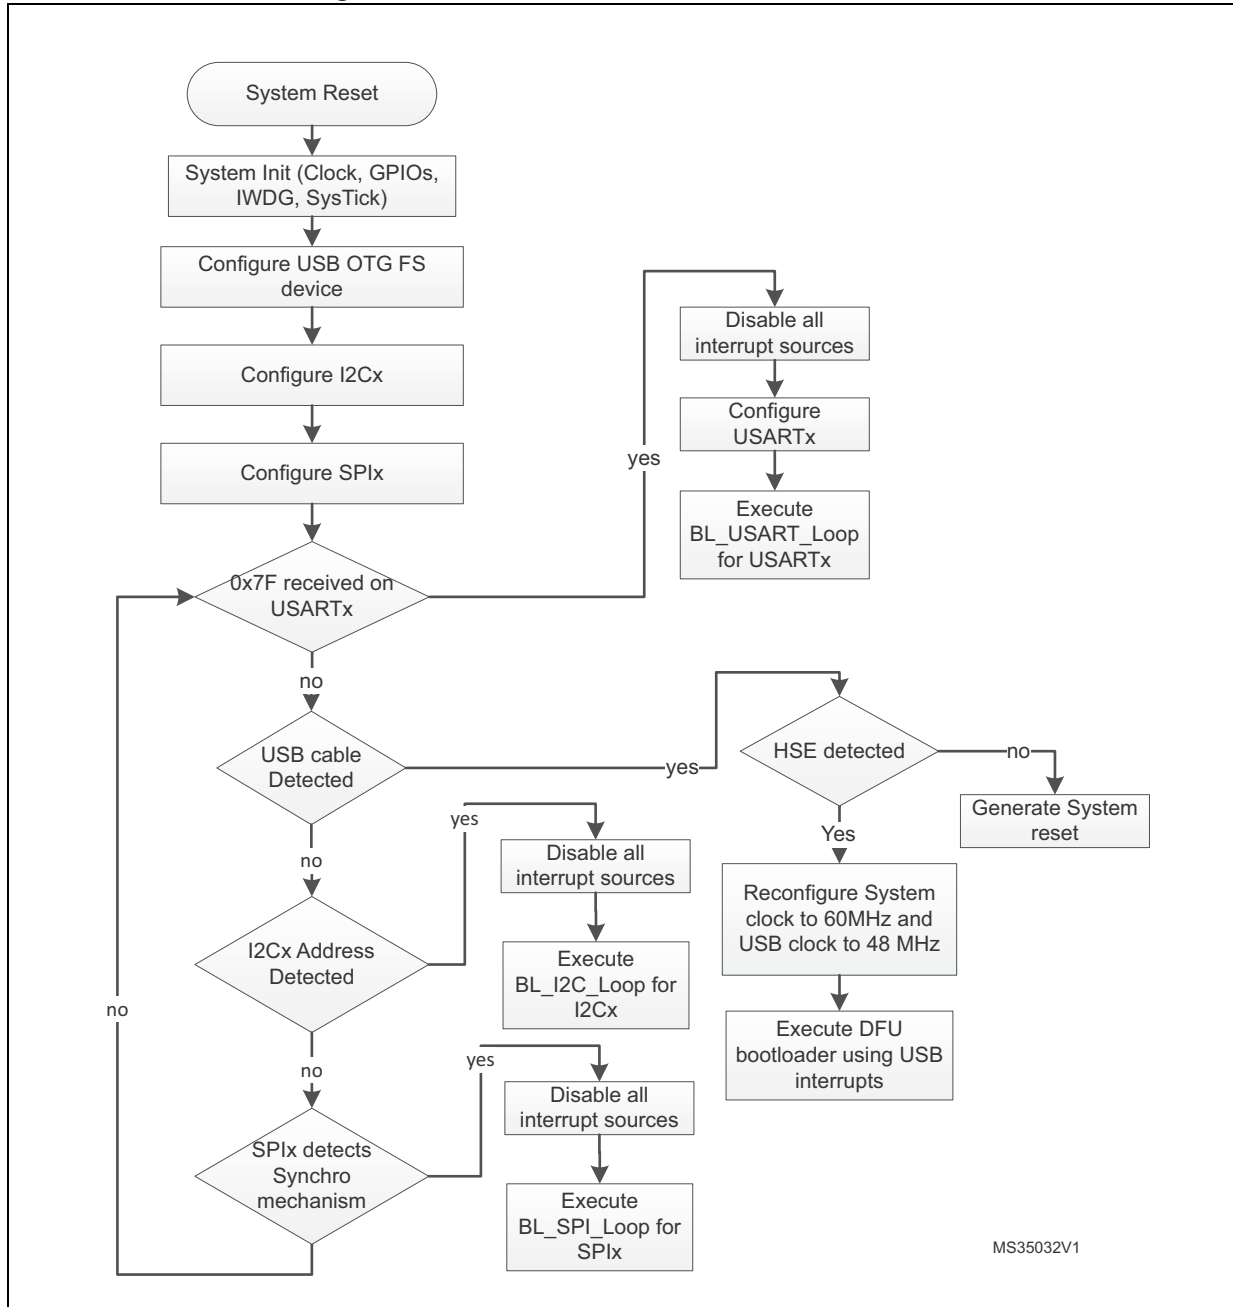

## 26.3 Bootloader version

The following table lists the STM32F411xx devices bootloader version.

**Table 57. STM32F411xx bootloader versions**

<b>Bootloader version number</b>	<b>Description</b>	<b>Known limitations</b>
V13.0	Initial bootloader version	None

## 27 STM32L1xxx6(8/B)A devices bootloader

### 27.1 Bootloader configuration

The STM32L1xxx6(8/B)A bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 58. STM32L1xxx6(8/B)A configuration in System memory boot mode**


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 16 MHz.
	RAM	-	2 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
	System memory	-	4 Kbytes starting from address 0x1FF00000 contain the bootloader firmware.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	Voltage range is set to Voltage Range 1.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host.

The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.

## 27.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 34. Bootloader selection for STM32L1xxx6(8/B)A devices**

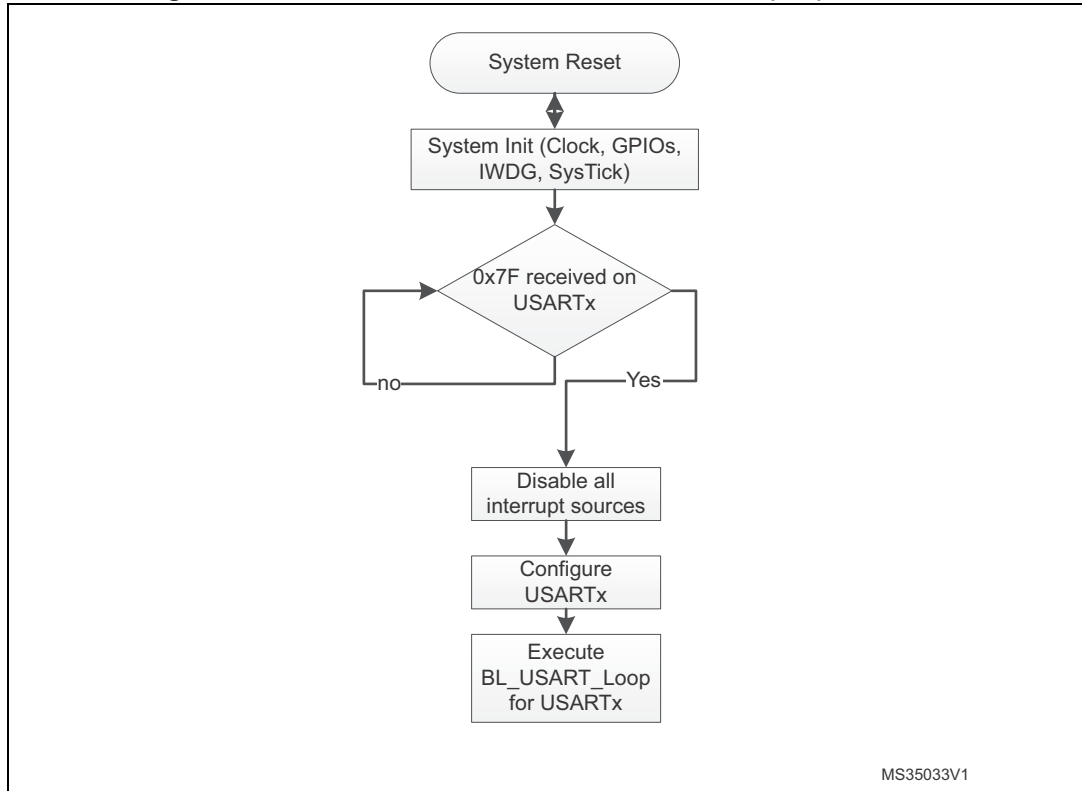

## 27.3 Bootloader version

The following table lists the STM32L1xxx6(8/B)A devices bootloader versions:

**Table 59. STM32L1xxx6(8/B)A bootloader versions**

Bootloader version number	Description	Known limitations
V2.0	Initial bootloader version	When a Read Memory command or Write Memory command is issued with an unsupported memory address and a correct address checksum (ie. address 0x6000 0000), the command is aborted by the bootloader device, but the NACK (0x1F) is not sent to the host. As a result, the next 2 bytes (which are the number of bytes to be read/written and its checksum) are considered as a new command and its checksum. <sup>(1)</sup>

1. If the “number of data - 1” (N-1) to be read/written is not equal to a valid command code, then the limitation is not perceived from the host since the command is NACKed anyway (as an unsupported new command).

## 28 STM32L1xxxE devices bootloader

### 28.1 Bootloader configuration

The STM32L1xxxE bootloader is activated by applying pattern4 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 60. STM32L1xxxE configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 16 MHz using the HSI. This is used only for USART1 and USART2 bootloaders and during USB detection for DFU bootloader (once the DFU bootloader is selected, the clock source will be derived from the external crystal).
		HSE enabled	The external clock is mandatory only for DFU bootloader and it must be in the following range: [24, 16, 12, 8, 6, 4, 3, 2] MHz. The PLL is used to generate the USB 48 MHz clock and the 32 MHz clock for the system clock.
		-	The Clock Security System (CSS) interrupt is enabled for the DFU bootloader. Any failure (or removal) of the external clock generates system reset.
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value and is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power		Voltage range is set to Voltage Range 1.
	System memory	-	8 Kbytes starting from address 0x1FF0 0000. This area contains the bootloader firmware.
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware.
USART1 bootloader	USART1	Enabled	Once initialized, the USART1 configuration is: 8 bits, even parity and 1 Stop bit.
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloader.



**Table 60. STM32L1xxxE configuration in System memory boot mode (continued)**


Bootloader	Feature/Peripheral	State	Comment
USART2 bootloader	USART2	Enabled	Once initialized, the USART2 configuration is: 8 bits, even parity and 1 Stop bit. The USART2 uses its remapped pins.
	USART2_RX pin	Input	PD6 pin: USART2 in reception mode
	USART2_TX pin	Output	PD5 pin: USART2 in transmission mode
DFU bootloader	USB	Enabled	USB used in FS mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line An external pull-up resistor 1.5 KOhm must be connected to USB_DP pin.

The system clock is derived from the embedded internal high-speed RC for USARTx bootloader. This internal clock is used also for DFU bootloader but only for the selection phase. An external clock in the range of [24, 16, 12, 8, 6, 4, 3, 2] MHz is required for DFU bootloader execution after the selection phase.

## 28.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 35. Bootloader selection for STM32L1xxxE devices

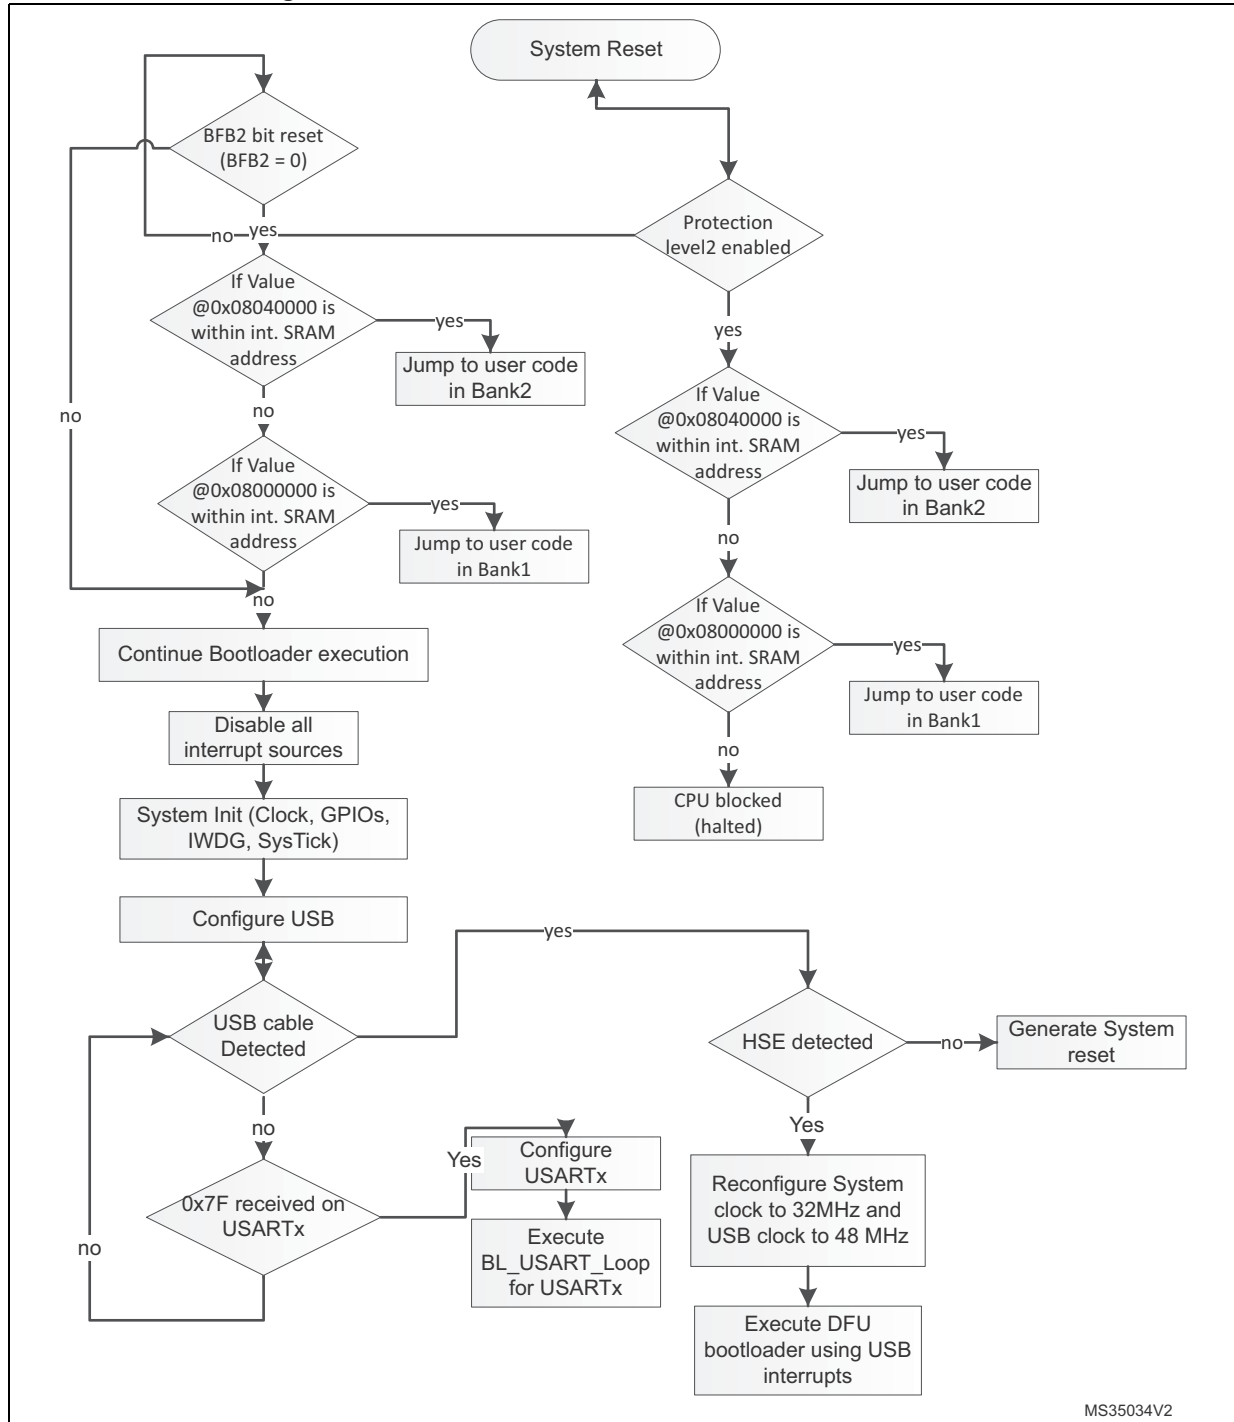

MS35034V2

## 28.3 Bootloader version

The following table lists the STM32L1xxxE devices bootloader versions:

**Table 61. STM32L1xxxE bootloader versions**

Bootloader version number	Description	Known limitations
V4.0	Initial bootloader version	– For the USART interface, two consecutive NACKs (instead of 1 NACK) are sent when a Read Memory or Write Memory command is sent and the RDP level is active.

## 29 STM32L05xxx/06xxx devices bootloader

### 29.1 Bootloader configuration

The STM32L05xxx/06xxx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 62. STM32L05xxx/06xxx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 32 MHz with HSI 16 MHz as clock source.
	Power	-	Voltage range is set to Voltage Range 1.
	RAM	-	4 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	4 Kbytes starting from address 0x1FF00000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode
USART1 and USART2 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.

Table 62. STM32L05xxx/06xxx configuration in System memory boot mode (continued)


Bootloader	Feature/Peripheral	State	Comment
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-down mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PB15 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PB14 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PB13 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PB12 pin: Slave Chip Select pin used in Push-pull pull-down mode.

The system clock is derived from the embedded internal high-speed RC for all bootloader interfaces. No external quartz is required for bootloader operations.

## 29.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

**Figure 36. Bootloader selection for STM32L05xxx/06xxx**

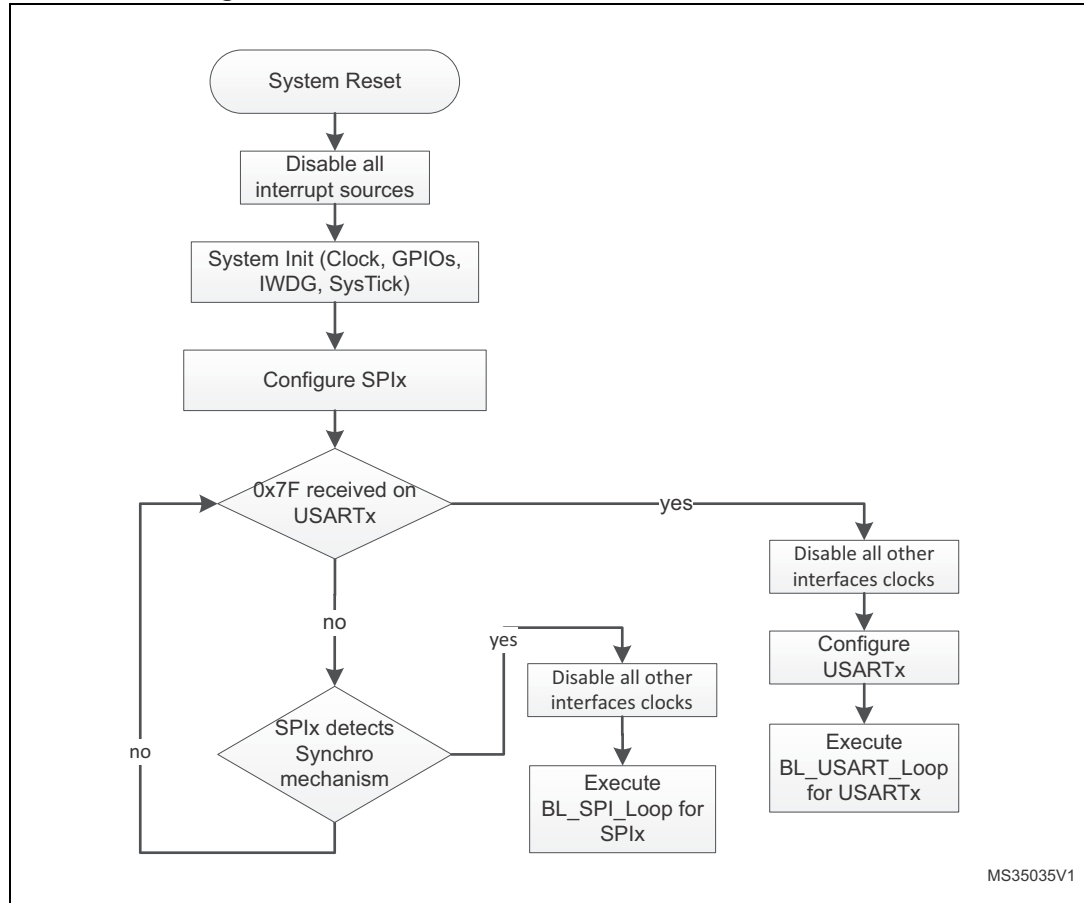

## 29.3 Bootloader version

The following table lists the STM32L05xxx/06xxx devices bootloader versions:

**Table 63. STM32L05xxx/06xxx bootloader versions**

Bootloader version number	Description	Known limitations
V12.0	Initial bootloader version	None

## 30 STM32L476xx/486xx devices bootloader

### 30.1 Bootloader configuration

The STM32L476xx/486xx bootloader is activated by applying pattern5 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 64. STM32L476xx/486xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The HSI is used at startup as clock source for system clock configured to 72 MHz and for USART and I2C bootloader operation.
		HSE enabled	The HSE is used only when the USB interface is selected and the LSE is not present. The HSE must have one of the following value [24,20,18,16,12,9,8,6,4] MHz.
		LSE enabled	The LSE is used to trim the MSI which is configured to 48 MHz as USB clock source. The LSE must be equal to 32,768 KHz. If the LSE is not detected, the HSE will be used instead if USB is connected.
		MSI enabled	The MSI is configured to 48 MHz and will be used as USB clock source. The MSI is used only if LSE is detected, otherwise, HSE will be used if USB is connected.
		-	The Clock Security System (CSS) interrupt is enabled when LSE or HSE is enabled. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	28672 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	The DFU can't be used to communicate with Bootloader if the voltage scaling range 2 is selected. Bootloader firmware doesn't configure voltage scaling range value in PWR_CR1 register.

**Table 64. STM32L476xx/486xx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bits, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode
USART3 bootloader	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USARTx bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b1000011x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB7 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b1000011x (where x = 0 for write and x = 1 for read)
	I2C2_SCL pin	Input/Output	PB10 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PB11 pin: data line is used in open-drain mode.
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address is 0b1000011x (where x = 0 for write and x = 1 for read)
	I2C3_SCL pin	Input/Output	PC0 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PC1 pin: data line is used in open-drain mode.





**Table 64. STM32L476xx/486xx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
	TIM17	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 72 MHz using PLL and HSE.

For USARTx and I2Cx bootloaders no external clock is required.

USB bootloader (DFU) requires either an LSE (low-speed external clock) or a HSE (high-speed external clock) :

- In case, the LSE is present regardless the HSE presence, the MSI will be configured and trimmed by the LSE to provide an accurate clock equal to 48 MHz which is the clock source of the USB. The system clock is kept clocked to 24 MHz by the HSI.
- In case, the HSE is present, the system clock and USB clock will be configured respectively to 24 MHz and 48 MHz with HSE as clock source.

### 30.2 Bootloader selection

The figures below show the bootloader selection mechanism.

**Figure 37.** Dual Bank Boot Implementation for STM32L476xx/486xx Bootloader v10.x


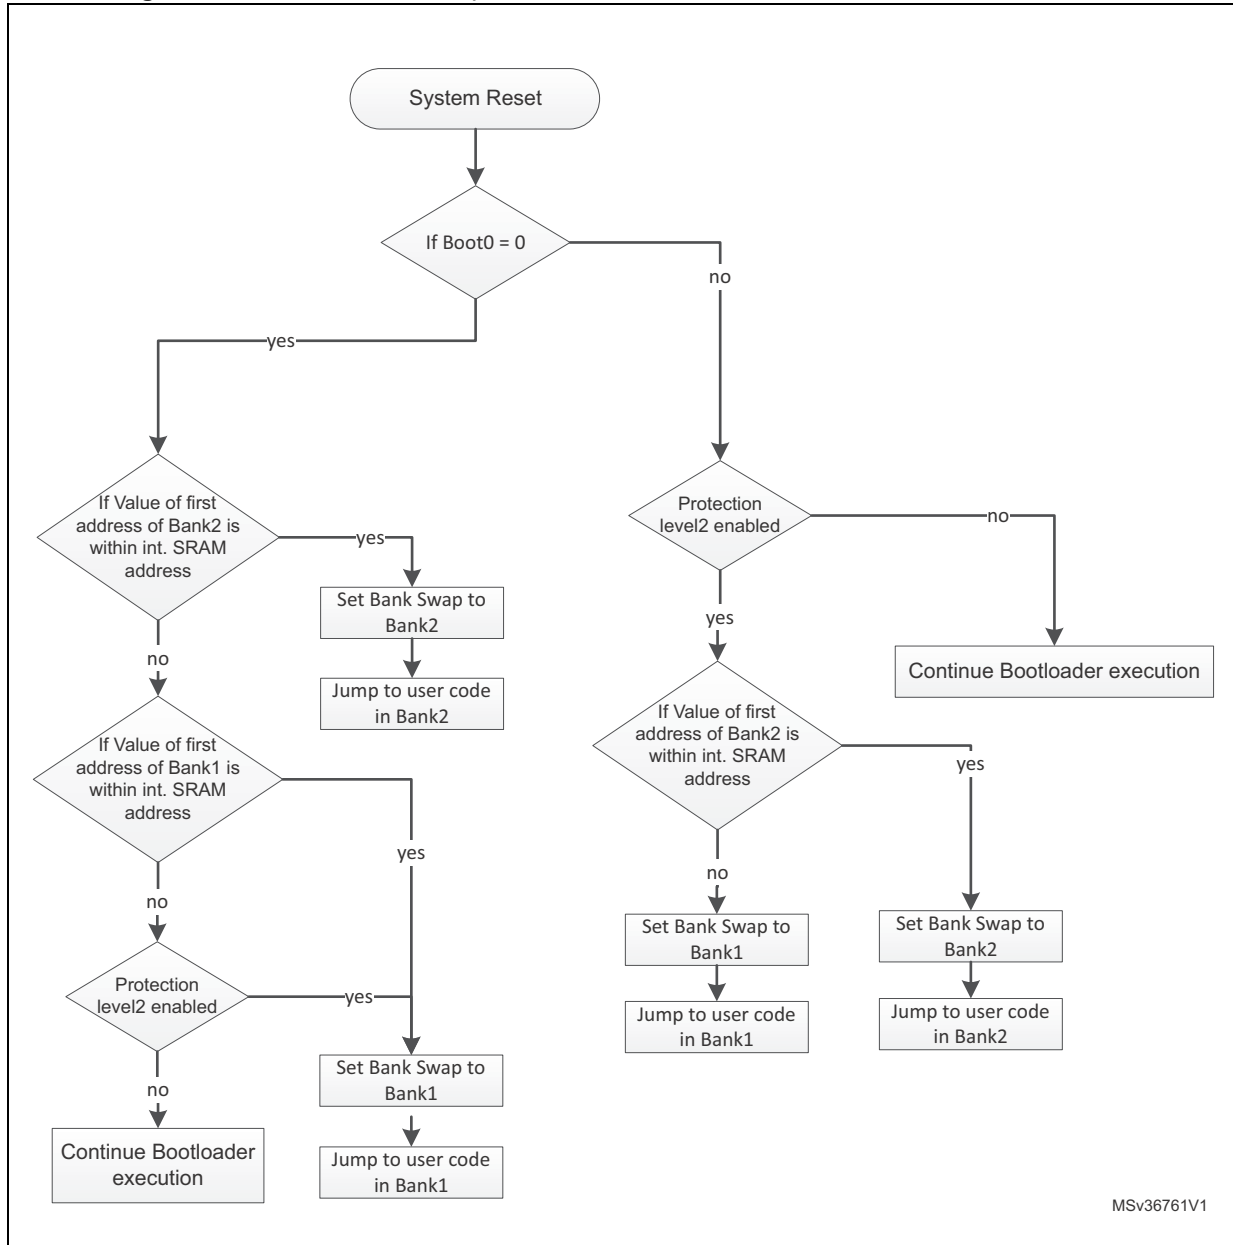


Figure 38.Bootloader V10.x selection for STM32L476xx/486xx

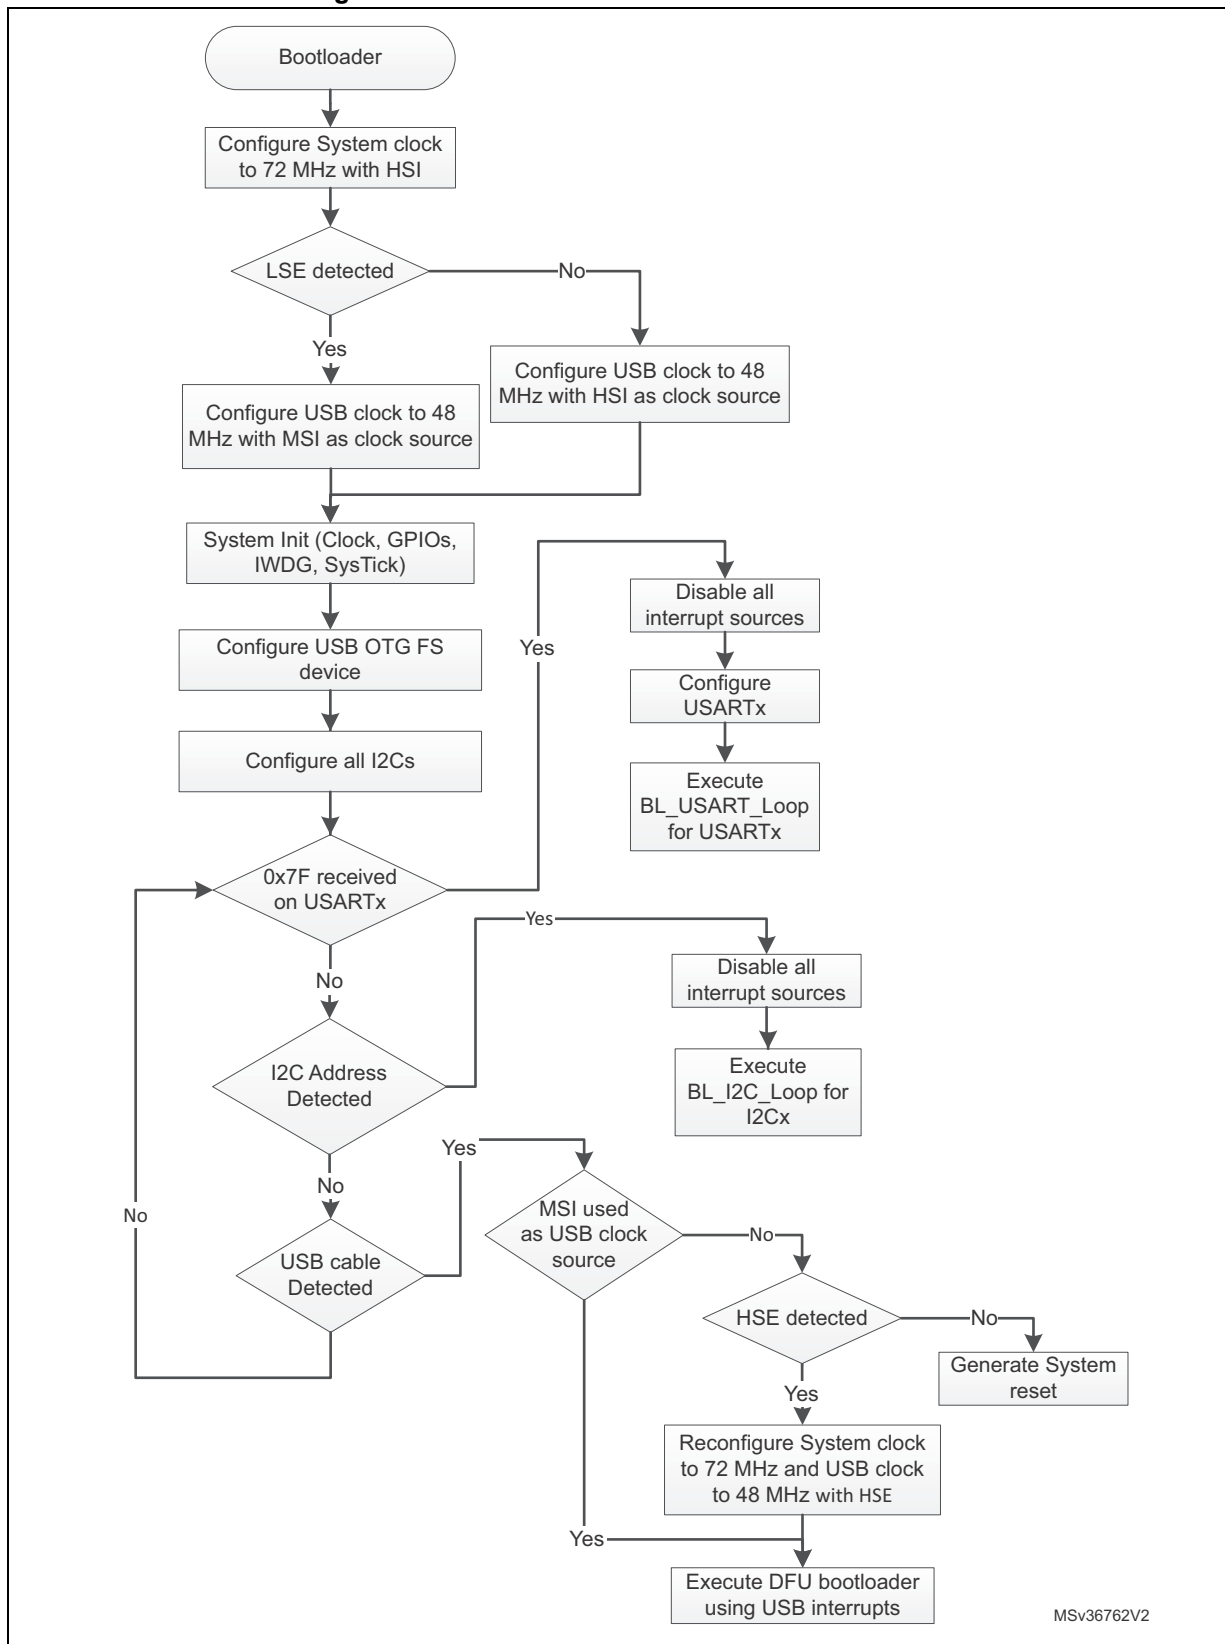

MSv36762V2

### 30.3 Bootloader version

The following table lists the STM32L476xx/486xx devices bootloader V10.x versions:

**Table 65. STM32L476xx/486xx bootloader V10.x versions**

Bootloader version number	Description	Known limitations
V10.0	Deprecated version (not used)	None
V10.1	Initial bootloader version	Write in SRAM is corrupted
V10.2	Fix write in SRAM issue	None
V10.3	Add support of MSI as USB clock source (MSI is trimmed by LSE). Update dual bank boot feature to support the case when user stack is mapped in SRAM2.	None

## 31 STM32F446xx devices bootloader

### 31.1 Bootloader configuration

The STM32F446xx bootloader is activated by applying pattern1 (described in [Table 2: Bootloader activation patterns](#)). The following table shows the hardware resources used by this bootloader.

**Table 66. STM32F446xx configuration in System memory boot mode**

Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The HSI is used at startup as clock source for system clock configured to 60 MHz and for USART, I2C and SPI bootloader operation.
		HSE enabled	The HSE is used only when the CAN or the DFU (USB FS Device) interfaces are selected. In this case the system clock configured to 60 MHz with HSE as clock source. The HSE frequency must be multiple of 1 MHz and ranging from 4 MHz to 26 MHz.
		-	The Clock Security System (CSS) interrupt is enabled for the CAN and DFU bootloaders. Any failure (or removal) of the external clock generates system reset.
	RAM	-	12 Kbytes starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	30424 bytes starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
	Power	-	The voltage range is [1.71 V, 3.6 V]. In this range: - Flash wait states 3. - System Clock 60 MHz. - Prefetch disabled. - Flash write operation by byte (refer to section Bootloader Memory Management for more information).

Table 66. STM32F446xx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bits, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART3 bootloader (on PB10/PB11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PB11 pin: USART3 in reception mode
	USART3_TX pin	Output	PB10 pin: USART3 in transmission mode
USART3 bootloader (on PC10/PC11)	USART3	Enabled	Once initialized the USART3 configuration is: 8-bits, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode
USART1 and USART3 bootloaders	SysTick timer	Enabled	Used to automatically detect the serial baud rate from the host for USARTx bootloaders.
CAN2 bootloader	CAN2	Enabled	Once initialized the CAN2 configuration is: Baudrate 125 kbps, 11-bit identifier. <b>Note:</b> CAN1 is clocked during CAN2 bootloader execution because in CAN1 manages the communication between CAN2 and SRAM.
	CAN2_RX pin	Input	PB5 pin: CAN2 in reception mode
	CAN2_TX pin	Output	PB13 pin: CAN2 in transmission mode
I2C1 bootloader	I2C1	Enabled	The I2C1 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111100x (where x = 0 for write and x = 1 for read)
	I2C1_SCL pin	Input/Output	PB6 pin: clock line is used in open-drain mode.
	I2C1_SDA pin	Input/Output	PB9 pin: data line is used in open-drain mode.
I2C2 bootloader	I2C2	Enabled	The I2C2 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111100x (where x = 0 for write and x = 1 for read)
	I2C2_SCL pin	Input/Output	PF1 pin: clock line is used in open-drain mode.
	I2C2_SDA pin	Input/Output	PF0 pin: data line is used in open-drain mode.

Table 66. STM32F446xx configuration in System memory boot mode (continued)

Bootloader	Feature/Peripheral	State	Comment
I2C3 bootloader	I2C3	Enabled	The I2C3 configuration is: I2C speed: up to 400 KHz, 7-bit address, slave mode, analog filter ON. Slave 7-bit address: 0b0111100x (where x = 0 for write and x = 1 for read)
	I2C3_SCL pin	Input/Output	PA8 pin: clock line is used in open-drain mode.
	I2C3_SDA pin	Input/Output	PC9 pin: data line is used in open-drain mode.
SPI1 bootloader	SPI1	Enabled	The SPI1 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI1_MOSI pin	Input	PA7 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI1_MISO pin	Output	PA6 pin: Slave data output line, used in Push-pull pull-down mode
	SPI1_SCK pin	Input	PA5 pin: Slave clock line, used in Push-pull pull-down mode
	SPI1_NSS pin	Input	PA4 pin: Slave Chip Select pin used in Push-pull pull-up mode.
SPI2 bootloader	SPI2	Enabled	The SPI2 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI2_MOSI pin	Input	PB15 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI2_MISO pin	Output	PB14 pin: Slave data output line, used in Push-pull pull-down mode
	SPI2_SCK pin	Input	PC7 pin: Slave clock line, used in Push-pull pull-down mode
	SPI2_NSS pin	Input	PB12 pin: Slave Chip Select pin used in Push-pull pull-up mode.

**Table 66. STM32F446xx configuration in System memory boot mode (continued)**

Bootloader	Feature/Peripheral	State	Comment
SPI4 bootloader	SPI4	Enabled	The SPI4 configuration is: Slave mode, Full Duplex, 8-bit MSB, Speed up to 8 MHz, Polarity: CPOL Low, CPHA Low, NSS hardware.
	SPI4_MOSI pin	Input	PE14 pin: Slave data Input line, used in Push-pull pull-down mode
	SPI4_MISO pin	Output	PE13 pin: Slave data output line, used in Push-pull pull-down mode
	SPI4_SCK pin	Input	PE12 pin: Slave clock line, used in Push-pull pull-down mode
	SPI4_NSS pin	Input	PE11 pin: Slave Chip Select pin used in Push-pull pull-up mode.
DFU bootloader	USB	Enabled	USB OTG FS configured in Forced Device mode
	USB_DM pin	Input/Output	PA11: USB DM line.
	USB_DP pin		PA12: USB DP line No external Pull-up resistor is required
CAN2 and DFU bootloaders	TIM17	Enabled	This timer is used to determine the value of the HSE. Once the HSE frequency is determined, the system clock is configured to 60 MHz using PLL and HSE.


The system clock is derived from the embedded internal high-speed RC for USARTx and I2Cx bootloaders. This internal clock is also used for CAN and DFU (USB FS Device) but only for the selection phase. An external clock multiple of 1 MHz (between 4 and 26 MHz) is required for CAN and DFU bootloader execution after the selection phase.



### 31.2 Bootloader selection

The figure below shows the bootloader selection mechanism.

Figure 39.Bootloader V9.x selection for STM32F446xx

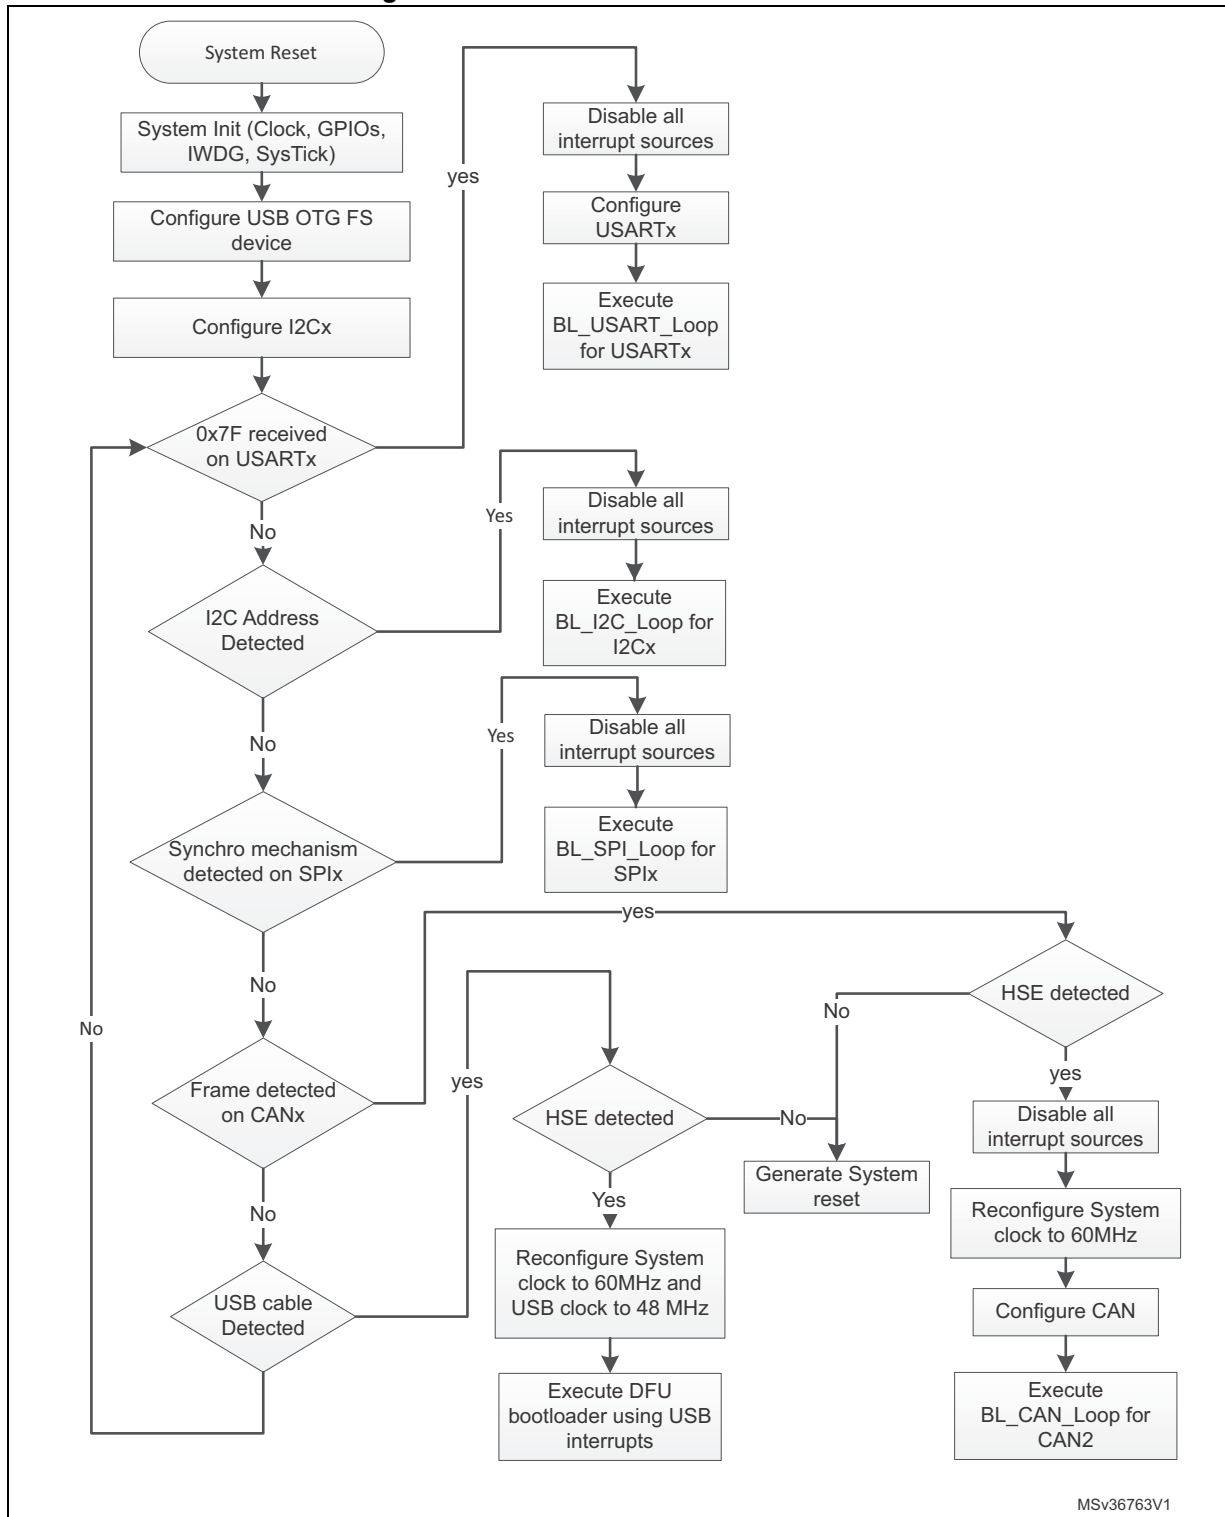

MSv36763V1

### 31.3 Bootloader version

The following table lists the STM32F446xx devices bootloader V9.x versions:

**Table 67. STM32F446xx bootloader V9.x versions**

<b>Bootloader version number</b>	<b>Description</b>	<b>Known limitations</b>
V9.0	Initial bootloader version	None

## 32 Device-dependent bootloader parameters

The bootloader protocol's command set and sequences for each serial peripheral are the same for all STM32 devices. However, some parameters depend on device and bootloader version:

- PID (Product ID)
- Valid RAM memory addresses (RAM area used during bootloader execution is not accessible) accepted by the bootloader when the Read Memory, Go and Write Memory commands are requested.
- System Memory area.

The table below shows the values of these parameters for each STM32 device bootloader in production.

**Table 68. Bootloader device-dependent parameters**

STM32 series	Device	PID	BL ID	RAM memory	System memory
F0	STM32F05xxx and STM32F030x8 devices	0x440	0x21	0x20000800 - 0x20001FFF	0x1FFFE000 - 0x1FFFF7FF
	STM32F03xxx	0x444	0x10	0x20000800 - 0x20000FFF	
	STM32F04xxx	0x445	0xA0	N.A.	0x1FFFC400 - 0x1FFFF7FF
	STM32F07xxx	0x448	0xA1	0x20001800 - 0x20003FFF	0x1FFFC800 - 0x1FFFF7FF
F1	STM32F10xxx	Low-density	0x412	NA	0x1FFFF000 - 0x1FFFF7FF
		Medium-density	0x410	NA	
		High-density	0x414	NA	
		Medium-density value line	0x420	0x10	
		High-density value line	0x428	0x10	
	STM32F105xx/107xx	0x418	NA	0x20001000 - 0x2000FFFF	0x1FFFB000 - 0x1FFFF7FF
	STM32F10xxx XL-density	0x430	0x21	0x20000800 - 0x20017FFF	0x1FFFE000 - 0x1FFFF7FF
F2	STM32F2xxxx	0x411	0x20	0x20002000 - 0x2001FFFF	0x1FFF0000 - 0x1FFF77FF
			0x33		
F3	STM32F373xx	0x432	0x41	0x20001400 - 0x20007FFF	0x1FFFD800 - 0x1FFFF7FF
	STM32F378xx		0x50	0x20001000 - 0x20007FFF	
	STM32F302xB(C)/303xB(C)	0x422	0x41	0x20001400 - 0x20009FFF	
	STM32F358xx		0x50		
	STM32F301xx/302x4(6/8)	0x439	0x40	0x20001800 - 0x20003FFF	
	STM32F318xx		0x50		
	STM32F303x4 (6/8)/334xx/328xx	0x438	0x50	0x20001800 - 0x20002FFF	

Table 68. Bootloader device-dependent parameters (continued)

STM32 series	Device	PID	BL ID	RAM memory	System memory
F4	STM32F40xxx/41xxx	0x413	0x31	0x20002000 - 0x2001FFFF	0x1FFF0000 - 0x1FFF77FF
			0x90	0x20003000 - 0x2001FFFF	
	STM32F42xxx/43xxx	0x419	0x70	0x20003000 - 0x2002FFFF	
			0x90		
	STM32F401xB(C)	0x423	0xD1	0x20003000 - 0x2000FFFF	
	STM32F401xD(E)	0x433	0xD1	0x20003000 - 0x20017FFF	
	STM32F411xx	0x431	0xD0	0x20003000 - 0x2001FFFF	
STM32F446xx	0x421	0x90	0x20003000 - 0x2001FFFF		
L0	STM32L05xxx/06xxx	0x417	0xC0	0x20001000 - 0x20001FFF	0x1FF00000 - 0x1FF00FFF
L1	STM32L1xxx6(8/B)	0x416	0x20	0x20000800 - 0x20003FFF	
	STM32L1xxx6(8/B)A	0x429	0x20	0x20001000 - 0x20007FFF	
	STM32L1xxxC	0x427	0x40		
	STM32L1xxxD	0x436	0x45	0x20001000 - 0x2000BFFF	0x1FF00000 - 0x1FF01FFF
	STM32L1xxxE	0x437	0x40	0x20001000 - 0x20013FFF	
L4	STM32L476xx/486xx	0x415	0xA3	0x20003000 - 0x20017FFF	0x1FFF0000 - 0x1FFF6FFF

### 33 Bootloader timing

This section presents the typical timings of the bootloader firmware that should be used to ensure correct synchronization between host and STM32 device.

Two types of timings will be described herein:


- STM32 device bootloader resources initialization duration.
- Communication interface selection duration.

After these timings the bootloader is ready to receive and execute host commands.

#### 33.1 Bootloader Startup timing

After bootloader reset, the host should wait until the STM32 bootloader is ready to start detection phase with a specific interface communication. This time corresponds to bootloader startup timing, during which resources used by bootloader are initialized.

Figure 40. Bootloader Startup timing description

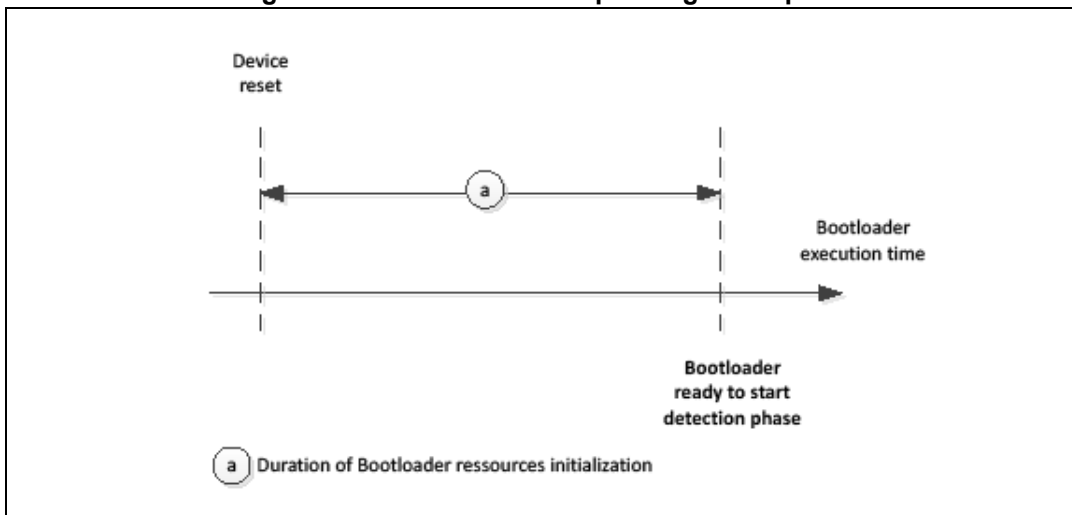

The table below contains the minimum startup timing for each STM32 product:

Table 69. Bootloader startup timings of STM32 devices

Device	Minimum bootloader Startup (ms)	HSE Timeout (ms)
STM32F10xxx	1.227	N.A
STM32F105xx/107xx	PA9 pin low	N.A
	PA9 pin high	
STM32F10xxx XL-density	1.227	N.A
STM32L1xxx6(8/B)	0.542	N.A
STM32L1xxxC	0.708	80
STM32L1xxxD	0.708	80


**Table 69. Bootloader startup timings of STM32 devices (continued)**

Device		Minimum bootloader Startup (ms)	HSE Timeout (ms)
STM32F2xxxx	V2.x	134	N.A
	V3.x	84.59	0.790
STM32F40xxx/41xxx	V3.x	84.59	0.790
	V9.x	74	96
STM32F05xxx and STM32F030x8 devices		1.612	N.A
STM32F03xxx		1.612	N.A
STM32F373xx	HSE connected	43.4	2.236
	HSE not connected	2.36	
STM32F302xB(C)/303xB(C)	HSE connected	43.4	2.236
	HSE not connected	2.36	
STM32F378xx		1.542	N.A
STM32F358xx		1.542	N.A
STM32F429xx/439xx	V7.x	82	97
	V9.x	74	97
STM32F04xxx		0.058	N.A
STM32F07xxx		0.058	N.A
STM32F301xx/302x4(6/8)	HSE connected	45	560.5
	HSE not connected	560.8	
STM32F318xx		0.182	N.A
STM32F303x4(6/8)/334xx/328xx		0.155	N.A
STM32F401xB(C)		74.5	85
STM32F401xD(E)		74.5	85
STM32F411xx		74.5	85
STM32F446xx		TBD	TBD
STM32L1xxx6(8/B)A		0.542	N.A
STM32L1xxxE		0.708	200
STM32L05xxx/06xxx		0.22	N.A
STM32L476xx/486xx		TBD	TBD

### 33.2 USART connection timing

USART connection timing is the time that the host should wait for between sending the synchronization data (0x7F) and receiving the first acknowledge response (0x79).

**Figure 41. USART connection timing description**

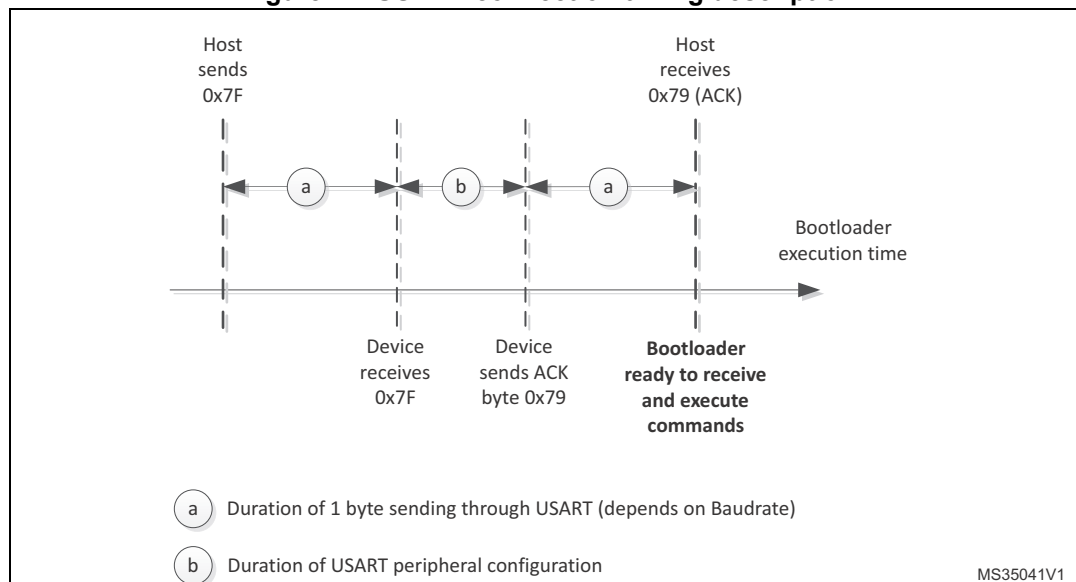

**Note:** For STM32F105xx/107xx line devices, PA9 pin (USB\_VBUS) is used to detect the USB host connection. The initialization of USB peripheral is performed only if PA9 is high at detection phase which means that a host is connected to the port and delivering 5 V on the USB bus. When PA9 level is high at detection phase, more time is required to initialize and shutdown the USB peripheral. To minimize bootloader detection time when PA9 pin is not used, keep PA9 state low during USART detection phase from the moment the device is reset till a device ACK is sent.

**Table 70. USART bootloader minimum timings of STM32 devices**

Device	One USART byte sending (ms)	USART configuration (ms)	USART connection (ms)
STM32F10xxx	0.078125	0.002	0.15825
STM32F105xx/107xx	0.078125	PA9 pin low	0.16325
		PA9 pin High	105.15625
STM32F10xxx XL-density	0.078125	0.006	0.16225
STM32L1xxx6(8/B)	0.078125	0.008	0.16425
STM32L1xxxC	0.078125	0.008	0.16425
STM32L1xxxD	0.078125	0.008	0.16425
STM32F2xxxx	0.078125	V2.x	0.16525
		V3.x	

**Table 70. USART bootloader minimum timings of STM32 devices (continued)**


Device		One USART byte sending (ms)	USART configuration (ms)	USART connection (ms)
STM32F40xxx/41xxx	V3.x	0.078125	0.009	0.16525
	V9.x		0.0035	0.15975
STM32F05xxx and STM32F030x8 devices		0.078125	0.0095	0.16575
STM32F03xxx		0.078125	0.0064	0.16265
STM32F373xx	HSE connected	0.078125	0.002	0.15825
	HSE not connected			
STM32F302xB(C)/303xB(C)	HSE connected	0.078125	0.002	0.15825
	HSE not connected			
STM32F378xx		0.15625	0.001	0.3135
STM32F358xx		0.15625	0.001	0.3135
STM32F429xx/439xx	V7.x	0.078125	0.007	0.16325
	V9.x		0.00326	0.15951
STM32F04xxx		0.078125	0.007	0.16325
STM32F07xxx		0.078125	0.007	0.16325
STM32F301xx/302x4(6/8)	HSE connected	0.078125	0.002	0.15825
	HSE not connected			
STM32F318xx		0.078125	0.002	0.15825
STM32F303x4(6/8)/334xx/328xx		0.078125	0.002	0.15825
STM32F401xB(C)		0.078125	0.00326	0.15951
STM32F401xD(E)		0.078125	0.00326	0.15951
STM32F411xx		0.078125	0.00326	0.15951
STM32F446xx		TBD	TBD	TBD
STM32L1xxx6(8/B)A		0.078125	0.008	0.16425
STM32L1xxxE		0.078125	0.008	0.16425
STM32L05xxx/06xxx		0.078125	0.018	0.17425
STM32L476xx/486xx		TBD	TBD	TBD

### 33.3 USB connection timing

USB connection timing is the time that the host should wait for between plugging the USB cable and establishing a correct connection with the device. This timing includes enumeration and DFU components configuration. USB connection depends on the host.



Figure 42. USB connection timing description

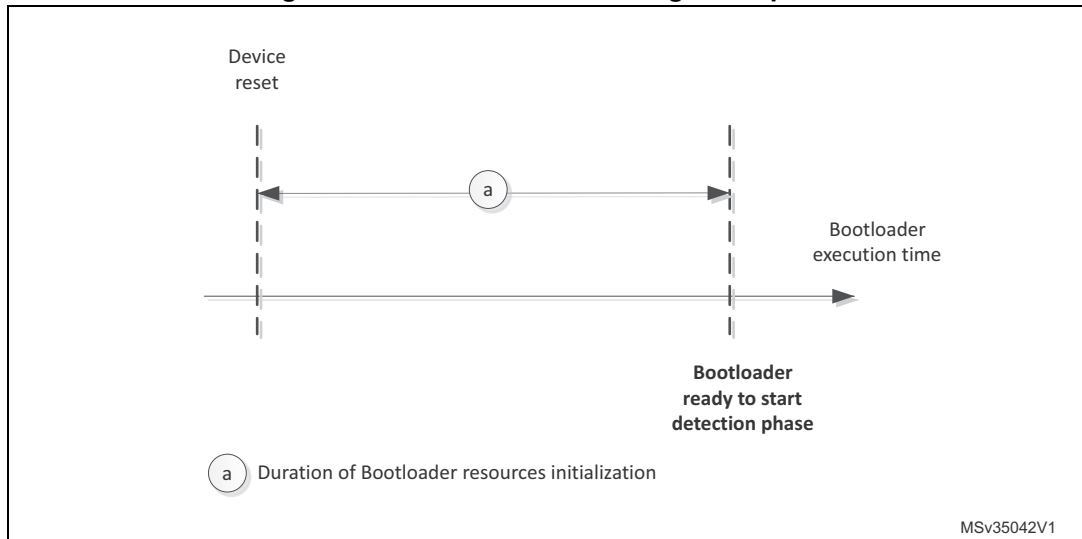

**Note:** For STM32F105xx/107xx devices, if the external HSE crystal frequency is different from 25 MHz (14.7456 MHz or 8 MHz), the device performs several unsuccessful enumerations (with connect – disconnect sequences) before being able to establish a correct connection with the host. This is due to the HSE automatic detection mechanism based on Start Of Frame (SOF) detection.

Table 71. USB bootloader minimum timings of STM32 devices

Device		USB connection (ms)
STM32F105xx/107xx	HSE = 25 MHz	460
	HSE = 14.7465 MHz	4500
	HSE = 8 MHz	13700
STM32L1xxxC		849
STM32L1xxxD		849
STM32F2xxxx		270
STM32F40xxx/41xxx	V3.x	270
	V9.x	250
STM32F373xx		300
STM32F302xB(C)/303xB(C)		300
STM32F429xx/439xx	V7.x	250
	V9.x	250
STM32F04xxx		350
STM32F07xxx		350
STM32F301xx/302x4(6/8)		300
STM32F401xB(C)		250
STM32F401xD(E)		250
STM32F411xx		250


**Table 71. USB bootloader minimum timings of STM32 devices (continued)**

Device	USB connection (ms)
STM32F446xx	TBD
STM32L476xx/486xx	TBD

### 33.4 I2C connection timing

I2C connection timing is the time that the host should wait for between sending I2C device address and sending command code. This timing includes I2C line stretching duration.

**Figure 43. I2C connection timing description**

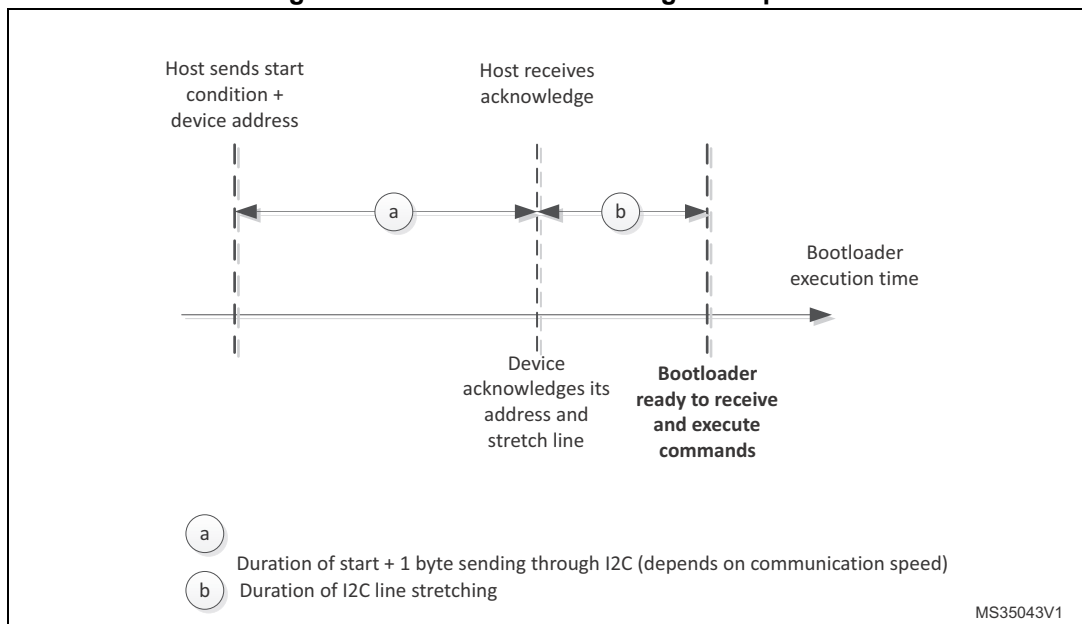

**Note:** For I2C communication, a timeout mechanism is implemented and it must be respected to execute bootloader commands correctly. This timeout is implemented between two I2C frames in the same command (eg: for Write memory command a timeout is inserted between command sending frame and address memory sending frame). Also the same timeout period is inserted between two successive data reception or transmission in the same I2C frame. If the timeout period is elapsed a system reset is generated to avoid bootloader crash.

In erase memory command and read-out unprotect command, the duration of flash operation should be taken into consideration when implementing the host side. After sending the code of pages to be erased, the host should wait until the bootloader device performs page erasing to complete the remaining steps of erase command.


Table 72. I2C bootloader minimum timings of STM32 devices

Device	Start condition + one I2C byte sending (ms)	I2C line stretching (ms)	I2C connection (ms)	I2C Timeout (ms)
STM32F40xxx/41xxx	0.0225	0.0022	0.0247	1000
STM32F378xx	0.0225	0.0055	0.028	10
STM32F358xx	0.0225	0.0055	0.028	10
STM32F429xx/439xx	V7.x	0.0033	0.0258	1000
	V9.x	0.0022	0.0247	
STM32F04xxx	0.0225	0.0025	0.025	1000
STM32F07xxx	0.0225	0.0025	0.025	1000
STM32F318xx	0.0225	0.0027	0.0252	1000
STM32F303x4(6/8)/334xx/328xx	0.0225	0.0027	0.0252	1000
STM32F401xB(C)	0.0225	0022	0.0247	1000
STM32F401xD(E)	0.0225	0022	0.0247	1000
STM32F411xx	0.0225	0022	0.0247	1000
STM32F446xx	TBD	TBD	TBD	TBD
STM32L476xx/486xx	TBD	TBD	TBD	TBD

### 33.5 SPI connection timing

SPI connection timing is the time that the host should wait for between sending the synchronization data (0xA5) and receiving the first acknowledge response (0x79).

Figure 44. SPI connection timing description

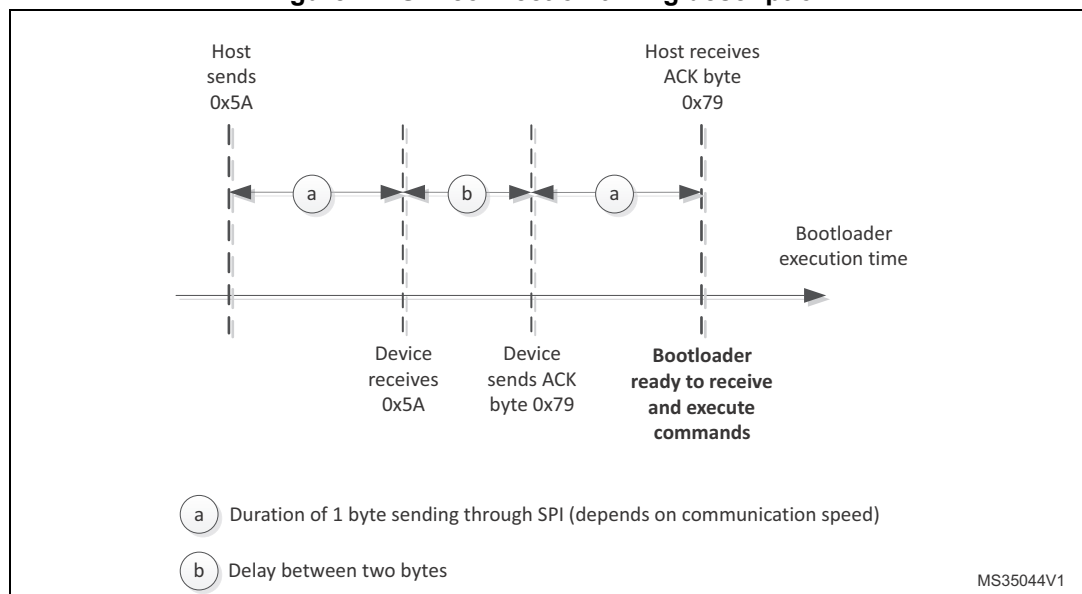

**Table 73. SPI bootloader minimum timings of STM32 devices**

Device	One SPI byte sending (ms)	Delay between two bytes(ms)	SPI connection (ms)
All products	0.001	0.008	0.01

## 34 Revision history

**Table 74. Document revision history**

Date	Revision	Changes
22-Oct-2007	1	Initial release.
22-Jan-2008	2	All STM32 in production (rev. B and rev. Z) include the bootloader described in this application note. Modified: <a href="#">Section 3.1: Bootloader activation</a> and <a href="#">Section 1.4: Bootloader code sequence</a> . Added: <a href="#">Section 1.3: Hardware requirements</a> , <a href="#">Section 1.5: Choosing the USART baud rate</a> , <a href="#">Section 1.6: Using the bootloader</a> and <a href="#">Section: Note 2</a> linked to Get, Get Version & Read Protection Status and Get ID commands in <a href="#">Table 3: Bootloader commands</a> , <a href="#">Note 3</a> added. Notion of “permanent” (Permanent Write Unprotect/Readout Protect/Unprotect) removed from document. Small text changes. Bootloader version upgraded to 2.0.
26-May-2008	3	Small text changes. RAM and System memory added to <a href="#">Table : The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution</a> . <a href="#">Section 1.6: Using the bootloader on page 8</a> removed. Erase modified, <a href="#">Note 3</a> modified and <a href="#">Note 1</a> added in <a href="#">Table 3: Bootloader commands on page 9</a> . <a href="#">Byte 3: on page 11</a> modified. <a href="#">Byte 2: on page 13</a> modified. <a href="#">Byte 2:, Bytes 3-4: and Byte 5: on page 15</a> modified, <a href="#">Note 3</a> modified. <a href="#">Byte 8: on page 18</a> modified. Notes added to <a href="#">Section 2.5: Go command on page 18</a> . <a href="#">Figure 11: Go command: device side on page 20</a> modified. Note added in <a href="#">Section 2.6: Write Memory command on page 21</a> . <a href="#">Byte 8: on page 24</a> modified. <a href="#">Figure 14: Erase Memory command: host side</a> and <a href="#">Figure 15: Erase Memory command: device side</a> modified. <a href="#">Byte 3: on page 26</a> modified. <a href="#">Table 3: Bootloader commands on page 9</a> . Note modified and note added in <a href="#">Section 2.8: Write Protect command on page 27</a> . <a href="#">Figure 16: Write Protect command: host side</a> , <a href="#">Figure 17: Write Protect command: device side</a> , <a href="#">Figure 19: Write Unprotect command: device side</a> , <a href="#">Figure 21: Readout Protect command: device side</a> and <a href="#">Figure 23: Readout Unprotect command: device side</a> modified.
29-Jan-2009	4	This application note also applies to the STM32F102xx microcontrollers. Bootloader version updated to V2.2 (see <a href="#">Table 4: Bootloader versions</a> ).

Table 74. Document revision history (continued)

Date	Revision	Changes
19-Nov-2009	5	<p>IWDG added to <a href="#">Table : The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.</a> <a href="#">Note</a> added.</p> <p>BL changed bootloader in the entire document.</p> <p>Go command description modified in <a href="#">Table : The system clock is derived from the embedded internal high-speed RC, no external quartz is required for the bootloader execution.</a></p> <p>Number of bytes awaited by the bootloader corrected in <a href="#">Section 2.4: Read Memory command.</a></p> <p>Note modified below <a href="#">Figure 10: Go command: host side.</a></p> <p>Note removed in <a href="#">Section 2.5: Go command</a> and note added.</p> <p>Start RAM address specified and note added in <a href="#">Section 2.6: Write Memory command.</a> All options are erased when a Write Memory command is issued to the Option byte area.</p> <p><a href="#">Figure 11: Go command: device side</a> modified.</p> <p><a href="#">Figure 13: Write Memory command: device side</a> modified.</p> <p>Note added and bytes 3 and 4 sent by the host modified in <a href="#">Section 2.7: Erase Memory command.</a></p> <p>Note added to <a href="#">Section 2.8: Write Protect command.</a></p>
09-Mar-2010	6	<p>Application note restructured. Value line and connectivity line device bootloader added (Replaces AN2662).</p> <p><a href="#">Introduction</a> changed. <a href="#">Glossary</a> added.</p>
20-Apr-2010	7	<p><a href="#">Related documents</a>: added XL-density line datasheets and programming manual.</p> <p><a href="#">Glossary</a>: added XL-density line devices.</p> <p><a href="#">Table 3</a>: added information for XL-density line devices.</p> <p><a href="#">Section 4.1: Bootloader configuration</a>: updated first sentence.</p> <p><a href="#">Section 5.1: Bootloader configuration</a>: updated first sentence.</p> <p>Added <a href="#">Section 6: STM32F10xxx XL-density devices bootloader.</a></p> <p><a href="#">Table 65</a>: added information for XL-density line devices.</p>
08-Oct-2010	8	<p>Added information for high-density value line devices in <a href="#">Table 3</a> and <a href="#">Table 65.</a></p>
14-Oct-2010	9	<p>Removed references to obsolete devices.</p>
26-Nov-2010	10	<p>Added information on ultralow power devices.</p>
13-Apr-2011	11	<p>Added information related to STM32F205/215xx and STM32F207/217xx devices.</p> <p>Added <a href="#">Section 32: Bootloader timing</a></p>
06-Jun-2011	12	<p>Updated:</p> <ul style="list-style-type: none"> <li>– <a href="#">Table 12: STM32L1xxx6(8/B) bootloader versions</a></li> <li>– <a href="#">Table 17: STM32F2xxxx configuration in System memory boot mode</a></li> <li>– <a href="#">Table 18: STM32F2xxxx bootloader V2.x versions</a></li> <li>– <a href="#">Table 20: STM32F2xxxx bootloader V3.x versions</a></li> </ul>
28-Nov-2011	13	<p>Added information related to STM32F405/415xx and STM32F407/417xx bootloader, and STM32F105xx/107xx bootloader V2.1.</p> <p>Added value line devices in <a href="#">Section 4: STM32F10xxx devices bootloader</a> title and overview.</p>

Table 74. Document revision history (continued)

Date	Revision	Changes
30-Jul-2012	14	<p>Added information related to STM32F051x6/STM32F051x8 and to High-density ultralow power STM32L151xx, STM32L152xx bootloader.</p> <p>Added case of BOOT1 bit in <a href="#">Section 3.1: Bootloader activation</a>.</p> <p>Updated Connectivity line, High-density ultralow power line, STM32F2xx and STM32F4xx in <a href="#">Table 3: Embedded bootloaders</a>.</p> <p>Added bootloader version V2.2 in <a href="#">Table 8: STM32F105xx/107xx bootloader versions</a>.</p> <p>Added bootloader V2.2 in <a href="#">Section 5.3.1: How to identify STM32F105xx/107xx bootloader versions</a>.</p> <p>Added note related to DFU interface below <a href="#">Table 15: STM32L1xxxx high-density configuration in System memory boot mode</a>. Added V4.2 bootloader know limitations and updated description, and added V4.5 bootloader in <a href="#">Table 16: STM32L1xxxx high-density bootloader versions</a>.</p> <p>Added note related to DFU interface below <a href="#">Table 19: STM32F2xxxx configuration in System memory boot mode</a>. Added V3.2 bootloader know limitations, and added V3.3 bootloader in <a href="#">Table 20: STM32F2xxxx bootloader V3.x versions</a>. Updated STM32F2xx and STM32F4xx system memory end address in <a href="#">Table 21: STM32F40xxx/41xxx configuration in System memory boot mode</a>.</p> <p>Added note related to DFU interface below <a href="#">Table 21: STM32F40xxx/41xxx configuration in System memory boot mode</a>. Added V3.0 bootloader know limitations, and added V3.1 bootloader in <a href="#">Table 22: STM32F40xxx/41xxx bootloader V3.x version</a>.</p> <p>Added bootloader V2.1 know limitations in <a href="#">Table 26: STM32F051xx bootloader versions</a>.</p> <p>Updated STM32F051x6/x8 system memory end address in <a href="#">Table 65: Bootloader device-dependent parameters</a>.</p> <p>Added <a href="#">Table 75: USART bootloader timings for high-density ultralow power devices</a>, and <a href="#">Table 78: USART bootloader timings for STM32F051xx devices</a>.</p> <p>Added <a href="#">Table 88: USB minimum timings for high-density ultralow power devices</a>.</p>

Table 74. Document revision history (continued)

Date	Revision	Changes
24-Jan-2013	15	<p>Updated generic product names throughout the document (see <a href="#">Glossary</a>).</p> <p>Added the following new sections:</p> <ul style="list-style-type: none"> <li>– <a href="#">Section 8: STM32L1xxC devices bootloader.</a></li> <li>– <a href="#">Section 13: STM32F031xx devices bootloader.</a></li> <li>– <a href="#">Section 14: STM32F373xx devices bootloader.</a></li> <li>– <a href="#">Section 15: STM32F302xB(C)/303xB(C) devices bootloader.</a></li> <li>– <a href="#">Section 16: STM32F378xx devices bootloader.</a></li> <li>– <a href="#">Section 17: STM32F358xx devices bootloader.</a></li> <li>– <a href="#">Section 18: STM32F427xx/437xx devices bootloader.</a></li> <li>– <a href="#">Section 34.3: I2C bootloader timing characteristics.</a></li> </ul> <p>Updated <a href="#">Section 1: Related documents</a> and <a href="#">Section 2: Glossary</a>.</p> <p>Added <a href="#">Table 79</a> to <a href="#">Table 85</a> (USART bootloader timings).</p> <p>Replaced <a href="#">Figure 6</a> to <a href="#">Figure 16</a>, and Figures <a href="#">18</a>, <a href="#">19</a> and <a href="#">42</a>.</p> <p>Modified Tables <a href="#">3</a>, <a href="#">5</a>, <a href="#">9</a>, <a href="#">11</a>, <a href="#">17</a>, <a href="#">20</a>, <a href="#">21</a>, <a href="#">22</a> to <a href="#">13</a>, <a href="#">27</a>, <a href="#">29</a>, <a href="#">31</a>, <a href="#">33</a>, <a href="#">35</a>, <a href="#">37</a> and <a href="#">65</a>.</p> <p>Removed "X = 6: one USART is used" in <a href="#">Section 3.3: Hardware connection requirement</a>.</p> <p>Replaced address 0x1FFFF 8002 with address 0x1FFF F802 in <a href="#">Section 12.1: Bootloader configuration</a>.</p> <p>Modified procedure related to execution of the bootloader code in <a href="#">Note: on page 28</a>, in <a href="#">Section 6.2: Bootloader selection</a> and in <a href="#">Section 9.2: Bootloader selection</a>.</p>
06-Feb-2013	16	<p>Added information related to I<sup>2</sup>C throughout the document.</p> <p>Streamlined <a href="#">Table 1: Applicable products</a> and <a href="#">Section 1: Related documents</a>.</p> <p>Modified <a href="#">Table 3: Embedded bootloaders</a> as follows:</p> <ul style="list-style-type: none"> <li>– Replaced "V6.0" with "V1.0"</li> <li>– Replaced "0x1FFFF7A6" with "0x1FFFF796" in row STM32F31xx</li> <li>– Replaced "0x1FFF7FA6" with "0x1FFFF7A6" in row STM32F051xx</li> </ul> <p>Updated figures <a href="#">6</a>, <a href="#">9</a> and <a href="#">11</a>.</p> <p>Added <a href="#">Note:</a> in <a href="#">Glossary</a> and <a href="#">Note:</a> in <a href="#">Section 3.1: Bootloader activation</a>.</p> <p>Replaced:</p> <ul style="list-style-type: none"> <li>– "1.62 V" with "1.8 V" in tables <a href="#">17</a>, <a href="#">19</a>, <a href="#">19</a>, <a href="#">22</a>, <a href="#">21</a>, <a href="#">27</a>, <a href="#">37</a> and <a href="#">59</a></li> <li>– "5 Kbytes" with "4 Kbytes" in row RAM of <a href="#">Table 33</a></li> <li>– "127 pages (2 KB each)" with "4 KB (2 pages of 2 KB each)" in rows F3 of <a href="#">Table 65</a></li> <li>– "The bootloader ID is programmed in the last two bytes of the device system memory" with "The bootloader ID is programmed in the last byte address - 1 of the device system memory" in <a href="#">Section 3.3: Hardware connection requirement</a>.</li> <li>– "STM32F2xxxx devices revision Y" by "STM32F2xxxx devices revision X and Y" in <a href="#">Section 10: STM32F2xxxx devices bootloader</a></li> <li>– "Voltage Range 2" with "Voltage Range 1" in tables <a href="#">11</a>, <a href="#">15</a> and <a href="#">26</a>.</li> </ul>



Table 74. Document revision history (continued)

Date	Revision	Changes
21-May-2013	17	<p>Updated:</p> <ul style="list-style-type: none"> <li>– <a href="#">Introduction</a></li> <li>– <a href="#">Section 2: Glossary</a></li> <li>– <a href="#">Section 3.3: Hardware connection requirement</a></li> <li>– <a href="#">Section 7: STM32L1xxx6(8/B) devices bootloader</a> to include STM32L100 value line</li> <li>– <a href="#">Section 32.2: USART connection timing</a></li> <li>– <a href="#">Section 34.2: USB bootloader timing characteristics</a></li> <li>– <a href="#">Section 34.3: I2C bootloader timing characteristics</a></li> <li>– <a href="#">Table 1: Applicable products</a></li> <li>– <a href="#">Table 3: Embedded bootloaders</a></li> <li>– <a href="#">Table 25: STM32F051xx configuration in System memory boot mode</a></li> <li>– <a href="#">Table 27: STM32F031xx configuration in System memory boot mode</a></li> <li>– <a href="#">Table 65: Bootloader device-dependent parameters</a></li> <li>– <a href="#">Figure 17: Bootloader selection for STM32F031xx devices</a></li> </ul> <p>Added <a href="#">Section 19: STM32F429xx/439xx devices bootloader</a>.</p>
19-May-2014	18	<p>Add:</p> <ul style="list-style-type: none"> <li>– <a href="#">Figure 1 to Figure 5, Figure 15, Figure 17, Figure 18, Figure 20, Figure 21, from Figure 24 to Figure 40, Figure 44</a></li> <li>– <a href="#">Table 4, Table 24, Table 25, from Table 28 to Table 31, from Table 34 to Table 37, from Table 40 to Table 41, from Table to Table 73</a></li> <li>– <a href="#">Section 11.2, Section 18.2, Section 33.1, Section 33.5</a></li> <li>– <a href="#">Section 13, Section 14, Section 16, Section 17, from Section 19 to Section 29</a></li> <li>– note under <a href="#">Figure 1, Figure 2, Figure 3 and Figure 4</a></li> </ul> <p>Updated:</p> <ul style="list-style-type: none"> <li>– Updated starting from <a href="#">Section 3 to Section 12 and Section 15, Section 18 and Section 18</a> the chapter structure organized in three subsection: Bootloader configuration, Bootloader selection and Bootloader version. Updated <a href="#">Section 30 and Section 33</a></li> <li>– Updated block diagram of <a href="#">Figure 18 and Figure 19</a>.</li> <li>– Fixed I2C address for STM32F429xx/439xx devices in <a href="#">Table 38</a></li> <li>– <a href="#">Table 1, Table 2, Table 3, Table 8, Table 12, Table 14, Table 16, Table 18, Table 20, Table 22, Table 68</a></li> <li>– from <a href="#">Figure 6, to Figure 14, Figure 16, from Figure 40 to Figure 44</a></li> <li>– note on <a href="#">Table 13</a></li> </ul>

Table 74. Document revision history (continued)

Date	Revision	Changes
29-Jul-2014	19	<p>Updated:</p> <ul style="list-style-type: none"> <li>– notes under <a href="#">Table 2</a></li> <li>– <a href="#">Figure 11</a> and <a href="#">Figure 35</a></li> <li>– <a href="#">Section 2: Glossary</a></li> <li>– replaced any reference to STM32F427xx/437xx with STM32F42xxx/43xxx on <a href="#">Section 18: STM32F42xxx/43xxx devices bootloader</a></li> <li>– replace any occurrence of ‘STM32F072xx’ with ‘STM32F07xxx’</li> <li>– replace any occurrence of ‘STM32F051xx’ with ‘STM32F051xx and STM32F030x8 devices’.</li> <li>– comment field related to OTG_FS_DP and OTG_FS_DM on <a href="#">Table 8</a>, <a href="#">Table 20</a>, <a href="#">Table 22</a>, <a href="#">Table 24</a>, <a href="#">Table 38</a>, <a href="#">Table 40</a>, <a href="#">Table 42</a>, <a href="#">Table 44</a>, <a href="#">Table 52</a>, <a href="#">Table 54</a> and <a href="#">Table 56</a></li> <li>– comment field related to USB_DM on <a href="#">Table 60</a>.</li> <li>– replace reference to "STM32F429xx/439xx" by "STM32F42xxx/43xxx" on <a href="#">Table 3</a></li> <li>– comment field related to SPI2_MOSI, SPI2_MISO, SPI2_SCK and SPI2_NSS pins on <a href="#">Table 40</a></li> </ul> <p>Added:</p> <ul style="list-style-type: none"> <li>– note under <a href="#">Table 2</a></li> <li>– reference to STM32F411 on <a href="#">Table 1</a>, <a href="#">Section 2: Glossary</a>, <a href="#">Table 69</a>, <a href="#">Table 70</a>, <a href="#">Table 71</a>, <a href="#">Table 72</a></li> <li>– <a href="#">Section 26: STM32F411xx devices bootloader</a></li> </ul> <p>Removed reference to STM32F427xx/437xx on <a href="#">Table 3</a>, <a href="#">Section 2: Glossary</a>, <a href="#">Table 68</a>, <a href="#">Table 69</a>, <a href="#">Table 70</a>, <a href="#">Table 71</a></p>
24-Nov-2014	20	<p>Updated:</p> <ul style="list-style-type: none"> <li>– comment in "SPI1_NSS pin" and "SPI2_NSS pin" rows on <a href="#">Table 24</a> and <a href="#">Table 62</a></li> <li>– comment in "SPI1_NSS pin", "SPI2_NSS pin" and "SPI3_NSS pin" rows on <a href="#">Table 52</a>, <a href="#">Table 54</a> and <a href="#">Table 56</a></li> <li>– <a href="#">Figure 1</a></li> </ul>
11-Mar-2015	21	<p>Updated:</p> <ul style="list-style-type: none"> <li>– <a href="#">Table 1</a>, <a href="#">Table 3</a>, <a href="#">Table 6</a>, <a href="#">Table 10</a>, <a href="#">Table 12</a>, <a href="#">Table 18</a>, <a href="#">Table 20</a>, <a href="#">Table 21</a>, <a href="#">Table 22</a>, <a href="#">Table 24</a>, <a href="#">Table 26</a>, <a href="#">Table 27</a>, <a href="#">Table 28</a>, <a href="#">Table 32</a>, <a href="#">Table 38</a>, <a href="#">Table 40</a>, <a href="#">Table 42</a>, <a href="#">Table 43</a>, <a href="#">Table 44</a>, <a href="#">Table 45</a>, <a href="#">Table 46</a>, <a href="#">Table 58</a>, <a href="#">Table 64</a>, <a href="#">Table 68</a>, <a href="#">Table 69</a>, <a href="#">Table 70</a>, <a href="#">Table 71</a> and <a href="#">Table 72</a></li> <li>– <a href="#">Figure 38</a></li> <li>– <a href="#">Chapter 2: Glossary</a></li> <li>– <a href="#">Section 3.1</a> and <a href="#">Section 3.4</a></li> </ul> <p>Added:</p> <ul style="list-style-type: none"> <li>– <a href="#">Section 30: STM32L476xx/486xx devices bootloader</a> and <a href="#">Section 31: STM32F446xx devices bootloader</a></li> </ul>

**IMPORTANT NOTICE – PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2015 STMicroelectronics – All rights reserved

