

#### Feature

- Operating voltage: 4.0V~5.5V
- Microsoft 3D Intelli mouse and IBM PS/2 mouse compatible
- Microsoft Windows 2000 and 5-button Wheel mouse compatible
- Z-axis can support two kinds of scroller input divided by 2 or 4 (package option)
- Supports 500 or 1000 DPI for ADNS-5020 (package option)

- Serial interface with ADNS-5020
- Auto detect as to which photo sensor is used2MHz RC oscillator for system frequency with
- external pull-high resistor (140k $\Omega$ )
- Interface compliant with ADNS-5020
- 16-pin DIP package

#### **General Description**

The HT82M35X are designed as 3/5-key 3D PS/2 optical mouse controller. These have serial interface to access the sensor ADNS-5020 or the same compatible series sensor. Refer to the datasheets for detailed register descriptions of the sensors.

#### **Selection Table**

Part No.	Interface	X/Y-axis Option	Z-axis Option	Package
HT82M35A/HT82M35A-1		Avago Sensor Opto 500 DPI	Divided by 2	
HT82M35B/HT82M35B-1	3/5-key 3D PS/2 optical	Avago Sensor Opto 1000 DPI	Divided by 2	
HT82M35C/HT82M35C-1	mouse controller (for Avago ADNS-5020)	Avago Sensor Opto 500 DPI	Divided by 4	16 DIP
HT82M35D/HT82M35D-1		Avago Sensor Opto 1000 DPI	Divided by 4	

#### **Pin Assignment**

RB LB Z2/A Z1/B RB1	1 2 3 4 5	16 15 14 13 12	RO RB0 PS2D PS2CK					
	6 7 8	11 10 9						
HT82M35A/HT82M35A-1 HT82M35B/HT82M35B-1 HT82M35C/HT82M35C-1 HT82M35D/HT82M35D-1 — 16 DIP-A								



#### **Pin Description**

Pin Name	I/O	Description
RB, RO, LB	I	Right Button: Normal pull-high resistor $(30k\Omega)$ Rolling Button: Normal pull-high resistor $(30k\Omega)$ Left Button: Normal pull-high resistor $(30k\Omega)$
Z2/A, Z1/B	Ι	$^{\prime\prime}\text{Z}^{\prime\prime}$ axis input supports three kinds of scroller input Normal pull-high resistor (30k\Omega)
RB1, RB0	I	Input ports with 30k $\Omega$ pull-high resistor
SDIO	I/O	Serial data for Agilent sensor IC SDIO
SCLK	0	Serial data for Agilent sensor IC SCLK
VSS	—	Negative power supply, ground
RES	Ι	Chip reset input, low active
VDD		5V positive power supply
OSCI	I	2MHz RC oscillator for system frequency with external pull-high resistor (140k $\Omega$ )
NC		No connection
PS2CK	I/O	PS/2 mouse CLK line
PS2D	I/O	PS/2 mouse data line

#### **Absolute Maximum Ratings**

Supply Voltage	V <sub>SS</sub> –0.3V to V <sub>SS</sub> +6.0V	Storage Temperature	–50°C to 125°C
Input Voltage	V <sub>SS</sub> –0.3V to V <sub>SS</sub> +6.0V	Operating Temperature	–40°C to 85°C

Note: These are stress ratings only. Stresses exceeding the range specified under "Absolute Maximum Ratings" may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliability.

#### **D.C. Characteristics**

D.C. Characteristics Ta=2								
Symbol	Devemeter		Test Conditions	Min.	Turn		11	
Symbol	Parameter	$V_{\text{DD}}$	V <sub>DD</sub> Conditions		Тур.	Max.	Unit	
V <sub>DD</sub>	Operating Voltage	_	f <sub>SYS</sub> =2MHz	4.0	5.0	5.5	V	
I <sub>DD</sub>	Operating Current	5V	No load, f <sub>SYS</sub> =2MHz	_	2.5	4	mA	
V <sub>IL1</sub>	Input Low Voltage for RB, LB, RO, Z1, Z2, RB1, RB0, SDIO, PS2CK and PS2D			0		0.3V <sub>DD</sub>	V	
V <sub>IH1</sub>	Input High Voltage for RB, LB, RO, Z1, Z2, RB1, RB0, SDIO, PS2CK and PS2D	_	_	0.7V <sub>DD</sub>		V <sub>DD</sub>	V	
V <sub>IL2</sub>	Input Low Voltage for RES	_		0	_	$0.4V_{DD}$	V	
V <sub>IH2</sub>	Input High Voltage for RES	_		0.9V <sub>DD</sub>	_	V <sub>DD</sub>	V	
I <sub>OL</sub>	I/O Port Sink Current	5V	V <sub>OL</sub> =0.1V <sub>DD</sub>	10	20		mA	
I <sub>OH</sub>	I/O Port Source Current	5V	V <sub>OL</sub> =0.9V <sub>DD</sub>	-2	-4	_	mA	
R <sub>PH</sub>	Pull-high Resistance for RB, LB, RO, Z1, Z2, RB1, RB0, SDIO, PS2CK and PS2D	5V	_	10	30	50	kΩ	

# 

# HT82M35X

Ta=25°C

#### A.C. Characteristics

Symbol	Parameter		Test Conditions	Min.	Turn	Max.	11:5
Symbol	Falainetei		Conditions	IVIIII.	Тур.	wax.	Unit
t <sub>WDTOSC</sub>	Watchdog Oscillator Period	5V	—	32	65	130	μs
t <sub>WDT1</sub>	Watchdog Time-out Period	5V	Without WDT prescaler	8	17	33	ms
t <sub>RES</sub>	External Reset Low Pulse Width	_		1			μs

### **Functional Description**

#### PS/2 Mouse

PS/2 status byte

Byte 1

- bit
- 7: Reserved
- 6: 0=Stream Mode, 1=Remote Mode
- 5: 0=Disabled, 1=Enabled
- 4: 0=Scaling 1:1, 1=Scaling 2:1
- 3: 1=Wrap Mode, 0=Stream or Remote (different from IBM specs.)
- 2: 1=Left Button Pressed
- 1: 1=Middle Button Pressed

0: 1=Right Button Pressed

Byte 2

Bit 0~7 current resolution setting (Bit 0=LSB)

Byte 3

Bit 0~7 current sampling rate (Bit 0=LSB)

- Standard PS/2 data format
- Variable rps, 0, 8, 1, bidirectional, synchronous

Bit No.	7	6	5	4	3	2	1	0
1st word	YV	XV	YS	XS	1	MB	RO	LB
2nd word	X7	X6	X5	X4	X3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0

#### • Data format for 3D PS/2

Variable rps, 0, 8, 1, bidirectional, synchronous

Bit No.	7	6	5	4	3	2	1	0
1st word	YV	XV	YS	XS	1	MB	RO	LB
2nd word	X7	X6	X5	X4	X3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
4th word	Z7	Z6	Z5	Z4	Z3	Z2	Z1	Z0

The x/y data report is 9-bit 2's complement

The z data report is 8-bit 2's complement

#### • Data format for 5-button Wheel Mouse

Bit No.	7	6	5	4	3	2	1	0
1st word	0	0	YS	XS	1	MB	RO	LB
2nd word	X7	X6	X5	X4	Х3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
4th word	0	0	RB1	RB0	Z3	Z2	Z1	Z0

X- movement towards the right is positive, moving towards the left is negative

Y- upward movement is positive, moving down is negative

Z- rolling towards the user is positive, else negative

Button status: 1=pressed, 0=released

 $\bullet$  Mouse mode changes between Standard and 3D PS/2 mode

Sending the commands in the following sequence will set the mouse to 3D PS/2 mode.

Command	Response From Mouse
F3h	FAh
C8h	FAh
F3h	FAh
64h	FAh
F3h	FAh
50h	FAh
F2h	FAh, 03h

Mouse mode changes between Standard and Win2K PS/2 mode.

Sending the commands in the following sequence will set the mouse to Win2K PS/2 mode.


Command	<b>Response From Mouse</b>
F3h	FAh
C8h	FAh
F3h	FAh
C8h	FAh
F3h	FAh
50h	FAh
F2h	FAh, 04h

- Any time the PC sends a reset "FFh" command to the mouse, it will reset the mouse to Standard PS/2 mode.
- After power-on reset is initiated, the mouse is set to Standard PS/2 mode.




#### **Timing Diagrams**

Z-Axis Photo-coupler Cross Width

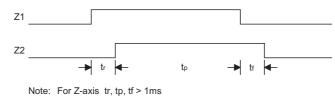


Z-Axis Counting

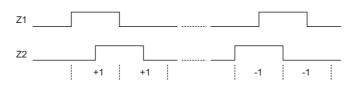


#### PS/2 Mouse

• Data output

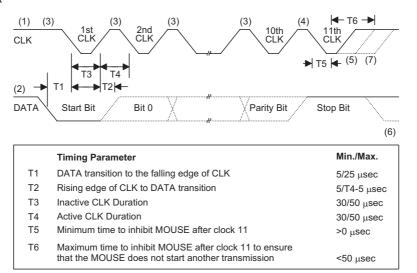


Data input

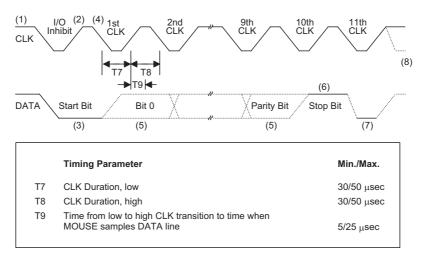




#### **Application Circuits**


2D PS/2 Optical Mouse for ADNS-5020

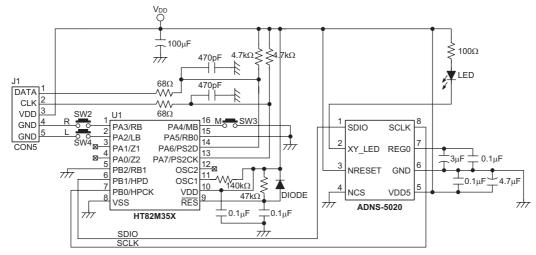

#### 3D PS/2 Optical Mouse for ADNS-5020

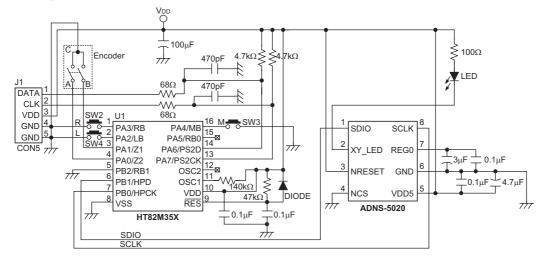




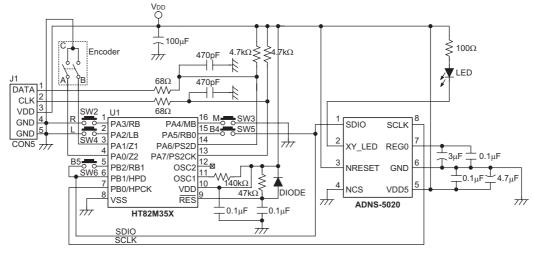



## Package Information

16-pin DIP (300mil) Outline Dimensions

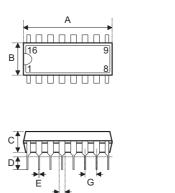



Symbol	Dimensions in mil							
Symbol	Min.	Nom.	Max.					
A	745	—	775					
В	240	_	260					
С	125	_	135					
D	125	_	145					
E	16	—	20					
F	50		70					
G		100						
Н	295		315					
I	335		375					
α	0°		15°					



Holtek Semiconductor Inc. (Headquarters) No.3, Creation Rd. II, Science Park, Hsinchu, Taiwan Tel: 886-3-563-1999 Fax: 886-3-563-1189 http://www.holtek.com.tw

Holtek Semiconductor Inc. (Taipei Sales Office) 4F-2, No. 3-2, YuanQu St., Nankang Software Park, Taipei 115, Taiwan Tel: 886-2-2655-7070 Fax: 886-2-2655-7373 Fax: 886-2-2655-7383 (International sales hotline)

Holtek Semiconductor Inc. (Shanghai Sales Office)

7th Floor, Building 2, No.889, Yi Shan Rd., Shanghai, China 200233 Tel: 86-21-6485-5560 Fax: 86-21-6485-0313 http://www.holtek.com.cn

#### Holtek Semiconductor Inc. (Shenzhen Sales Office)

5/F, Unit A, Productivity Building, Cross of Science M 3rd Road and Gaoxin M 2nd Road, Science Park, Nanshan District, Shenzhen, China 518057 Tel: 86-755-8616-9908, 86-755-8616-9308 Fax: 86-755-8616-9722

Holtek Semiconductor Inc. (Beijing Sales Office)

Suite 1721, Jinyu Tower, A129 West Xuan Wu Men Street, Xicheng District, Beijing, China 100031 Tel: 86-10-6641-0030, 86-10-6641-7751, 86-10-6641-7752 Fax: 86-10-6641-0125

Holtek Semiconductor Inc. (Chengdu Sales Office) 709, Building 3, Champagne Plaza, No.97 Dongda Street, Chengdu, Sichuan, China 610016 Tel: 86-28-6653-6590 Fax: 86-28-6653-6591

Holtek Semiconductor (USA), Inc. (North America Sales Office)

46729 Fremont Blvd., Fremont, CA 94538 Tel: 1-510-252-9880 Fax: 1-510-252-9885 http://www.holtek.com

Copyright © 2007 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at http://www.holtek.com.tw.

7