




$P_C - T_a$

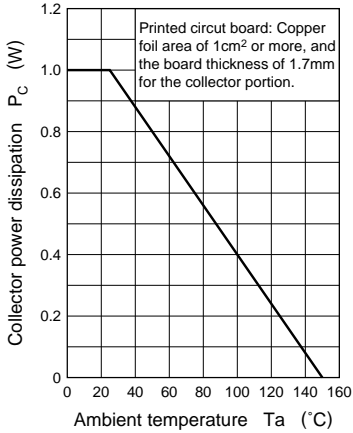


$I_C - V_{CE}$

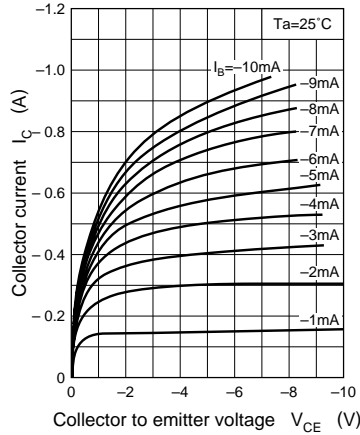


$I_C - I_B$

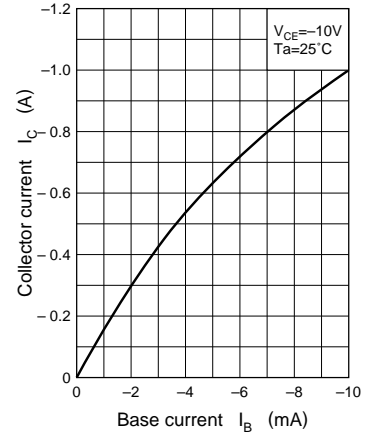


$V_{CE(sat)} - I_C$

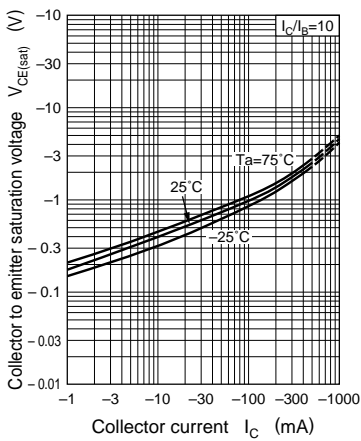


$V_{BE(sat)} - I_C$

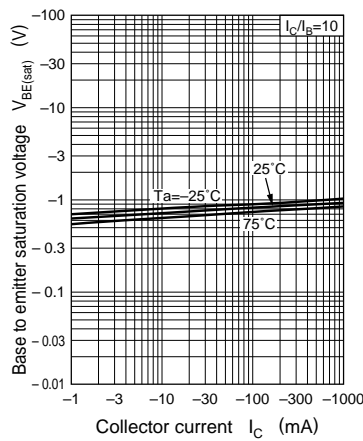


$h_{FE} - I_C$

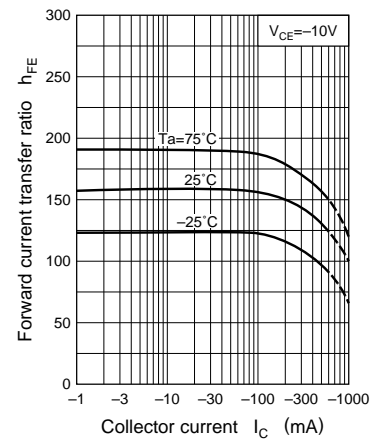


$f_T - I_E$

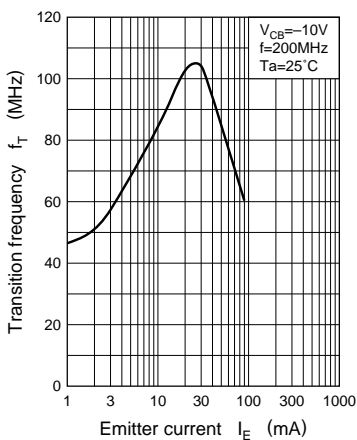


$C_{ob} - V_{CB}$

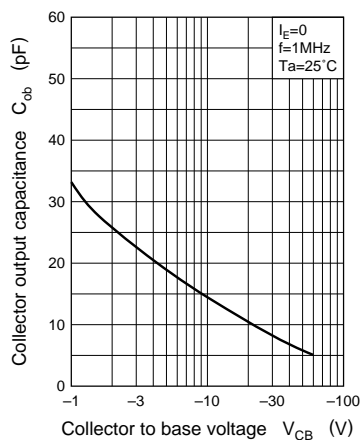

$I_{CBO} - T_a$

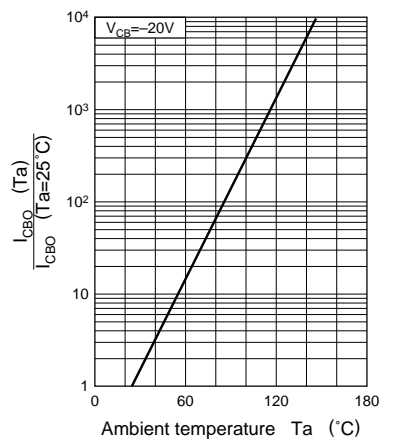

$I_{CEO} - T_a$

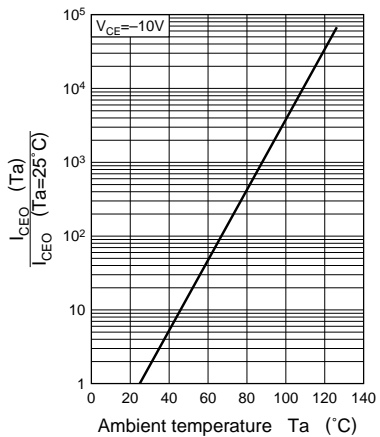

Area of safe operation (ASO)

