

Features

· High Performance:

		-7K ³ CL=2	-75B, CL=3	-8B, CL=2	Units
f _{CK}	Clock Frequency	133	133	100	MHz
t _{CK}	Clock Cycle	7.5	7.5	10	ns
t _{AC}	Clock Access Time ¹	_	_	_	ns
t _{AC}	Clock Access Time ²	5.4	5.4	6	ns

- 1. Terminated load. See AC Characteristics on page 37.
- 2. Unterminated load. See AC Characteristics on page 37.
- 3. $t_{RP} = t_{RCD} = 2 \text{ CKs}$
- Single Pulsed RAS Interface
- Fully Synchronous to Positive Clock Edge
- Four Banks controlled by BS0/BS1 (Bank Select)

- Programmable CAS Latency: 2, 3
- Programmable Burst Length: 1, 2, 4, 8
- Programmable Wrap: Sequential or Interleave
- Multiple Burst Read with Single Write Option
- Automatic and Controlled Precharge Command
 Data Mask for Read/Write control (x4, x8)
- Dual Data Mask for byte control (x16)
- · Auto Refresh (CBR) and Self Refresh
- Suspend Mode and Power Down Mode
- Standard Power operation
- 4096 refresh cycles/64ms
- Random Column Address every CK (1-N Rule)
- Single 3.3V ± 0.3V Power Supply
- LVTTL compatible
- Package: 54-pin 400 mil TSOP-Type II

Description

The NT5SV32M4CT, NT5SV16M8CT, and NT5SV8M16CT are four-bank Synchronous DRAMs organized as 8Mbit x 4 I/O x 4 Bank, 4Mbit x 8 I/O x 4 Bank, and 2Mbit x 16 I/O x 4 Bank, respectively. These synchronous devices achieve high-speed data transfer rates of up to 133MHz by employing a pipeline chip architecture that synchronizes the output data to a system clock. The chip is fabricated with NTC's advanced 128Mbit single transistor CMOS DRAM process technology.

The device is designed to comply with all JEDEC standards set for synchronous DRAM products, both electrically and mechanically. All of the control, address, and data input/output (I/O or DQ) circuits are synchronized with the positive edge of an externally supplied clock.

RAS, CAS, WE, and CS are pulsed signals which are examined at the positive edge of each externally applied clock (CK). Internal chip operating modes are defined by combinations of these signals and a command decoder initiates the necessary timings for each operation. A fourteen bit address bus accepts address data in the conventional RAS/CAS multiplexing style. Twelve row addresses (A0-A11) and two bank select addresses (BS0, BS1) are strobed with RAS. Eleven column addresses (A0-A9, A11) plus bank select addresses and A10 are strobed with CAS. Column address A11 is dropped on the x8 device, and column addresses A11 and A9 are dropped on the x16 device.


Prior to any access operation, the $\overline{\text{CAS}}$ latency, burst length, and burst sequence must be programmed into the device by address inputs A0-A11, BS0, BS1 during a mode register set cycle. In addition, it is possible to program a multiple burst sequence with single write cycle for write through cache operation.

Operating the four memory banks in an interleave fashion allows random access operation to occur at a higher rate than is possible with standard DRAMs. A sequential and gapless data rate of up to 133MHz is possible depending on burst length, CAS latency, and speed grade of the device. Auto Refresh (CBR) and Self Refresh operation are supported.

This datasheet has been downloaded from http://www.digchip.com at this page



Pin Assignments for Planar Components (Top View)

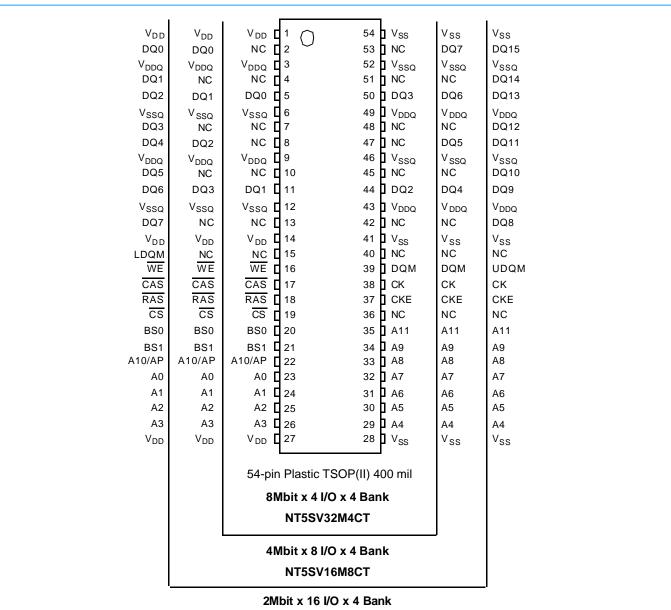

2Mbit x 16 I/O x 4 Bank NT5SV8M16CT



Pin Description

СК	Clock Input	DQ0-DQ15	Data Input/Output
CKE	Clock Enable	DQM, LDQM, UDQM	Data Mask
<u>cs</u>	Chip Select	V_{DD}	Power (+3.3V)
RAS	Row Address Strobe	V _{SS}	Ground
CAS	Column Address Strobe	V_{DDQ}	Power for DQs (+3.3V)
WE	Write Enable	V _{SSQ}	Ground for DQs
BS1, BS0	Bank Select	NC	No Connection
A0 - A11	Address Inputs	_	_

Input/Output Functional Description

Symbol	Туре	Polarity	Function
CLK	Input	Positive Edge	The system clock input. All of the SDRAM inputs are sampled on the rising edge of the clock.
CKE	Input	Active High	Activates the CLK signal when high and deactivates the CLK signal when low. By deactivating the clock, CKE low initiates the Power Down mode, Suspend mode, or the Self Refresh mode.
cs	Input	Active Low	CS enables the command decoder when low and disables the command decoder when high. When the command decoder is disabled, new commands are ignored but previous operations continue.
RAS, CAS, WE	Input	Active Low	When sampled at the positive rising edge of the clock, $\overline{\text{CAS}}$, $\overline{\text{RAS}}$, and $\overline{\text{WE}}$ define the operation to be executed by the SDRAM.
BS0, BS1	Input	_	Selects which bank is to be active.
A0 - A11	Input	_	During a Bank Activate command cycle, A0-A11 defines the row address (RA0-RA11) when sampled at the rising clock edge. During a Read or Write command cycle, A0-A9 and A11 defines the column address (CA0-CA9, CA11) when sampled at the rising clock edge. A10 is used to invoke auto-precharge operation at the end of the burst read or write cycle. If A10 is high, auto-precharge is selected and BS0, BS1 defines the bank to be precharged. If A10 is low, auto-precharge is disabled. During a Precharge command cycle, A10 is used in conjunction with BS0, BS1 to control which bank(s) to precharge. If A10 is high, all banks will be precharged regardless of the state of BS. If A10 is low, then BS0 and BS1 are used to define which bank to precharge.
DQ0 - DQ15	Input- Output	_	Data Input/Output pins operate in the same manner as on conventional DRAMs.
DQM LDQM UDQM	Input	Active High	The Data Input/Output mask places the DQ buffers in a high impedance state when sampled high. In x16 products, LDQM and UDQM control the lower and upper byte I/O buffers, respectively. In Read mode, DQM has a latency of two clock cycles and controls the output buffers like an output enable. DQM low turns the output buffers on and DQM high turns them off. In Write mode, DQM has a latency of zero and operates as a word mask by allowing input data to be written if it is low but blocks the write operation if DQM is high.
V _{DD} , V _{SS}	Supply	_	Power and ground for the input buffers and the core logic.
V _{DDQ} V _{SSQ}	Supply	_	Isolated power supply and ground for the output buffers to provide improved noise immunity.




Ordering Information

Organization	Part Number		Speed Grade	_	Power	Package	
Organization	rait Nullibei	Clock Frequenc	y@CAS Latency	Note	Supply	гаскауе	
	NT5SV32M4CT-7K	143MHz@CL3	133MHz@CL2	PC133 , PC100			
32M x 4	NT5SV32M4CT-75B	133MHz@CL3	100MHz@CL2	PC133 , PC100			
	NT5SV32M4CT-8B	125MHz@CL3	100MHz@CL2	PC100			
	NT5SV16M8CT-7K	143MHz@CL3	133MHz@CL2	PC133 , PC100			
16M x 8	NT5SV16M8CT-75B	133MHz@CL3	100MHz@CL2	PC133 , PC100	3.3 V	400mil 54-PIN TSOP II	
	NT5SV16M8CT-8B	125MHz@CL3	100MHz@CL2	PC100			
	NT5SV8M16CT-7K	143MHz@CL3	133MHz@CL2	PC133 , PC100			
8M x 16	NT5SV8M16CT-75B	133MHz@CL3	100MHz@CL2	PC133 , PC100			
	NT5SV8M16CT-8B	125MHz@CL3	100MHz@CL2	PC100			



Block Diagram

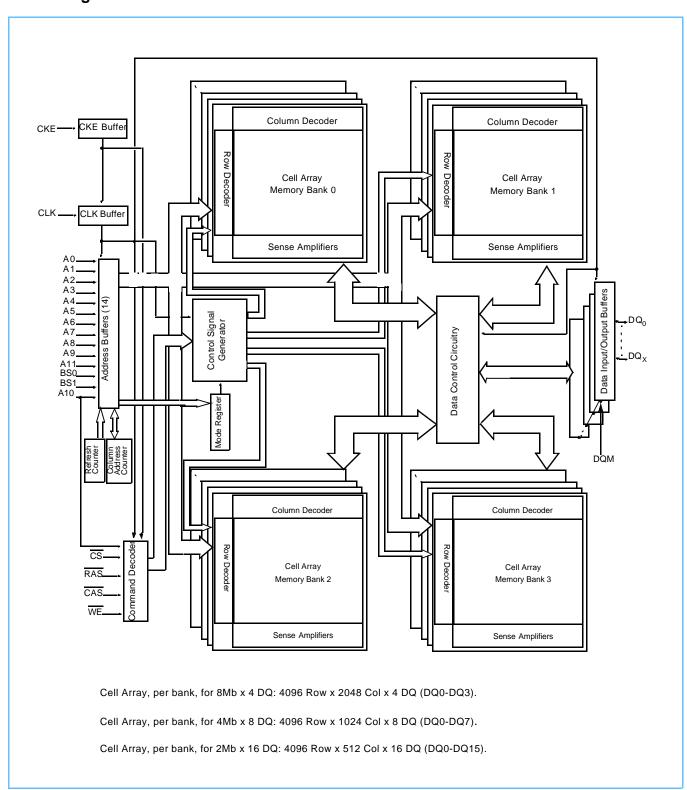

5



Power On and Initialization

The default power on state of the mode register is supplier specific and may be undefined. The following power on and initialization sequence guarantees the device is preconditioned to each users specific needs.

Like a conventional DRAM, the Synchronous DRAM must be powered up and initialized in a predefined manner. During power on, all V_{DD} and V_{DDQ} pins must be built up simultaneously to the specified voltage when the input signals are held in the "NOP" state. The power on voltage must not exceed V_{DD} +0.3V on any of the input pins or V_{DD} supplies. The CK signal must be started at the same time. After power on, an initial pause of 200 μ s is required followed by a precharge of all banks using the precharge command. To prevent data contention on the DQ bus during power on, it is required that the DQM and CKE pins be held high during the initial pause period. Once all banks have been precharged, the Mode Register Set Command must be issued to initialize the Mode Register. A minimum of two Auto Refresh cycles (CBR) are also required. These may be done before or after programming the Mode Register. Failure to follow these steps may lead to unpredictable start-up modes.

Programming the Mode Register

For application flexibility, $\overline{\text{CAS}}$ latency, burst length, burst sequence, and operation type are user defined variables and must be programmed into the SDRAM Mode Register with a single Mode Register Set Command. Any content of the Mode Register can be altered by re-executing the Mode Register Set Command. If the user chooses to modify only a subset of the Mode Register variables, all four variables must be redefined when the Mode Register Set Command is issued.


After initial power up, the Mode Register Set Command must be issued before read or write cycles may begin. All banks must be in a precharged state and CKE must be high at least one cycle before the Mode Register Set Command can be issued. The Mode Register Set Command is activated by the low signals of RAS, CAS, CS, and WE at the positive edge of the clock. The address input data during this cycle defines the parameters to be set as shown in the Mode Register Operation table. A new command may be issued following the mode register set command once a delay equal to t_{RSC} has elapsed.

CAS Latency

The $\overline{\text{CAS}}$ latency is a parameter that is used to define the delay from when a Read Command is registered on a rising clock edge to when the data from that Read Command becomes available at the outputs. The $\overline{\text{CAS}}$ latency is expressed in terms of clock cycles and can have a value of 2 or 3 cycles. The value of the $\overline{\text{CAS}}$ latency is determined by the speed grade of the device and the clock frequency that is used in the application. A table showing the relationship between the $\overline{\text{CAS}}$ latency, speed grade, and clock frequency appears in the Electrical Characteristics section of this document. Once the appropriate $\overline{\text{CAS}}$ latency has been selected it must be programmed into the mode register after power up, for an explanation of this procedure see Programming the Mode Register in the previous section.



Mode Register Operation (Address Input For Mode Set)

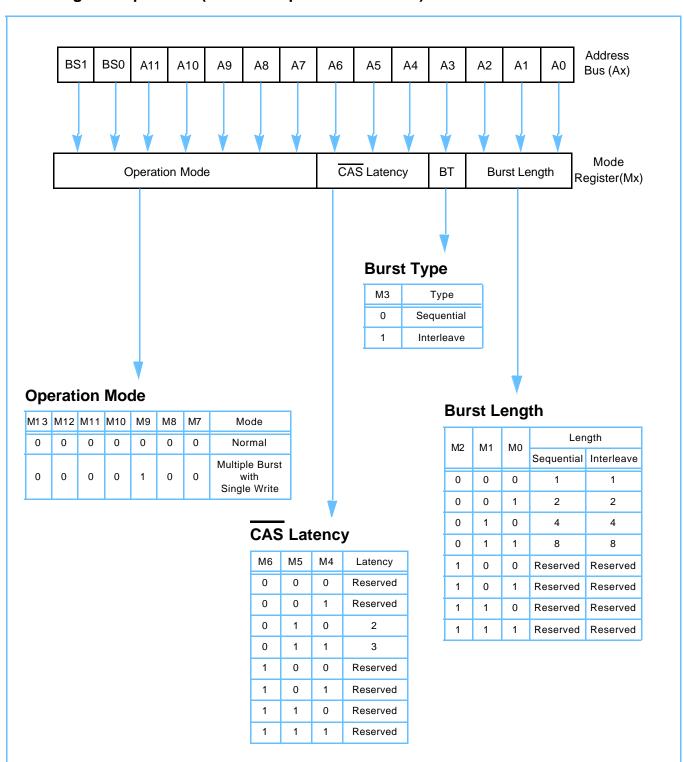



Burst Mode Operation

Burst mode operation is used to provide a constant flow of data to memory locations (write cycle), or from memory locations (read cycle). There are three parameters that define how the burst mode will operate. These parameters include burst sequence, burst length, and operation mode. The burst sequence and burst length are programmable, and are determined by address bits A0 - A3 during the Mode Register Set command. Operation mode is also programmable and is set by address bits A7 - A11, BS0, and BS1.

The burst type is used to define the order in which the burst data will be delivered or stored to the SDRAM. Two types of burst sequences are supported, sequential and interleaved. See the table below.

The burst length controls the number of bits that will be output after a Read Command, or the number of bits to be input after a Write Command. The burst length can be programmed to have values of 1, 2, 4, 8 (actual page length is dependent on organization: x4, x8, or x16).

Burst operation mode can be normal operation or multiple burst with single write operation. Normal operation implies that the device will perform burst operations on both read and write cycles until the desired burst length is satisfied. Multiple burst with single write operation was added to support Write Through Cache operation. Here, the programmed burst length only applies to read cycles. All write cycles are single write operations when this mode is selected.

Burst Length and Sequence

Burst Length	Starting Address (A2 A1 A0)	Sequential Addressing (decimal)	Interleave Addressing (decimal)
2	x x 0	0, 1	0, 1
2	x x 1	1, 0	1, 0
	x 0 0	0, 1, 2, 3	0, 1, 2, 3
4	x 0 1	1, 2, 3, 0	1, 0, 3, 2
4	x 1 0	2, 3, 0, 1	2, 3, 0, 1
	x 1 1	3, 0, 1, 2	3, 2, 1, 0
	0 0 0	0, 1, 2, 3, 4, 5, 6, 7	0, 1, 2, 3, 4, 5, 6, 7
	0 0 1	1, 2, 3, 4, 5, 6, 7, 0	1, 0, 3, 2, 5, 4, 7, 6
	0 1 0	2, 3, 4, 5, 6, 7, 0, 1	2, 3, 0, 1, 6, 7, 4, 5
8	0 1 1	3, 4, 5, 6, 7, 0, 1, 2	3, 2, 1, 0, 7, 6, 5, 4
0	100	4, 5, 6, 7, 0, 1, 2, 3	4, 5, 6, 7, 0, 1, 2, 3
	1 0 1	5, 6, 7, 0, 1, 2, 3, 4	5, 4, 7, 6, 1, 0, 3, 2
	110	6, 7, 0, 1, 2, 3, 4, 5	6, 7, 4, 5, 2, 3, 0, 1
	111	7, 0, 1, 2, 3, 4, 5, 6	7, 6, 5, 4, 3, 2, 1, 0

Note: Page length is a function of I/O organization and column addressing.

x4 organization (CA0-CA9, CA11); Page Length = 2048 bits

x8 organization (CA0-CA9); Page Length = 1024 bits

x16 organization (CA0-CA8); Page Length = 512 bits




Bank Activate Command

In relation to the operation of a fast page mode DRAM, the Bank Activate command correlates to a falling RAS signal. The Bank Activate command is issued by holding CAS and WE high with CS and RAS low at the rising edge of the clock. The Bank Select address BS0 - BS1 is used to select the desired bank. The row address A0 - A11 is used to determine which row to activate in the selected bank.

The Bank Activate command must be applied before any Read or Write operation can be executed. The delay from when the Bank Activate command is applied to when the first read or write operation can begin must meet or exceed the \overline{RAS} to \overline{CAS} delay time (t_{RCD}). Once a bank has been activated it must be precharged before another Bank Activate command can be applied to the same bank. The minimum time interval between successive Bank Activate commands to the same bank is determined by the RAS cycle time of the device (t_{RC}). The minimum time interval between interleaved Bank Activate commands (Bank A to Bank B and vice versa) is the Bank to Bank delay time (t_{RRD}). The maximum time that each bank can be held active is specified as $t_{RAS(max)}$.

Bank Activate Command Cycle

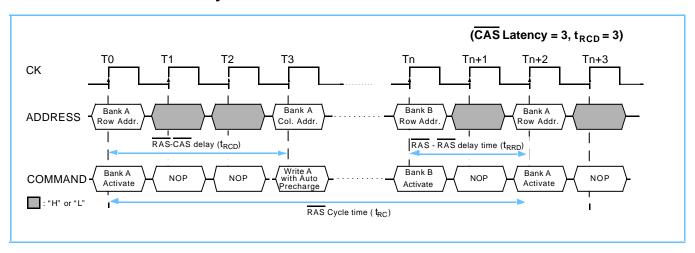

Bank Select

The Bank Select inputs, BS0 and BS1, determine the bank to be used during a Bank Activate, Precharge, Read, or Write operation.

Bank Selection Bits

BS0	BS1	Bank
0	0	Bank 0
1	0	Bank 1
0	1	Bank 2
1	1	Bank 3



Read and Write Access Modes

After a bank has been activated, a read or write cycle can be executed. This is accomplished by setting \overline{RAS} high and \overline{CAS} low at the clock's rising edge after the necessary \overline{RAS} to \overline{CAS} delay (t_{RCD}). \overline{WE} must also be defined at this time to determine whether the access cycle is a read operation (\overline{WE} high), or a write operation (\overline{WE} low). The address inputs determine the starting column address.

The SDRAM provides a wide variety of fast access modes. A single Read or Write Command will initiate a serial read or write operation on successive clock cycles up to 133MHz. The number of serial data bits for each access is equal to the burst length, which is programmed into the Mode Register.

Similar to Page Mode of conventional DRAMs, a read or write cycle can not begin until the sense amplifiers latch the selected row address information. The refresh period (t_{REF}) is what limits the number of random column accesses to an activated bank. A new burst access can be done even before the previous burst ends. The ability to interrupt a burst operation at every clock cycle is supported; this is referred to as the 1-N rule. When the previous burst is interrupted by another Read or Write Command, the remaining addresses are overridden by the new address.


Precharging an active bank after each read or write operation is not necessary providing the same row is to be accessed again. To perform a read or write cycle to a different row within an activated bank, the bank must be precharged and a new Bank Activate command must be issued. When more than one bank is activated, interleaved (ping pong) bank Read or Write operations are possible. By using the programmed burst length and alternating the access and precharge operations between multiple banks, fast and seamless data access operation among many different pages can be realized. When multiple banks are activated, column to column interleave operation can be done between different pages. Finally, Read or Write Commands can be issued to the same bank or between active banks on every clock cycle.



Burst Read Command

The Burst Read command is initiated by having \overline{CS} and \overline{CAS} low while holding \overline{RAS} and \overline{WE} high at the rising edge of the clock. The address inputs determine the starting column address for the burst, the Mode Register sets the type of burst (sequential or interleave) and the burst length (1, 2, 4, 8). The delay from the start of the command to when the data from the first cell appears on the outputs is equal to the value of the \overline{CAS} latency that is set in the Mode Register.


Burst Read Operation

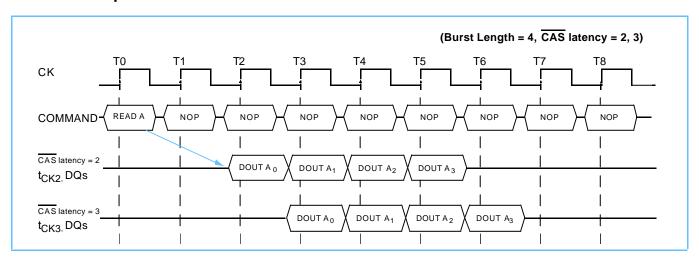

Read Interrupted by a Read

A Burst Read may be interrupted before completion of the burst by another Read Command, with the only restriction being that the interval that separates the commands must be at least one clock cycle. When the previous burst is interrupted, the remaining addresses are overridden by the new address with the full burst length. The data from the first Read Command continues to appear on the outputs until the CAS latency from the interrupting Read Command is satisfied, at this point the data from the interrupting Read Command appears.

Read Interrupted by a Read

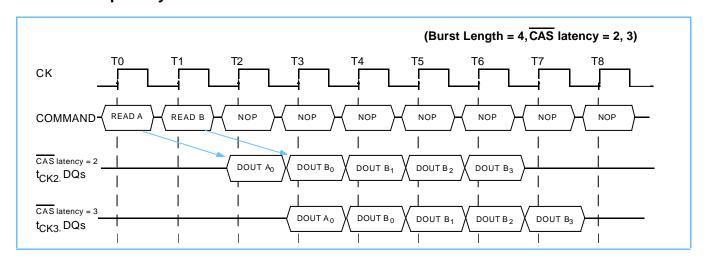




Read Interrupted by a Write


To interrupt a burst read with a Write Command, DQM may be needed to place the DQs (output drivers) in a high impedance state to avoid data contention on the DQ bus. If a Read Command will issue data on the first or second clocks cycles of the write operation, DQM is needed to insure the DQs are tri-stated. After that point the Write Command will have control of the DQ bus.

Minimum Read to Write Interval

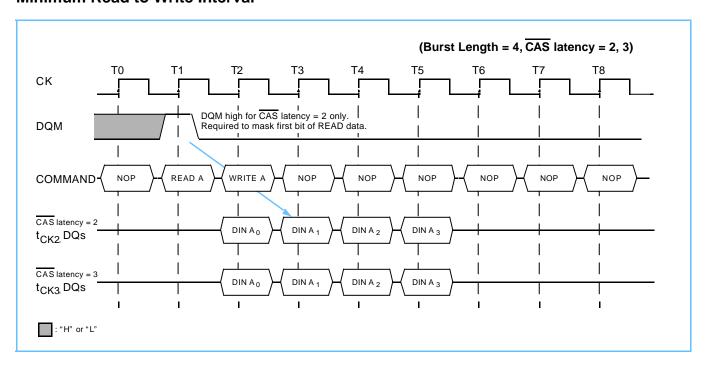



Non-Minimum Read to Write Interval

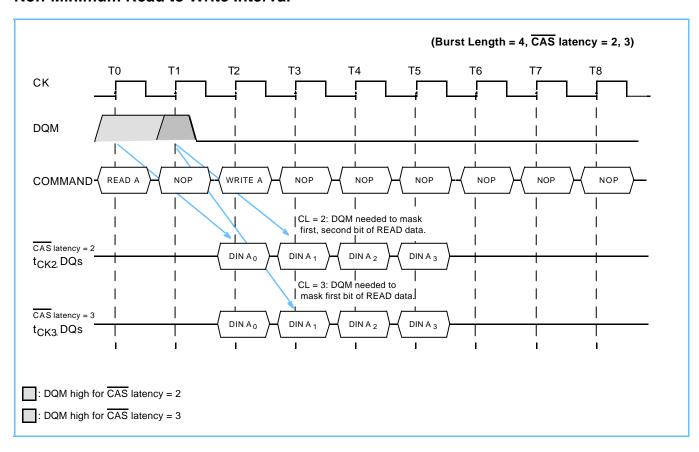




Burst Write Command

The Burst Write command is initiated by having \overline{CS} , \overline{CAS} , and \overline{WE} low while holding \overline{RAS} high at the rising edge of the clock. The address inputs determine the starting column address. There is no \overline{CAS} latency required for burst write cycles. Data for the first burst write cycle must be applied on the DQ pins on the same clock cycle that the Write Command is issued. The remaining data inputs must be supplied on each subsequent rising clock edge until the burst length is completed. When the burst has finished, any additional data supplied to the DQ pins will be ignored.


Burst Write Operation

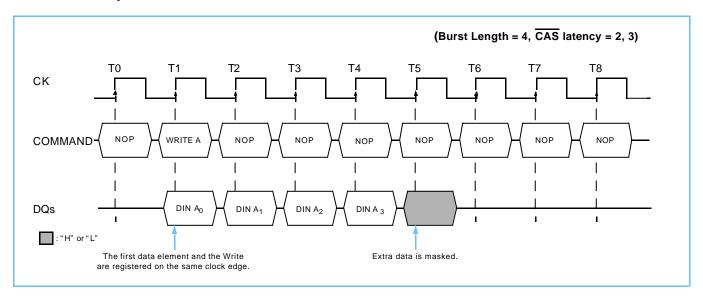

Write Interrupted by a Write

A burst write may be interrupted before completion of the burst by another Write Command. When the previous burst is interrupted, the remaining addresses are overridden by the new address and data will be written into the device until the programmed burst length is satisfied.

Write Interrupted by a Write

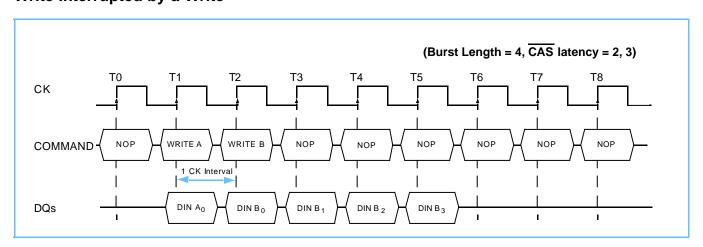




Write Interrupted by a Read


A Read Command will interrupt a burst write operation on the same clock cycle that the Read Command is registered. The DQs must be in the high impedance state at least one cycle before the interrupting read data appears on the outputs to avoid data contention. When the Read Command is registered, any residual data from the burst write cycle will be ignored. Data that is presented on the DQ pins before the Read Command is initiated will actually be written to the memory.

Minimum Write to Read Interval

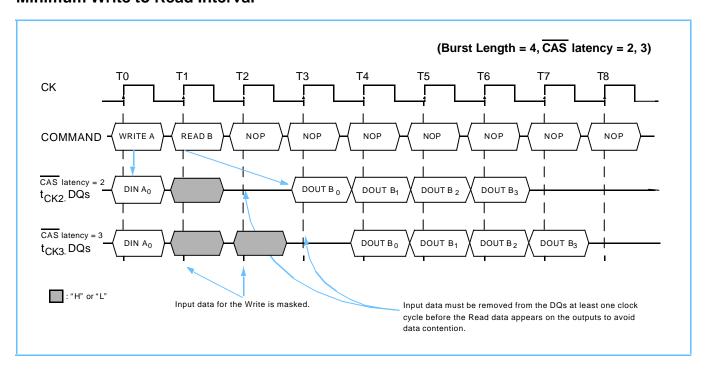



Non-Minimum Write to Read Interval

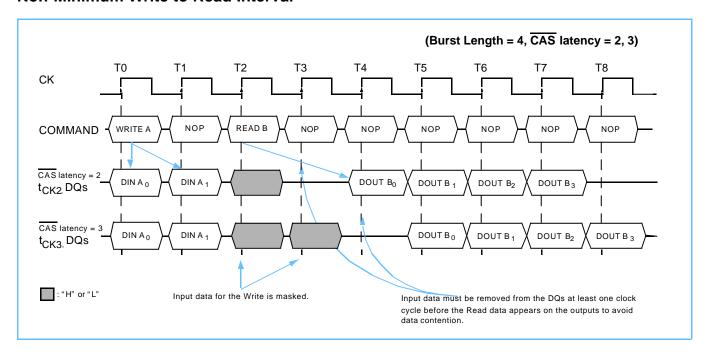




Auto-Precharge Operation

Before a new row in an active bank can be opened, the active bank must be precharged using either the Precharge Command or the auto-precharge function. When a Read or a Write Command is given to the SDRAM, the $\overline{\text{CAS}}$ timing accepts one extra address, column address A10, to allow the active bank to automatically begin precharge at the earliest possible moment during the burst read or write cycle. If A10 is low when the Read or Write Command is issued, then normal Read or Write burst operation is executed and the bank remains active at the completion of the burst sequence. If A10 is high when the Read or Write Command is issued, then the auto-precharge function is engaged. During auto-precharge, a Read Command will execute as normal with the exception that the active bank will begin to precharge before all burst read cycles have been completed. Regardless of burst length, the precharge will begin (CAS latency - 1) clocks prior to the last data output. Auto-precharge can also be implemented during Write commands.

A Read or Write Command without auto-precharge can be terminated in the midst of a burst operation. However, a Read or Write Command with auto-precharge cannot be interrupted by a command to the same bank. Therefore use of a Read, Write, or Precharge Command to the same bank is prohibited during a read or write cycle with auto-precharge until the entire burst operation is completed. Once the precharge operation has started the bank cannot be reactivated until the Precharge time (t_{RP}) has been satisfied.


When using the Auto-precharge Command, the interval between the Bank Activate Command and the beginning of the internal precharge operation must satisfy $t_{RAS(min)}$. If this interval does not satisfy $t_{RAS(min)}$ then t_{RCD} must be extended.

Burst Read with Auto-Precharge

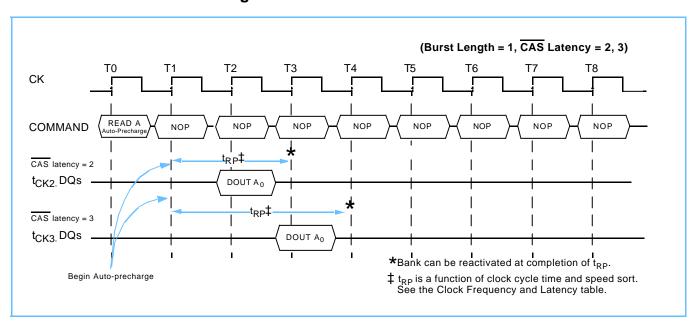




Burst Read with Auto-Precharge

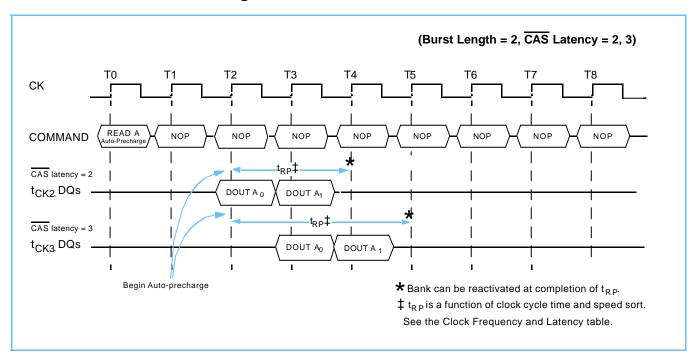


Burst Read with Auto-Precharge

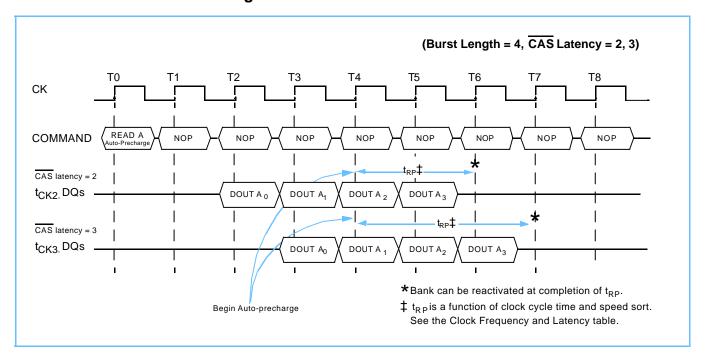




Although a Read Command with auto-precharge can not be interrupted by a command to the same bank, it can be interrupted by a Read or Write Command to a different bank. If the command is issued before auto-precharge begins then the precharge function will begin with the new command. The bank being auto-precharged may be reactivated after the delay t_{RP}.

Burst Read with Auto-Precharge Interrupted by Read

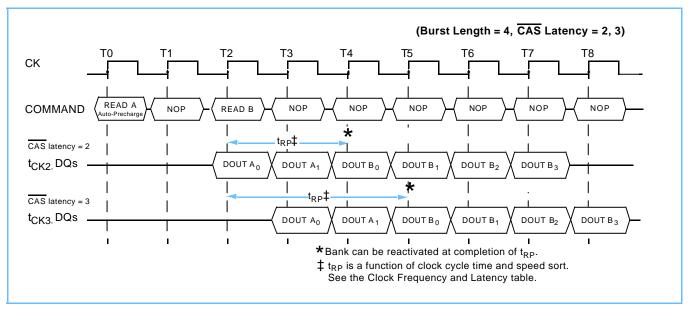

If interrupting a Read Command with auto-precharge with a Write Command, DQM must be used to avoid DQ contention.


Burst Read with Auto-Precharge Interrupted by Write

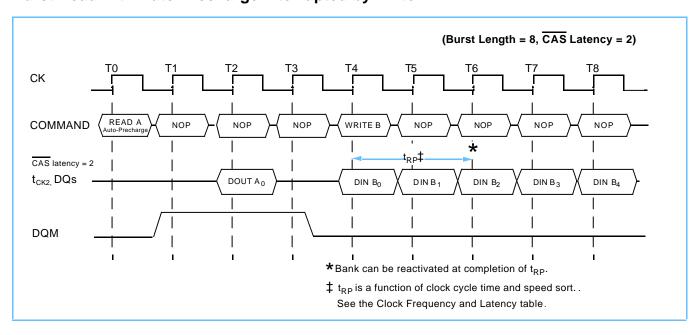




If A10 is high when a Write Command is issued, the Write with Auto-Precharge function is initiated. The bank undergoing auto-precharge cannot be reactivated until t_{DAL}, Data-in to Active delay, is satisfied.

Burst Write with Auto-Precharge

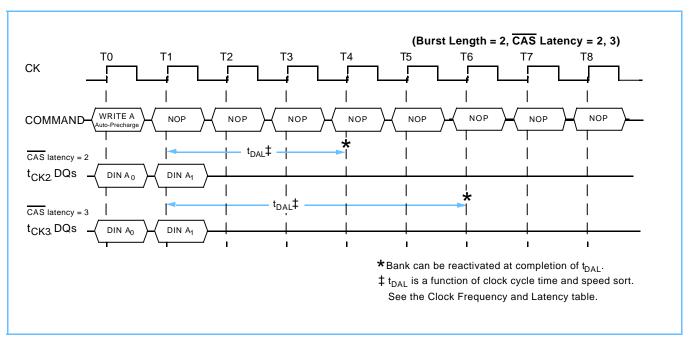


Similar to the Read Command, a Write Command with auto-precharge can not be interrupted by a command to the same bank. It can be interrupted by a Read or Write Command to a different bank, however. The interrupting command will terminate the write. The bank undergoing auto-precharge can not be reactivated until t_{DAL} is satisfied.

Burst Write with Auto-Precharge Interrupted by Write

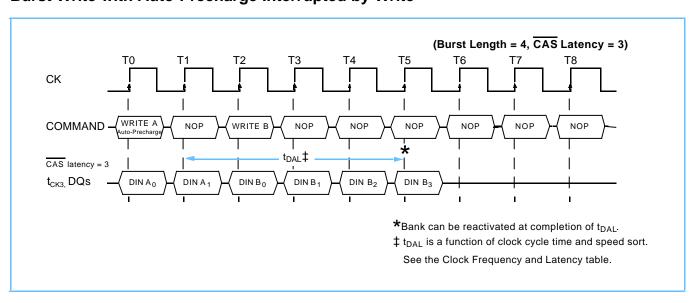



Burst Write with Auto-Precharge Interrupted by Read

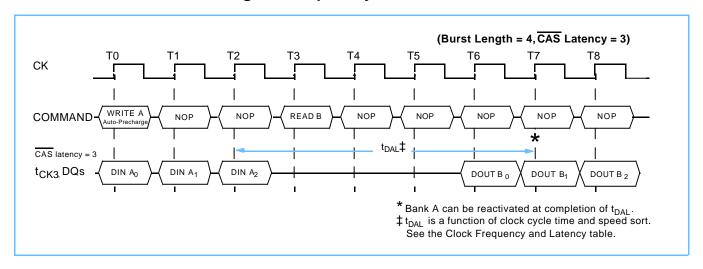

Precharge Command

The Precharge Command is used to precharge or close a bank that has been activated. The Precharge Command is triggered when CS, RAS, and WE are low and CAS is high at the rising edge of the clock. The Precharge Command can be used to precharge each bank separately or all banks simultaneously. Three address bits, A10, BS0, and BS1, are used to define which bank(s) is to be precharged when the command is issued.

Bank Selection for Precharge by Address Bits


A10	Bank Select	Precharged Bank(s)
LOW	BS0, BS1	Single bank defined by BS0, BS1
HIGH	DON' T CARE	All Banks

For read cycles, the Precharge Command may be applied (CAS latency - 1) prior to the last data output. For write cycles, a delay must be satisfied from the start of the last burst write cycle until the Precharge Command can be issued. This delay is known as t_{DPL}, Data-in to Precharge delay.


After the Precharge Command is issued, the precharged bank must be reactivated before a new read or write access can be executed. The delay between the Precharge Command and the Activate Command must be greater than or equal to the Precharge time (t_{RP}) .



Burst Read Followed by the Precharge Command

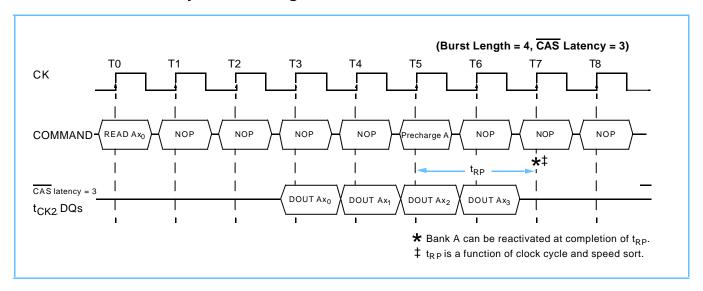

Burst Write Followed by the Precharge Command

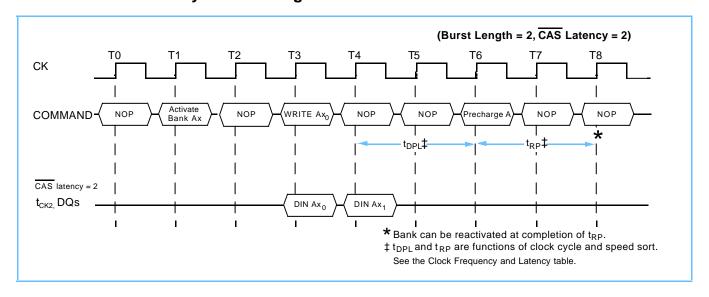




Precharge Termination

The Precharge Command may be used to terminate either a burst read or burst write operation. When the Precharge command is issued, the burst operation is terminated and bank precharge begins. For burst read operations, valid data will continue to appear on the data bus as a function of CAS Latency.


Burst Read Interrupted by Precharge

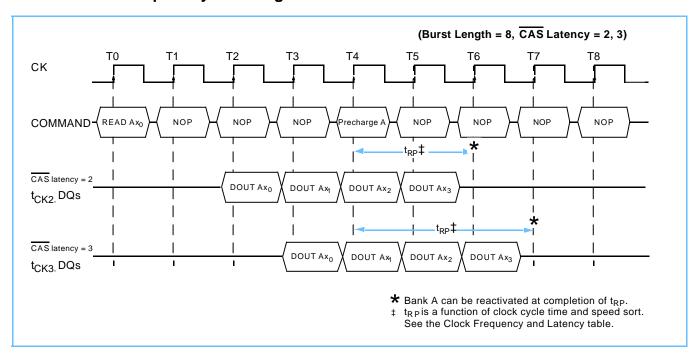



Burst write operations will be terminated by the Precharge command. The last write data that will be properly stored in the device is that write data that is presented to the device a number of clock cycles prior to the Precharge command equal to the Data-in to Precharge delay, t_{DPL}.

Precharge Termination of a Burst Write

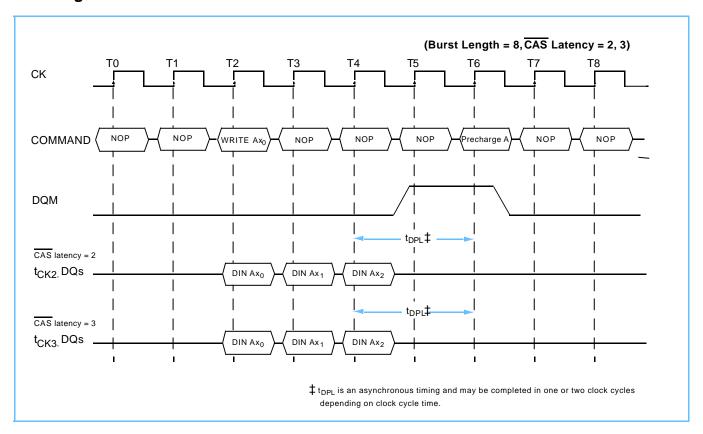



Automatic Refresh Command (CAS before RAS Refresh)

When $\overline{\text{CS}}$, $\overline{\text{RAS}}$, and $\overline{\text{CAS}}$ are held low with CKE and $\overline{\text{WE}}$ high at the rising edge of the clock, the chip enters the Automatic Refresh mode (CBR). All banks of the SDRAM must be precharged and idle for a minimum of the Precharge time (t_{RP}) before the Auto Refresh Command (CBR) can be applied. An address counter, internal to the device provides the address during the refresh cycle. No control of the external address pins is required once this cycle has started.

When the refresh cycle has completed, all banks of the SDRAM will be in the precharged (idle) state. A delay between the Auto Refresh Command (CBR) and the next Activate Command or subsequent Auto Refresh Command must be greater than or equal to the RAS cycle time (t_{RC}).

Self Refresh Command

The SDRAM device has a built-in timer to accommodate Self Refresh operation. The Self Refresh Command is defined by having CS, RAS, CAS, and CKE held low with WE high at the rising edge of the clock. All banks must be idle prior to issuing the Self Refresh Command. Once the command is registered, CKE must be held low to keep the device in Self Refresh mode. When the SDRAM has entered Self Refresh mode all of the external control signals, except CKE, are disabled. The clock is internally disabled during Self Refresh Operation to save power. The user may halt the external clock while the device is in Self Refresh mode, however, the clock must be restarted before the device can exit Self Refresh operation. Once the clock is cycling, the device will exit Self Refresh operation after CKE is returned high. A minimum delay time is required when the device exits Self Refresh Operation and before the next command can be issued. This delay is equal to the RAS cycle time (t_{RC}) plus the Self Refresh exit time (t_{SREX}).




Power Down Mode

In order to reduce standby power consumption, two power down modes are available: Precharge and Active Power Down mode. To enter Precharge Power Down mode, all banks must be precharged and the necessary precharge delay (t_{RP}) must occur before the SDRAM can enter the power down mode. If a bank is activated but not performing a Read or Write operation, Active Power Down mode will be entered. (Issuing a Power Down Mode Command when the device is performing a Read or Write operation causes the device to enter Clock Suspend mode. See the following Clock Suspend section.) Once the Power Down mode is initiated by holding CKE low, all of the receiver circuits except CKE are gated off. The Power Down mode does not perform any refresh operations, therefore the device can't remain in Power Down mode longer than the Refresh period (t_{REF}) of the device.

The Power Down mode is exited by bringing CKE high. When CKE goes high, a No Operation Command (or Device Deselect Command) is required on the next rising clock edge.

Power Down Mode Exit Timing

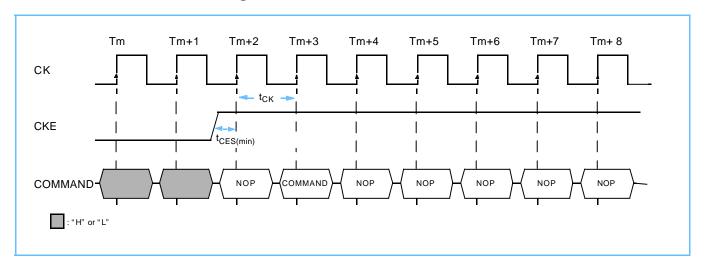




Data Mask

The SDRAM has a Data Mask function that can be used in conjunction with data read and write cycles. When the Data Mask is activated (DQM high) during a write cycle, the write operation is prohibited immediately (zero clock latency). If the Data Mask is activated during a read cycle, the data outputs are disabled and become high impedance after a two-clock delay, independent of CAS latency.

Data Mask Activated during a Read Cycle

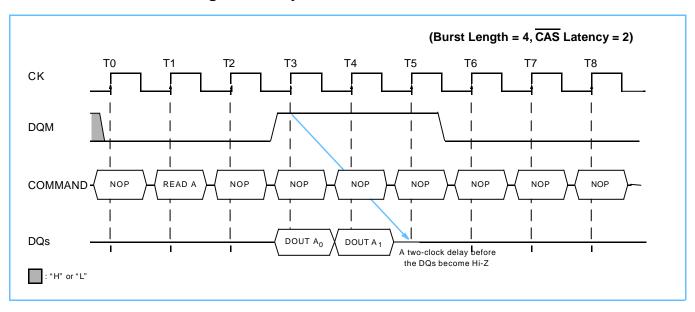

No Operation Command

The No Operation Command should be used in cases when the SDRAM is in an idle or a wait state. The purpose of the No Operation Command is to prevent the SDRAM from registering any unwanted commands between operations. A No Operation Command is registered when CS is low with RAS, CAS, and WE held high at the rising edge of the clock. A No Operation Command will not terminate a previous operation that is still executing, such as a burst read or write cycle.

Deselect Command

The Deselect Command performs the same function as a No Operation Command. Deselect Command occurs when $\overline{\text{CS}}$ is brought high, the RAS, CAS, and WE signals become don't cares.




Clock Suspend Mode

During normal access mode, CKE is held high, enabling the clock. When CKE is registered low while at least one of the banks is active, Clock Suspend Mode is entered. The Clock Suspend mode deactivates the internal clock and suspends or "freezes" any clocked operation that was currently being executed. There is a one-clock delay between the registration of CKE low and the time at which the SDRAM's operation suspends. While in Clock Suspend mode, the SDRAM ignores any new commands that are issued. The Clock Suspend mode is exited by bringing CKE high. There is a one clock cycle delay from when CKE returns high to when Clock Suspend mode is exited.


When the operation of the SDRAM is suspended during the execution of a Burst Read operation, the last valid data output onto the DQ pins will be actively held valid until Clock Suspend mode is exited.

Clock Suspend during a Read Cycle

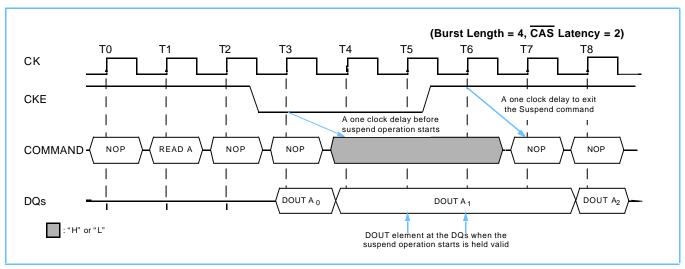

If Clock Suspend mode is initiated during a burst write operation, the input data is masked and is ignored until the Clock Suspend mode is exited.

Clock Suspend during a Write Cycle

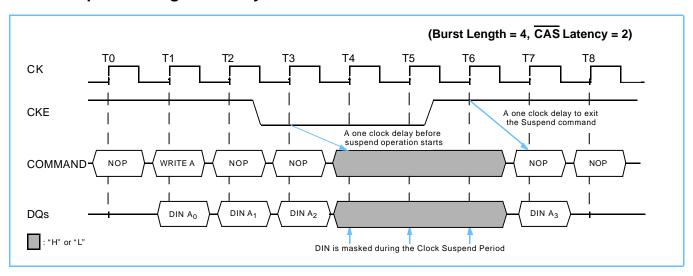



Command Truth Table (See note 1)

		Cł	(Ε						BS0.		A11,	
Function	Device State	Previous Cycle	Current Cycle	cs	RAS	CAS	WE	DQM	BS1	A10	A11, A9-A0	Notes
Mode Register Set	Idle	Н	Х	L	L	L	L	Х		OP Cod	de	
Auto (CBR) Refresh	Idle	Н	Н	L	L	L	Н	Χ	Х	Х	Х	
Entry Self Refresh	Idle	Н	L	L	L	L	Н	Х	Х	Х	Х	
Exit Self Refresh	Idle (Self-	L	н	Н	Х	Х	Х	Х	Х	Х	Х	
EXIL Sell Reliesii	Refresh)		П	L	Н	Н	Н	^	^	^	Х	
Single Bank Precharge	See Current State Table	Н	Х	L	L	Н	L	Х	BS	L	Х	2
Precharge all Banks	See Current State Table	Н	Х	L	L	Н	L	Х	Х	Н	Х	
Bank Activate	Idle	Н	Х	L	L	Н	Н	Х	BS	Row	Row Address	
Write	Active	Н	Х	L	Н	L	L	Х	BS	L	Column	2
Write with Auto-Precharge	Active	Н	Х	L	Н	L	L	Χ	BS	Н	Column	2
Read	Active	Н	Х	L	Н	L	Н	Х	BS	L	Column	2
Read with Auto-Precharge	Active	Н	Х	L	Н	L	Н	Х	BS	Н	Column	2
Reserved		Н	Х	L	Н	Н	L	Χ	Х	Х	Х	
No Operation	Any	Н	Х	L	Н	Н	Н	Х	Х	Х	Х	
Device Deselect	Any	Н	Х	Н	Х	Х	Х	Х	Х	Х	Х	
Clock Suspend Mode Entry	Active	Н	L	Х	Х	Х	Х	Х	Х	Х	Х	4
Clock Suspend Mode Exit	Active	L	Н	Х	Х	Х	Х	Х	Х	Х	Х	4
Data Write/Output Enable	Active	Н	Х	Х	Х	Х	Х	L	Х	Х	Х	5
Data Mask/Output Disable	Active	Н	Х	Х	Х	Х	Х	Н	Х	Х	Х	J
Power Down Mode Entry	Idle/Active	н		Н	Х	Х	Х	Х	Х	v	V	6.7
Power Down Mode Entry	idle/Active	П	L	L	Н	Н	Н	۸	۸	Х	Х	6, 7
Power Down Mode Exit	Any (Power	L	ы	Н	Х	Х	Х	Х	Х	Х	Х	6, 7
FOWER DOWN MODE EXIL	Down)		Н	L	Н	Н	Н	^	^	^	^	υ, <i>ι</i>

- 1. All of the SDRAM operations are defined by states of CS, WE, RAS, CAS, and DQM at the positive rising edge of the clock.Refer to the Current State Truth Table.
- 2. Bank Select (BS0, BS1): BS0, BS1 = 0,0 selects bank 0; BS0, BS1 = 1,0 selects bank 1; BS0, BS1 = 0,1 selects bank 2; BS0, BS1 = 1,1 selects bank 3.
- 3. Not applicable.
- 4. During normal access mode, CKE is held high and CK is enabled. When it is low, it freezes the internal clock and extends data Read and Write operations. One clock delay is required for mode entry and exit.
- 5. The DQM has two functions for the data DQ Read and Write operations. During a Read cycle, when DQM goes high at a clock timing the data outputs are disabled and become high impedance after a two-clock delay. DQM also provides a data mask function for Write cycles. When it activates, the Write operation at the clock is prohibited (zero clock latency).
- 6. All banks must be precharged before entering the Power Down Mode. (If this command is issued during a burst operation, the device state will be Clock Suspend Mode.) The Power Down Mode does not perform any refresh operations; therefore the device can't remain in this mode longer than the Refresh period (t_{REF}) of the device. One clock delay is required for mode entry and exit.
- $7. \ \ A\ No\ Operation\ or\ Device\ Deselect\ Command\ is\ required\ on\ the\ next\ clock\ edge\ following\ CKE\ going\ high.$



Clock Enable (CKE) Truth Table

	Cł	ΚE			Co	mmand				
Current State	Previous Cycle	Current Cycle	cs	RAS	CAS	WE	BS0, BS1	A11 - A0	Action	Notes
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
'	L	Н	Н	Х	Х	Х	Х	Х	Exit Self Refresh with Device Deselect	2
'	L	Н	L	Н	Н	Н	Х	Х	Exit Self Refresh with No Operation	2
Self Refresh	L	Н	L	Н	Н	L	Х	Х	ILLEGAL	2
·	L	Н	L	Н	L	Х	Х	Х	ILLEGAL	2
·	L	Н	L	L	Х	Х	Х	Х	ILLEGAL	2
	L	L	Х	Х	Х	Х	Х	Х	Maintain Self Refresh	
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
Power Down	L	Н	Н	Х	Х	Х	Х	Х	Power Down mode exit, all banks idle	2
Power Down	L	Н	L	Х	Х	Х	Х	Х	ILLEGAL	2
	L	L	Х	Х	Х	Х	Х	Х	Maintain Power Down Mode	
	Н	Н	Н	Х	Х	Х				3
·	Н	Н	L	Н	Х	Х			Refer to the Idle State section of the Current State Truth Table	3
	Н	Н	L	L	Н	Х				3
·	Н	Н	L	L	L	Н	Х	Х	CBR Refresh	
·	Н	Н	L	L	L	L	OP (Code	Mode Register Set	4
All Banks Idle	Н	L	Н	Х	Х	Х				3
·	Н	L	L	Н	Х	Х			Refer to the Idle State section of the Current State Truth Table	3
	Н	L	L	L	Н	Х				3
·	Н	L	L	L	L	Н	Х	Х	Entry Self Refresh	4
·	Н	L	L	L	L	L	OP (Code	Mode Register Set	
	L	Х	Х	Х	Х	Х	Х	Х	Power Down	4
A.v. Ci. i	Н	Н	Х	Х	Х	Х	X	Х	Refer to operations in the Current State Truth Table	
Any State other than	Н	L	Х	Х	Х	Х	Х	Х	Begin Clock Suspend next cycle	5
listed above	L	Н	Х	Х	Х	Х	Х	Х	Exit Clock Suspend next cycle	
	L	L	Х	Х	Х	Х	Х	Х	Maintain Clock Suspend	

- 1. For the given Current State CKE must be low in the previous cycle.
- 2. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. The minimum setup time for CKE (t_{CES}) must be satisfied. When exiting power down mode, a NOP command (or Device Deselect Command) is required on the first rising clock after CKE goes high (see page 26).
- 3. The address inputs depend on the command that is issued. See the Idle State section of the Current State Truth Table for more information.
- 4. The Precharge Power Down Mode, the Self Refresh Mode, and the Mode Register Set can only be entered from the all banks idle state.
- 5. Must be a legal command as defined in the Current State Truth Table.



Current State Truth Table (Part 1 of 3)(See note 1)

Current State					Con	nmand		Action	Notes
Current State	CS	RAS	CAS	WE	BS0,BS1	A11 - A0	Description	Action	Notes
	L	L	L	L	OF	Code	Mode Register Set	Set the Mode Register	2
	L	L	L	Н	Х	Х	Auto or Self Refresh	Start Auto or Self Refresh	2, 3
	L	L	Н	L	BS	Х	Precharge	No Operation	
ldle	L	L	Н	Н	BS	Row Address	Bank Activate	Activate the specified bank and row	
luie	L	Н	L	L	BS	Column	Write w/o Precharge	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read w/o Precharge	ILLEGAL	4
	L	Н	Н	Н	Х	Х	No Operation	No Operation	
	Н	Х	Χ	Х	Х	Х	Device Deselect	No Operation or Power Down	5
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	Precharge	6
Row Active	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Now Active	L	Н	L	L	BS	Column	Write	Start Write; Determine if Auto Precharge	7, 8
	L	Н	L	Н	BS	Column	Read	Start Read; Determine if Auto Precharge	7, 8
	L	Н	Н	Н	Х	Х	No Operation	No Operation	
	Н	Х	Χ	Х	Х	Х	Device Deselect	No Operation	
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	Terminate Burst; Start the Precharge	
Read	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Read	L	Н	L	L	BS	Column	Write	Terminate Burst; Start the Write cycle	8, 9
	L	Н	L	Н	BS	Column	Read	Terminate Burst; Start a new Read cycle	8, 9
	L	Н	Н	Н	Х	X	No Operation	Continue the Burst	
	Н	Х	Χ	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	Terminate Burst; Start the Precharge	
Write	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
VVIILE	L	Н	L	L	BS	Column	Write	Terminate Burst; Start a new Write cycle	8, 9
	L	Н	L	Н	BS	Column	Read	Terminate Burst; Start the Read cycle	8, 9
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Χ	Χ	Х	Х	Device Deselect	Continue the Burst	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The $\underline{\text{minimum}}$ and maximum Active time (t_{RAS}) must be satisfied.
- 7. The \overline{RAS} to \overline{CAS} Delay (t_{RCD}) must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t_{RRD}) is not satisfied.



Current State Truth Table (Part 2 of 3)(See note 1)

Current State					Con	nmand		Action	Notes
Ourient State	CS	RAS	CAS	WE	BS0,BS1	A11 - A0	Description		140163
	L	L	L	L	OF	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	ILLEGAL	4
Read with Auto Pre-	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
charge	L	Н	L	L	BS	Column	Write	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	Н	X	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	X	Х	Device Deselect	Continue the Burst	
	L	L	L	L	OF	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	X	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	ILLEGAL	4
Write with Auto	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Precharge	L	Н	L	L	BS	Column	Write	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L	OF	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	X	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	No Operation; Bank(s) idle after t _{RP}	
Precharging	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Frechaiging	L	Н	L	L	BS	Column	Write	ILLEGAL	4
]	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	Н	X	Х	No Operation	No Operation; Bank(s) idle after t _{RP}	
	Н	Х	Х	Х	X	Х	Device Deselect	No Operation; Bank(s) idle after t _{RP}	
	L	L	L	L	OF	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	X	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	ILLEGAL	4
Row	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4, 10
Activating	L	Н	L	L	BS	Column	Write	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Row Active after t _{RCD}	
	Н	Х	Х	Χ	X	X	Device Deselect	No Operation; Row Active after t _{RCD}	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The $\underline{\text{minimum}}$ and maximum Active time (t_{RAS}) must be satisfied.
- 7. The \overline{RAS} to \overline{CAS} Delay (t_{RCD}) must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t_{RRD}) is not satisfied.



Current State Truth Table (Part 3 of 3)(See note 1)

Current State					Con	nmand		Action	Notes
Current State	CS	RAS	CAS	WE	BS0,BS1	A11 - A0	Description	Action	140163
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
·	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
·	L	L	Н	L	BS	Х	Precharge	ILLEGAL	4
Write	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Recovering	L	Н	L	L	BS	Column	Write	Start Write; Determine if Auto Precharge	9
·	L	Н	L	Н	BS	Column	Read Start Read; Determine if Auto Precl		9
·	L	Н	Н	Н	Х	Х	No Operation	No Operation; Row Active after t _{DPL}	
'	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation; Row Active after t _{DPL}	
	L	L	L	L	OF	^o Code	Mode Register Set	ILLEGAL	
·	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
Write	L	L	Н	L	BS	Х	Precharge	ILLEGAL	4
Recovering with	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Auto Pre-	L	Н	L	L	BS	Column	Write	ILLEGAL	4, 9
charge	L	Н	L	Н	BS	Column	Read	ILLEGAL	4, 9
·	L	Н	Н	Н	Х	Х	No Operation	No Operation; Precharge after t _{DPL}	
·	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation; Precharge after t _{DPL}	
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
·	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
·	L	L	Н	L	BS	Х	Precharge	ILLEGAL	
Refreshing	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	
Refrestiling	L	Н	L	L	BS	Column	Write	ILLEGAL	
·	L	Н	L	Н	BS	Column	Read	ILLEGAL	
·	L	Н	Н	Н	Х	Х	No Operation	No Operation; Idle after t _{RC}	
·	Н	Х	Χ	Х	Х	Х	Device Deselect	No Operation; Idle after t _{RC}	
	L	L	L	L	OF	Code	Mode Register Set	ILLEGAL	
·	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
·	L	L	Н	L	BS	Х	Precharge	ILLEGAL	
Mode Register	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	
Accessing	L	Н	L	L	BS	Column	Write	ILLEGAL	
	L	Н	L	Н	BS	Column	Read	ILLEGAL	
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Idle after two clock cycles	
	Н	Х	Х	Χ	Х	X	Device Deselect	No Operation; Idle after two clock cycles	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The $\underline{\text{minimum}}$ and maximum Active time (t_{RAS}) must be satisfied.
- 7. The \overline{RAS} to \overline{CAS} Delay (t_{RCD}) must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t_{RRD}) is not satisfied.



Absolute Maximum Ratings

Symbol	Parameter	Rating	Units	Notes
V_{DD}	Power Supply Voltage	-0.3 to +4.6	V	1
V_{DDQ}	Power Supply Voltage for Output	-0.3 to +4.6	V	1
V _{IN}	Input Voltage	-0.3 to V _{DD} +0.3	V	1
V _{OUT}	Output Voltage	-0.3 to V _{DD} +0.3	V	1
T _A	Operating Temperature (ambient)	0 to +70	°C	1
T _{STG}	Storage Temperature	-55 to +125	°C	1
P_{D}	Power Dissipation	1.0	W	1
Іоит	Short Circuit Output Current	50	mA	1

^{1.} Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Recommended DC Operating Conditions $(T_A = 0^{\circ}C \text{ to } 70^{\circ}C)$

Symbol	Parameter	Rating			Units	Notes	
		Min.	Тур.	Max.	Offics	140162	
V _{DD}	Supply Voltage	3.0	3.3	3.6	V	1	
V_{DDQ}	Supply Voltage for Output	3.0	3.3	3.6	V	1	
V _{IH}	Input High Voltage	2.0	_	V _{DD} + 0.3	V	1, 2	
V _{IL}	Input Low Voltage	-0.3	_	0.8	V	1, 3	

^{1.} All voltages referenced to $V_{\mbox{\footnotesize SS}}$ and $V_{\mbox{\footnotesize SSQ}}.$

Capacitance ($T_A = 25$ °C, f = 1MHz, $V_{DD} = 3.3$ V ± 0.3 V)

Symbol	Parameter		Тур	Max.	Units	Notes
Cı	Input Capacitance (A0-A11, BS0, BS1, CS, RAS, CAS, WE, CKE, DQM)	2.5	3.0	3.8	pF	
C _I	Input Capacitance (CK)	2.5	2.8	3.5	pF	
Co	C _O Output Capacitance (DQ0 - DQ15)		4.5	6.5	pF	
1.						


^{2.} V_{IH} (max) = V_{DD} + 1.2V for pulse width \leq 5ns. 3. V_{IL} (min) = V_{SS} - 1.2V for pulse width \leq 5ns.



DC Electrical Characteristics (T_A = 0 to +70 °C, V_{DD} = 3.3V ± 0.3 V)

Symbol	Parameter	Min.	Max.	Units	Notes
I _{I(L)}	Input Leakage Current, any input $(0.0V \le V_{IN} \le V_{DD})$, All Other Pins Not Under Test = 0V	-1	+1	μΑ	
I _{O(L)}	Output Leakage Current $(D_{OUT}$ is disabled, $0.0V \le V_{OUT} \le V_{DDQ})$	-1	+1	μΑ	
V _{OH}	Output Level (LVTTL) Output "H" Level Voltage (IOUT = -2.0mA)	2.4	_	V	
V _{OL}	Output Level (LVTTL) Output "L" Level Voltage (I _{OUT} = +2.0mA)	_	0.4	V	

DC Output Load Circuit

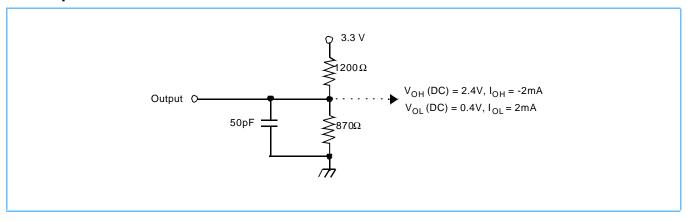



Operating, Standby, and Refresh Currents ($T_A = 0 \text{ to } +70 \,^{\circ}\text{C}, V_{DD} = 3.3 \text{V} \pm 0.3 \text{V}$)

Parameter	Symbol	Symbol Test Condition	Speed			Units	Notes
Parameter	Syllibol	rest Condition -		-75B	-8B	UTIILS	notes
Operating Current	I _{CC1}	1 bank operation $t_{RC} = t_{RC}(\text{min}), t_{CK} = \text{min}$ Active-Precharge command cycling without burst operation	90	85	80	mA	1, 2, 3
Precharge Standby Current in	I _{CC2P}	$\frac{\text{CKE}}{\text{CS}} \leq \text{V}_{\text{IL}}(\text{max}), \ \text{t}_{\text{CK}} = \text{min},$	2	2	2	mA	1
Power Down Mode	I _{CC2PS}	$\frac{\text{CKE}}{\text{CS}} \leq \text{V}_{\text{IL}}(\text{max}), \ \text{t}_{\text{CK}} = \text{Infinity},$	2	2	2	mA	1
Precharge Standby Current in Non- Power Down Mode	I _{CC2N}	$\frac{\text{CKE}}{\text{CS}} \ge \text{V}_{\text{IH}}(\text{min}), \text{t}_{\text{CK}} = \text{min},$ $\frac{\text{CKE}}{\text{CS}} = \text{V}_{\text{IH}}(\text{min})$	50	45	35	mA	1, 5
Fower Down Mode	I _{CC2NS}	$CKE \ge V_{IH}(min), t_{CK} = Infinity,$	9	9	9	mA	1, 7
No Operating Current (Active state: 4 bank)	I _{CC3N}	$\frac{\text{CKE}}{\text{CS}} \ge \text{V}_{\text{IH}}(\text{min}), \text{t}_{\text{CK}} = \text{min},$ $\frac{\text{CKE}}{\text{CS}} = \text{V}_{\text{IH}}(\text{min})$	60	50	40	mA	1, 5
(Active State: 4 Dalik)	I _{CC3P}	$CKE \le V_{IL}(max), t_{CK} = min,$	9	9	9	mA	1, 6
Operating Current (Burst Mode)	I _{CC4}	t _{CK} = min, Read/ Write command cycling, Multiple banks active, gapless data, BL = 4	135	120	90	mA	1, 3, 4
Auto (CBR) Refresh Current	I _{CC5}	t_{CK} = min, t_{RC} = t_{RC} (min) CBR command cycling	190	190	170	mA	1
Self Refresh Current	I _{CC6}	CKE ≤ 0.2V	2	2	2	mA	1


- 1. Currents given are valid for a single device.
- 2. These parameters depend on the cycle rate and are measured with the cycle determined by the minimum value of t_{CK} and t_{RC} . Input signals are changed up to three times during t_{RC} (min).
- $\ensuremath{\mathsf{3}}.$ The specified values are obtained with the output open.
- 4. Input signals are changed once during $t_{CK}(min)$.
- 5. Input signals are changed once during three clock cycles.
- 6. Active Standby Current will be higher if Clock Suspend is entered during a burst read cycle (add 1mA per DQ).
- 7. Input signals are stable.



AC Characteristics ($T_A = 0 \text{ to } +70^{\circ}\text{C}, V_{DD} = 3.3\text{V} \pm 0.3\text{V}$)

- 1. An initial pause of 200 μs, with DQM and CKE held high, is required after power-up. A Precharge All Banks command must be given followed by a minimum of two Auto (CBR) Refresh cycles before or after the Mode Register Set operation.
- 2. The Transition time is measured between V_{IH} and V_{IL} (or between V_{IL} and V_{IH})
- 3. In addition to meeting the transition rate specification, the clock and CKE must transit between V_{IH} and V_{IL} (or between V_{IL} and V_{IH}) in a monotonic manner.
- 4. Load Circuit A: AC timing tests have $V_{IL} = 0.4 \text{ V}$ and $V_{IH} = 2.4 \text{ V}$ with the timing referenced to the 1.40V crossover point
- 5. Load Circuit A: AC measurements assume $t_T = 1.0$ ns.
- 6. Load Circuit B: AC timing tests have $V_{IL} = 0.8 \text{ V}$ and $V_{IH} = 2.0 \text{ V}$ with the timing referenced to the 1.40V crossover point
- Load Circuit B: AC measurements assume t_T = 1.2ns.

AC Characteristics Diagrams

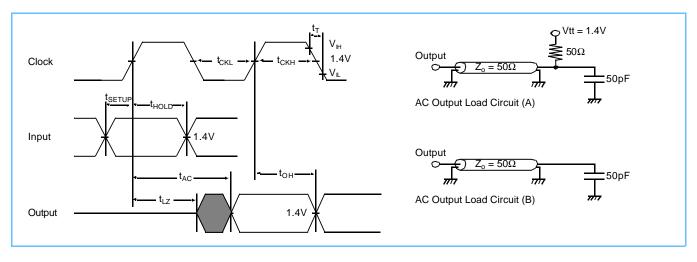



Clock and Clock Enable Parameters

Symbol	Parameter		-7 K		-75B		-8B		Notes
Syllibol	Falametei	Min.	Max.	Min.	Max.	Min.	Max.	Units	Notes
t _{CK3}	Clock Cycle Time, CAS Latency = 3	7	1000	7.5	1000	8	1000	ns	
t _{CK2}	Clock Cycle Time, CAS Latency = 2	7.5	1000	10	_	10	1000	ns	
t _{AC3 (A)}	Clock Access Time, CAS Latency = 3	_	_	_	_	_	_	ns	1
t _{AC2 (A)}	Clock Access Time, CAS Latency = 2	_	_	_	_	_	_	ns	1
t _{AC3 (B)}	Clock Access Time, CAS Latency = 3	_	5.4	_	5.4	_	6	ns	2
t _{AC2 (B)}	Clock Access Time, CAS Latency = 2	_	5.4	_	6	_	6	ns	2
t _{CKH}	Clock High Pulse Width	2.5	_	2.5	_	3	_	ns	
t _{CKL}	Clock Low Pulse Width	2.5	_	2.5	_	3	_	ns	
t _{CES}	Clock Enable Set-up Time	1.5	_	1.5	_	2	_	ns	
t _{CEH}	Clock Enable Hold Time	0.8	_	0.8	_	1	_	ns	
t _{SB}	Power down mode Entry Time	0	7.5	0	7.5	0	10	ns	
t _T	Transition Time (Rise and Fall)	0.5	10	0.5	10	0.5	10	ns	

^{1.} Access time is measured at 1.4V. See AC Characteristics: notes 1, 2, 3, 4, 5 and load circuit A.

Common Parameters

Cumbal	Symbol Parameter		-7K		-75B		-8B		Notes
Syllibol	Parameter	Min.	Max.	Min.	Max.	Min.	Max.	Units	notes
t _{CS}	Command Setup Time	1.5	_	1.5	_	2	_	ns	
t _{CH}	Command Hold Time	0.8	_	0.8	_	1	_	ns	
t _{AS}	Address and Bank Select Set-up Time	1.5	_	1.5	_	2	_	ns	
t _{AH}	Address and Bank Select Hold Time	0.8	_	0.8	_	1	_	ns	
t _{RCD}	RAS to CAS Delay	15	_	20	_	20	_	ns	1
t _{RC}	Bank Cycle Time	60	_	67.5	_	70	_	ns	1
t _{RAS}	Active Command Period	45	100K	45	100K	50	100K	ns	1
t _{RP}	Precharge Time	15	_	20	_	20	_	ns	1
t _{RRD}	Bank to Bank Delay Time	15	_	15	_	20	_	ns	1
t _{CCD}	CAS to CAS Delay Time	1	_	1	_	1	_	CK	

^{1.} These parameters account for the number of clock cycle and depend on the operating frequency of the clock, as follows: the number of clock cycles = specified value of timing / clock period (count fractions as a whole number).

Mode Register Set Cycle

	Symbol	Parameter		'Κ	-7!	5B	-8	3B	Units
L	Symbol	raiametei	Min.	Max.	Min.	Max.	Min.	Max.	Offics
	t _{RSC}	Mode Register Set Cycle Time	15	_	15	_	20	_	ns

^{2.} Access time is measured at 1.4V. See AC Characteristics: notes 1, 2, 3, 6, 7 and load circuit B.



Read Cycle

Symbol	Parameter		-7K		-75B		-8B		Notes
Symbol	raiailletei	Min.	Max.	Min.	Max.	Min.	Max.	Units	notes
t	Data Out Hold Time	_	_	_	_	2.5	_	ns	1
t _{ОН}	Data Out Flord Fillie	2.7	_	2.7	_	3	_	ns	2, 4
t _{LZ}	Data Out to Low Impedance Time	0	_	0	_	0	_	ns	
t _{HZ3}	Data Out to High Impedance Time	3	5.4	3	5.4	3	6	ns	3
t _{HZ2}	Data Out to High Impedance Time	3	5.4	3	6	3	6	ns	3
t _{DQZ}	DQM Data Out Disable Latency	2	_	2	_	2	_	CK	

- 1. AC Output Load Circuit A.
- 2. AC Output Load Circuit B.
- 3. Referenced to the time at which the output achieves the open circuit condition, not to output voltage levels.
- 4. Data Out Hold Time with no load must meet 1.8ns (-7K, -75B).

Refresh Cycle

Symbol	pol Parameter		-7K		-75B		-8B		Notes
Syllibol	Falametei	Min.	Max.	Min.	Max.	Min.	Max.	Units	NOTES
t _{REF}	Refresh Period	_	64	_	64	_	64	ms	
t _{SREX}	Self Refresh Exit Time	10	_	10	_	10	_	ns	
t _{RFC}	Bank Cycle Time (Auto Refresh)	67.5		67.5		70		ns	1

^{1.} These parameters account for the number of clock cycles and depend on the operating frequency of the clock. as follows; the number of clock cycles = specified value of timing/clock period (count fractions as a whole number).

Write Cycle

Symbol	Parameter		-7K		-75B		ВВ	Units	
Syllibol	Farameter	Min.	Max.	Min.	Max.	Min.	Max.	Offics	
t _{DS}	Data In Set-up Time	1.5	_	1.5	_	2	_	ns	
t _{DH}	Data In Hold Time	0.8	_	0.8	_	1	_	ns	
t _{DPL}	Data input to Precharge	15	_	15	_	20	_	ns	
t _{DAL3}	Data In to Active Delay CAS Latency = 3	5	_	5	_	5	_	СК	
t _{DAL2}	Data In to Active Delay CAS Latency = 2	5	_	5	_	5	_	СК	
t _{DQW}	DQM Write Mask Latency	0	_	0	_	0	_	СК	



Clock Frequency and Latency


Symbol	Parameter	-7	'K	-7:	5B	-8	ВВ	Units
f _{СК}	Clock Frequency	143	133	133	100	125	100	MHz
t _{CK}	Clock Cycle Time	7	7.5	7.5	10	8	10	ns
t _{AA}	CAS Latency	3	2	3	3	3	2	CK
t _{RP}	Precharge Time	3	2	3	2	3	2	CK
t _{RCD}	RAS to CAS Delay	3	2	3	2	3	2	CK
t _{RC}	Bank Cycle Time	9	8	9	7	9	7	CK
t _{RFC}	Bank Cycle Time(Auto Refresh)	9	9	9	7	9	7	CK
t _{RAS}	Minimum Bank Active Time	6	6	6	5	6	5	CK
t _{DPL}	Data In to Precharge	2	2	2	2	2	2	CK
t _{DAL}	Data In to Active/Refresh	5	5	5	5	5	5	CK
t _{RRD}	Bank to Bank Delay Time	2	2	2	2	2	2	CK
t _{CCD}	CAS to CAS Delay Time	1	1	1	1	1	1	CK
t _{WL}	Write Latency	0	0	0	0	0	0	CK
t _{DQW}	DQM Write Mask Latency	0	0	0	0	0	0	CK
t _{DQZ}	DQM Data Disable Latency	2	2	2	2	2	2	CK
t _{CSL}	Clock Suspend Latency	1	1	1	1	1	1	CK



Timing Diagrams	Page
AC Parameters for Write Timing	42
AC Parameters for Read Timing (3/3/3), BL=4	43
AC Parameters for Read Timing (2/2/2), BL=2	44
AC Parameters for Read Timing (3/2/2), BL=2	45
AC Parameters for Read Timing (3/3/3), BL=2	46
Mode Register Set	47
Power on Sequence and Auto Refresh (CBR)	48
Clock Suspension / DQM During Burst Read	49
Clock Suspension / DQM During Burst Write	50
Power Down Mode and Clock Suspend	51
Auto Refresh (CBR)	52
Self Refresh (Entry and Exit)	53
Random Row Read (Interleaving Banks) with Precharge, BL=8	54
Random Row Read (Interleaving Banks) with Auto-precharge, BL=8	55
Random Row Write (Interleaving Banks) with Auto-Precharge, BL=8	
Random Row Write (Interleaving Banks) with Precharge, BL=8	57
Read/Write Cycle	58
Interleaved Column Read Cycle	59
Auto Precharge after a Read Burst, BL=4	60
Auto Precharge after a Write Burst, BL=4	61
Burst Read and Single Write Operation	62
CS Function (Only CS signal needs to be asserted at minimum rate)	63




AC Parameters for Write Timing

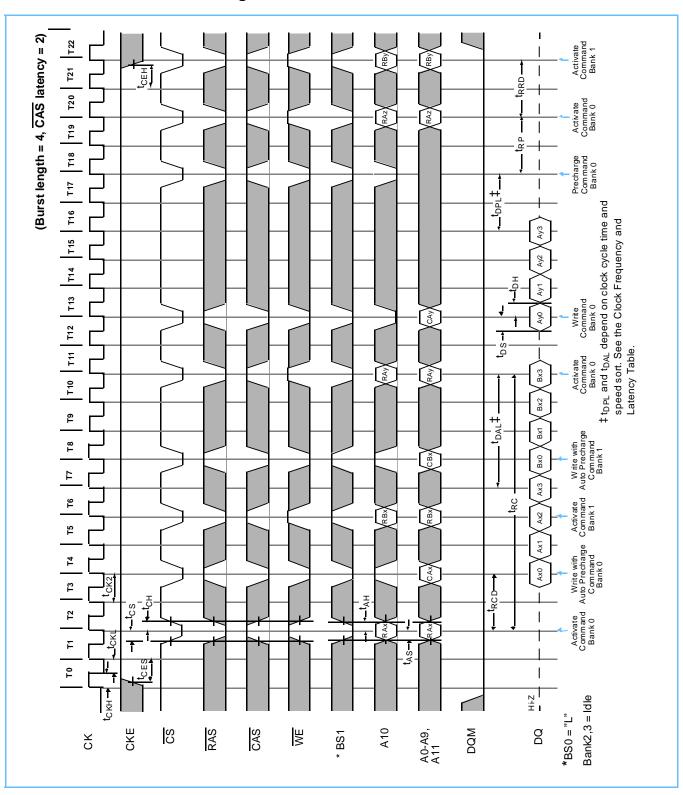




AC Parameters for Read Timing (3/3/3)

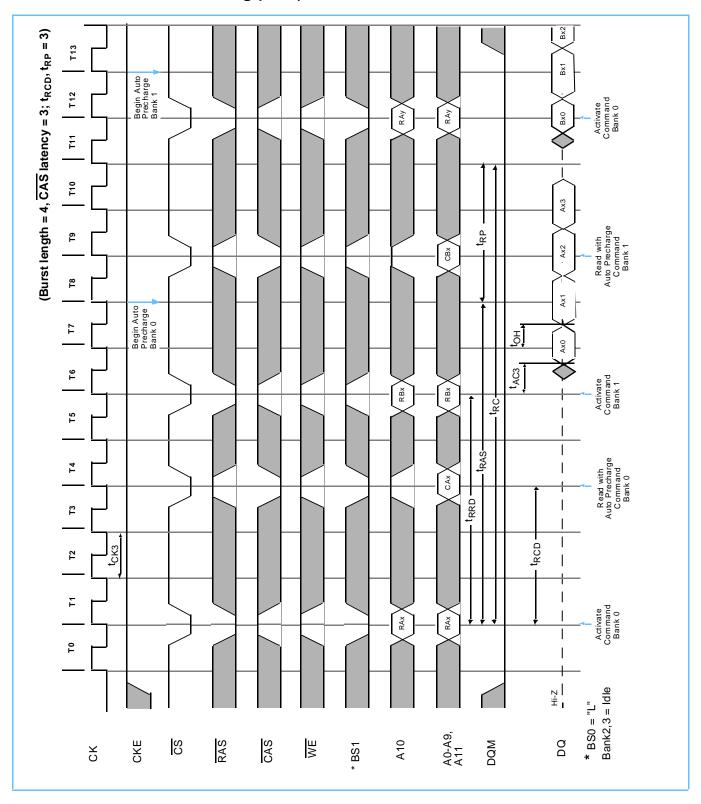




AC Parameters for Read Timing (2/2/2)

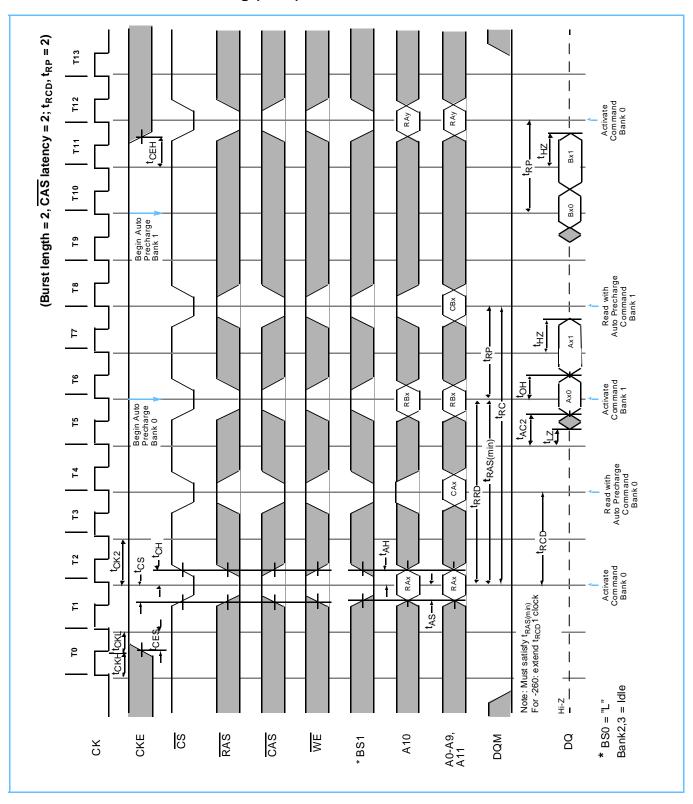




AC Parameters for Read Timing (3/2/2)

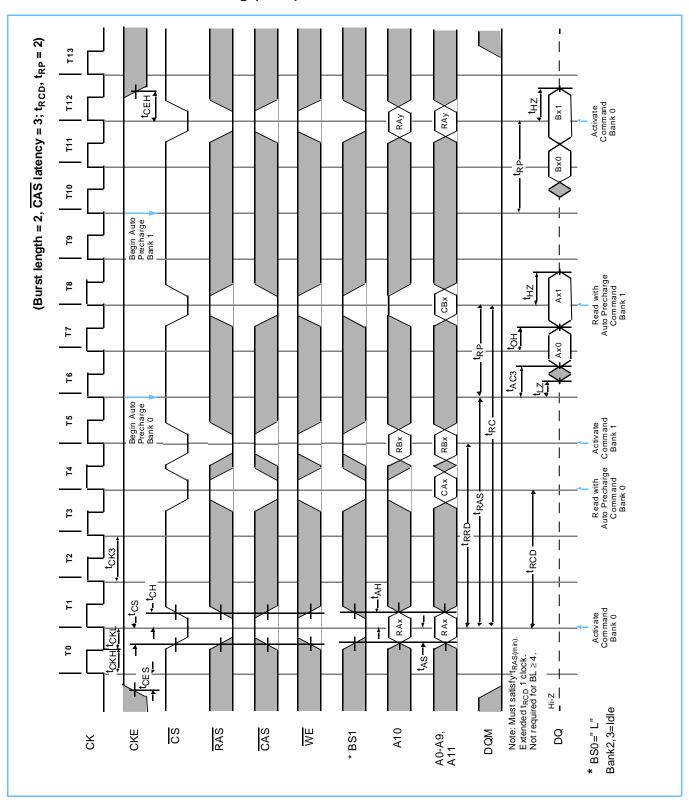




AC Parameters for Read Timing (3/3/3)

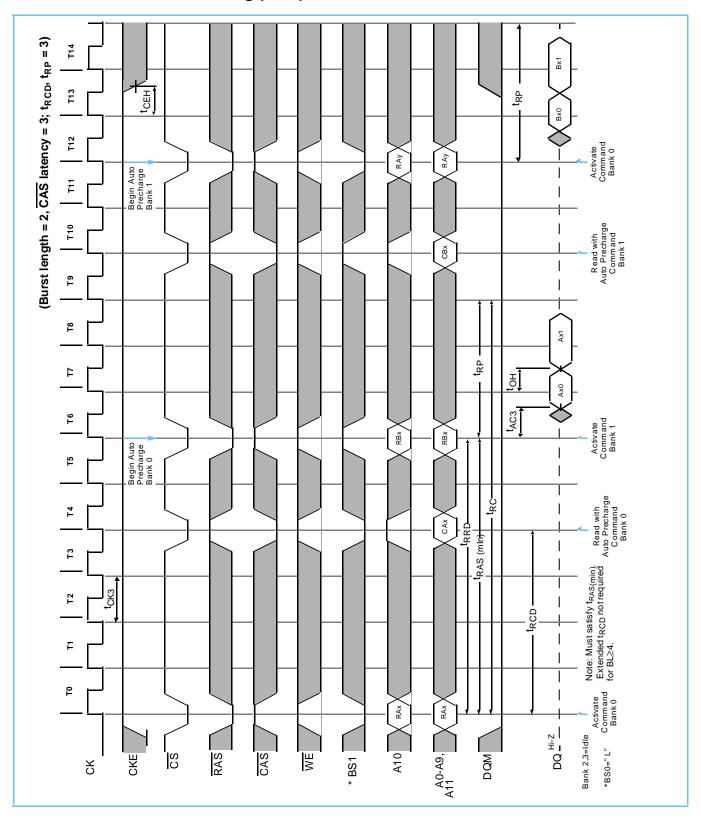




Mode Register Set

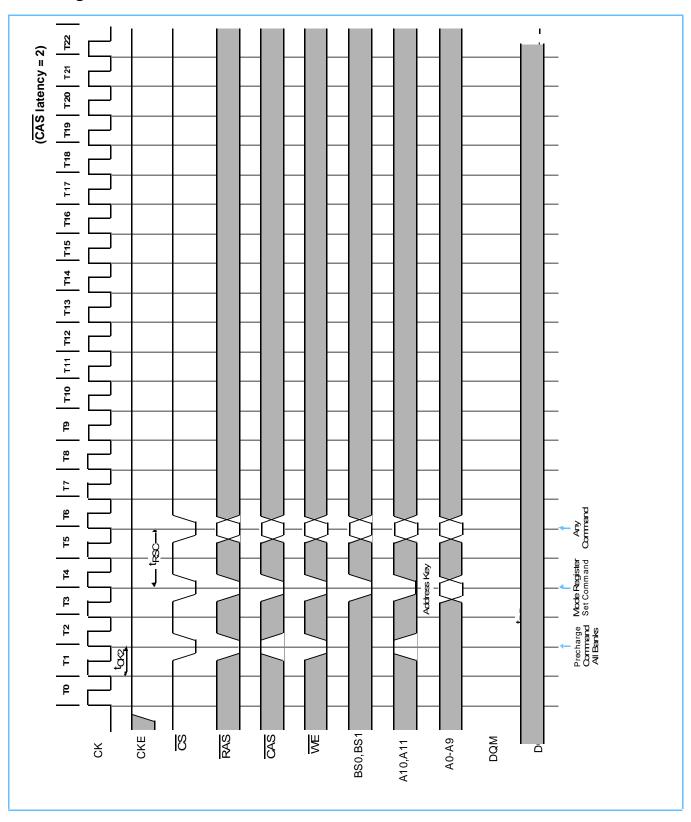




Power-On Sequence and Auto Refresh (CBR)

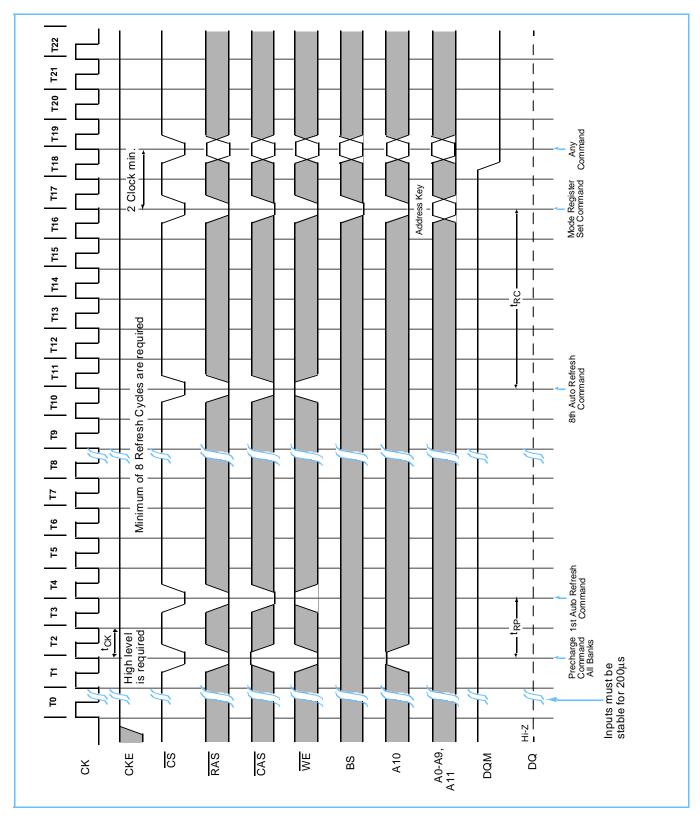




Clock Suspension / DQM During Burst Read

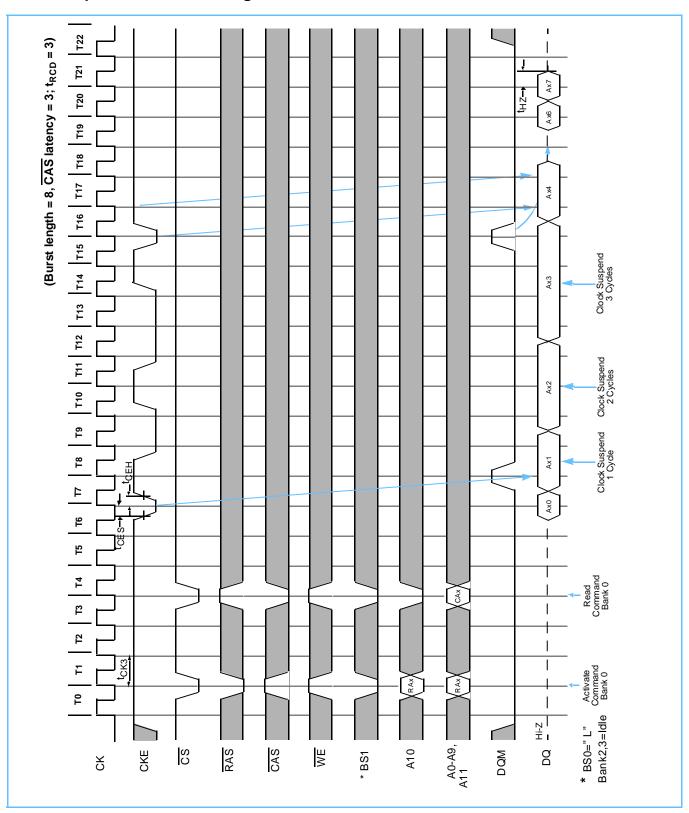




Clock Suspension / DQM During Burst Write

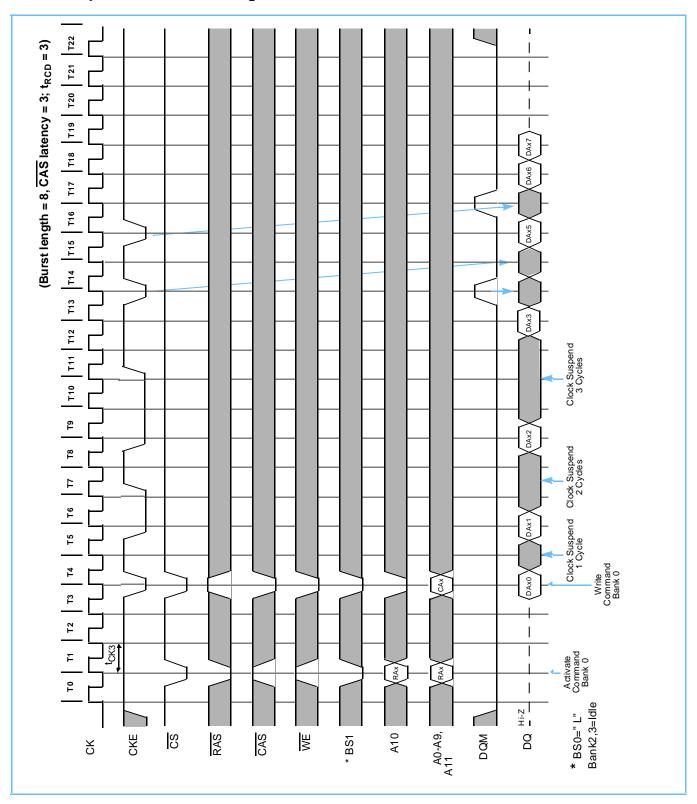




Power Down Mode and Clock Suspend

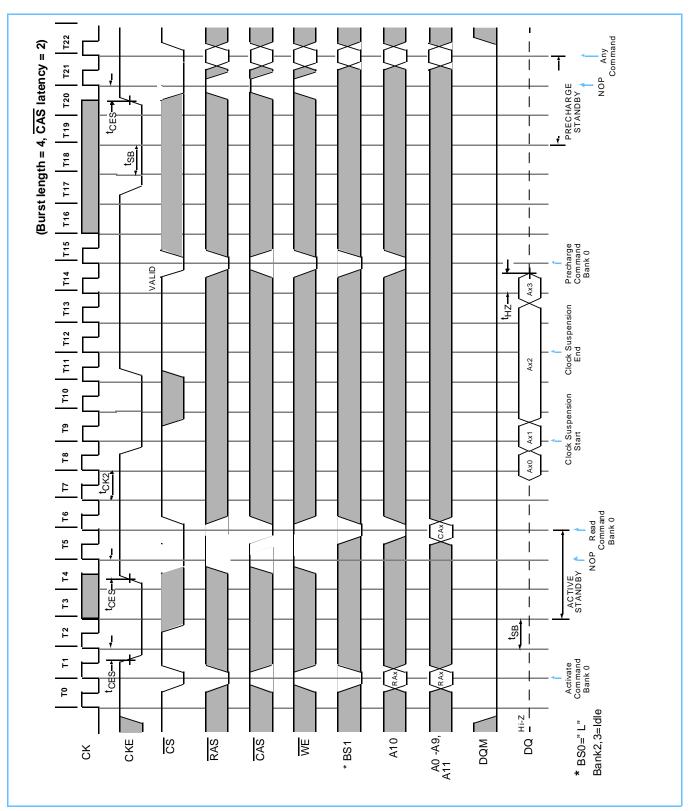




Auto Refresh (CBR)

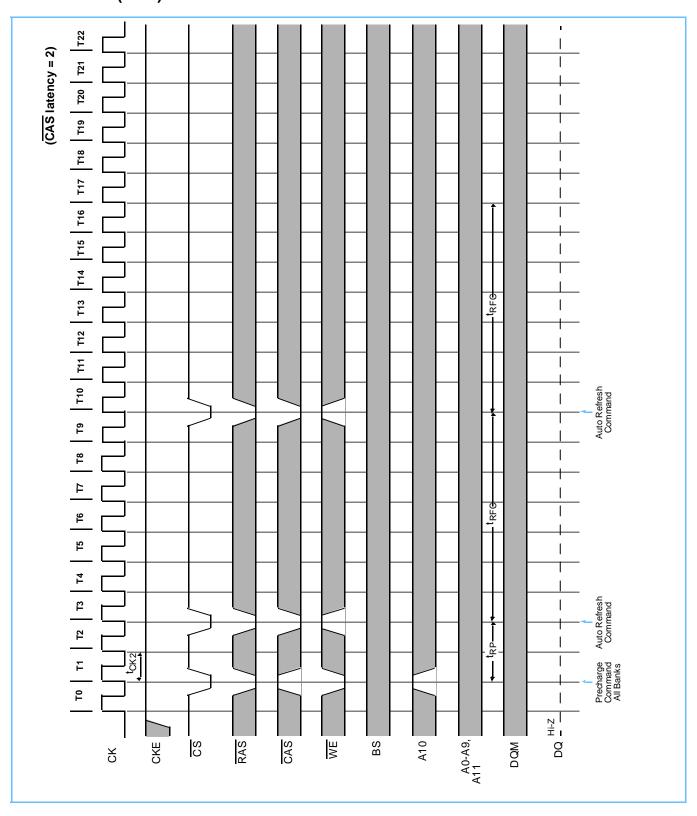




Self Refresh (Entry and Exit)

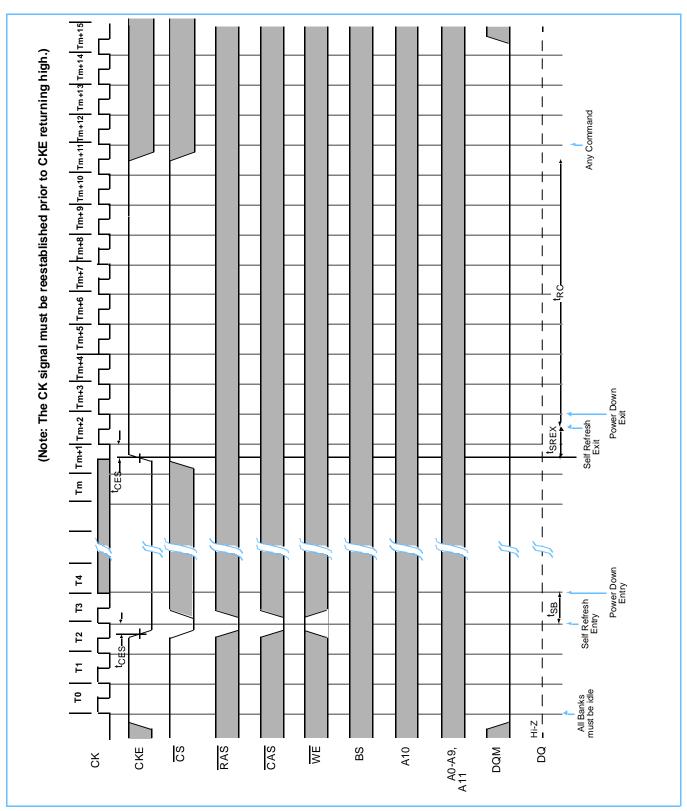




Random Row Read (Interleaving Banks) with Precharge

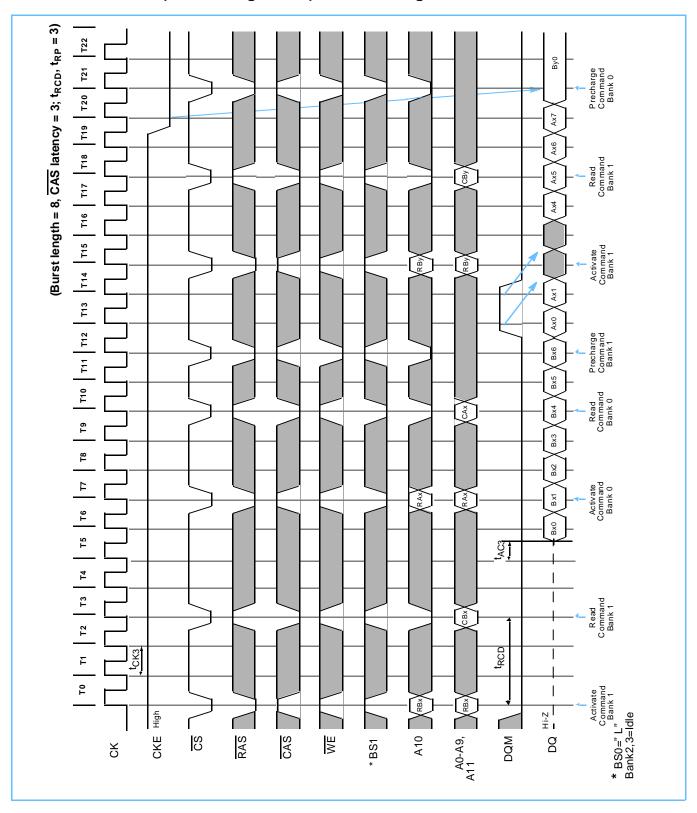




Random Row Read (Interleaving Banks) with Auto-Precharge

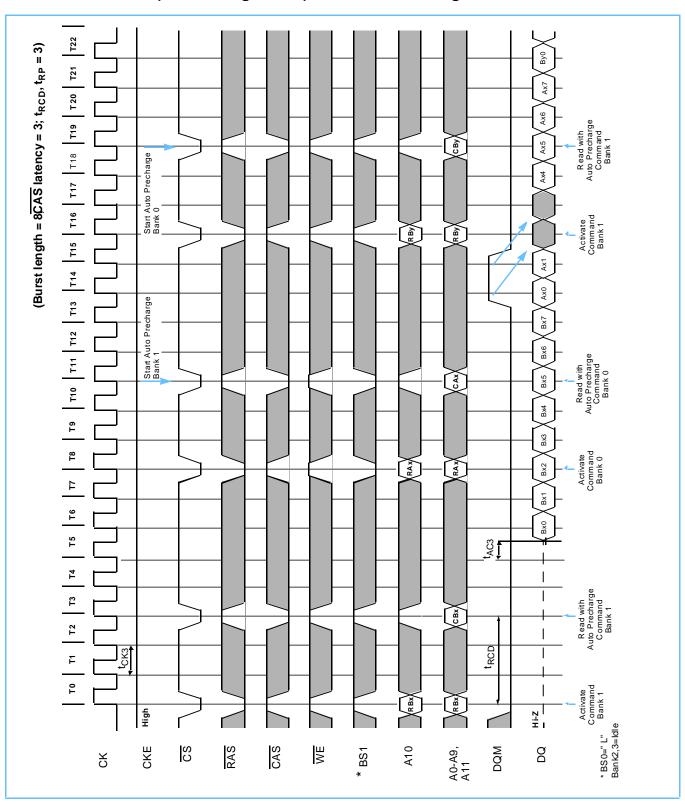




Random Row Write (Interleaving Banks) with Auto-Precharge

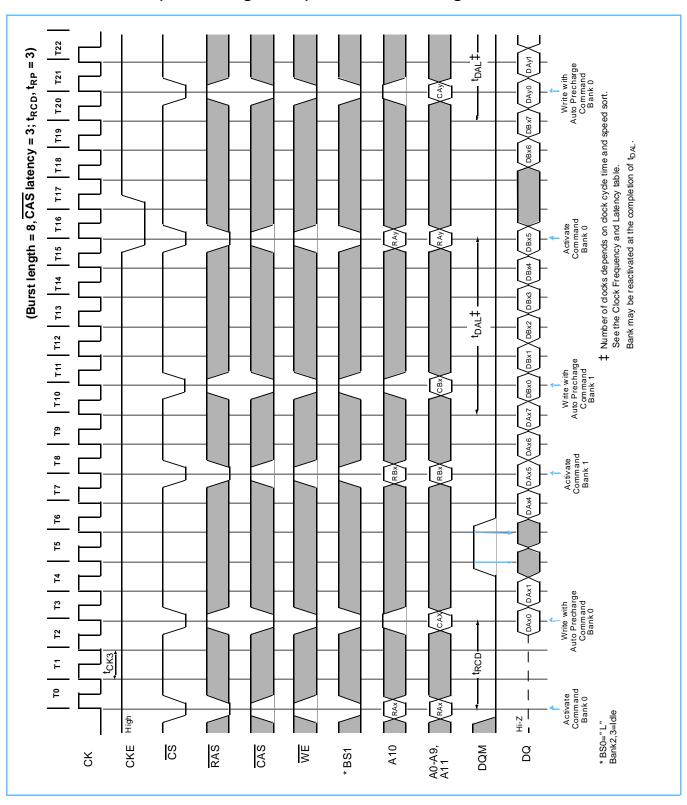




Random Row Write (Interleaving Banks) with Precharge

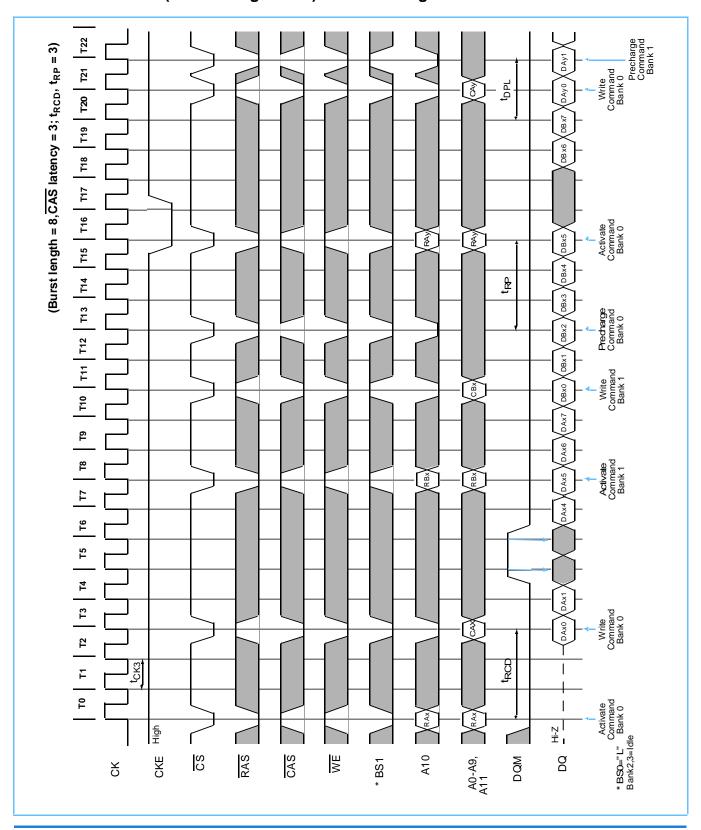




Read / Write Cycle

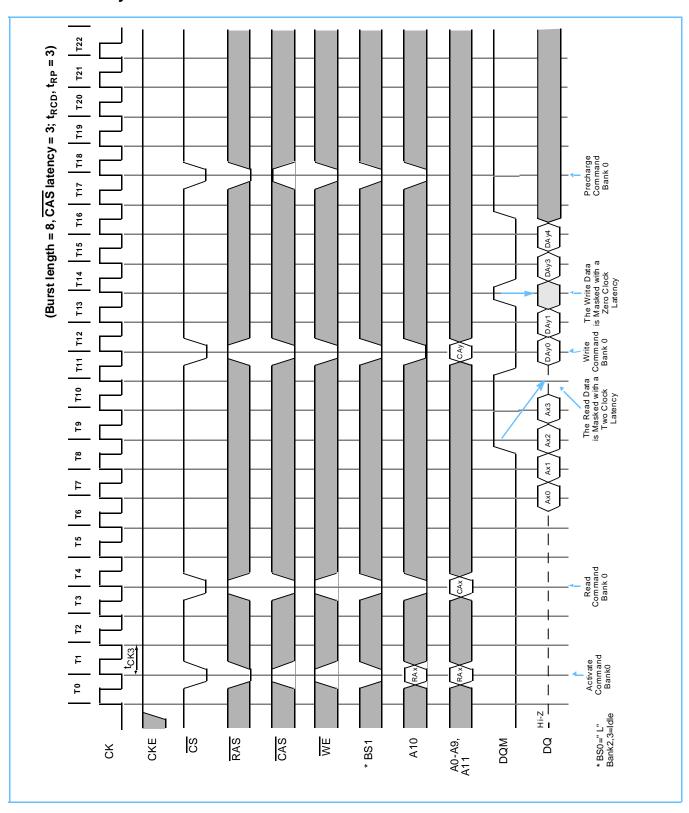




Interleaved Column Read Cycle

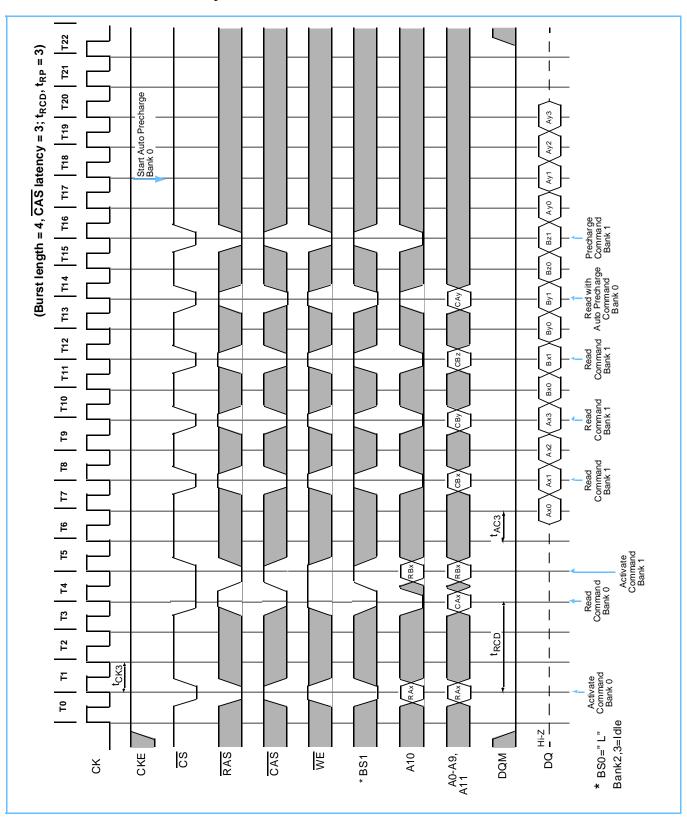




Auto Precharge after Read Burst

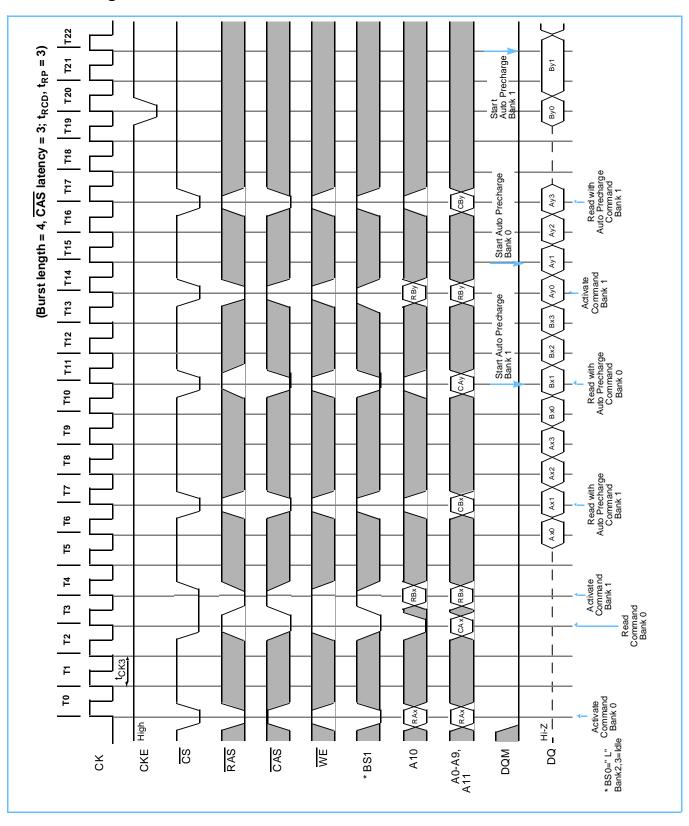




Auto Precharge after Write Burst

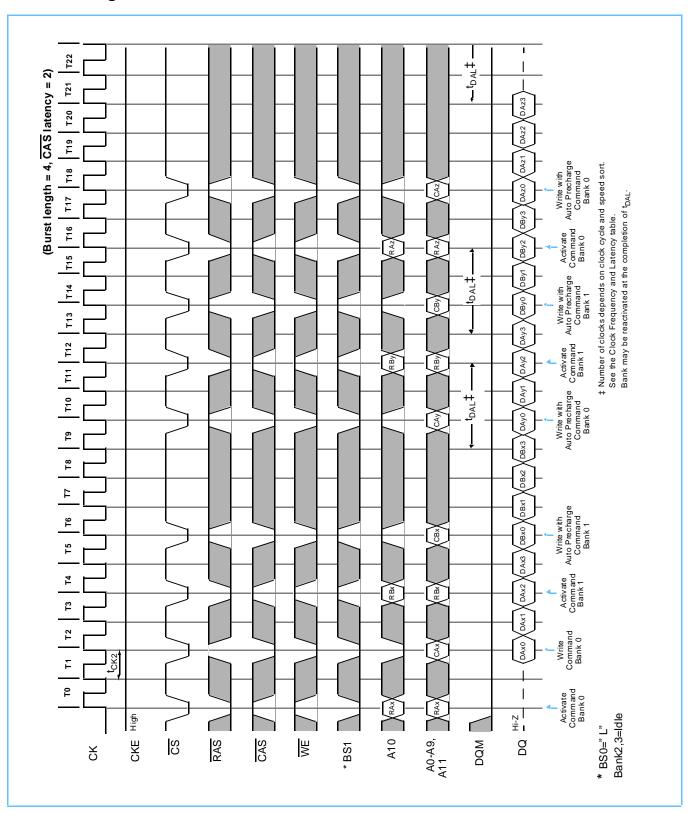




Burst Read and Single Write Operation

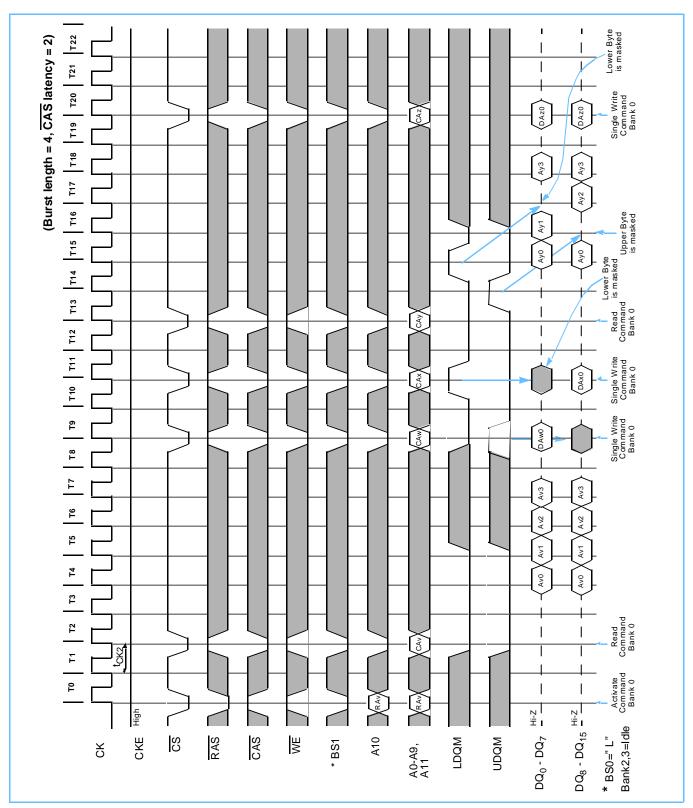




CS Function (Only CS signal needs to be asserted at minimum rate)

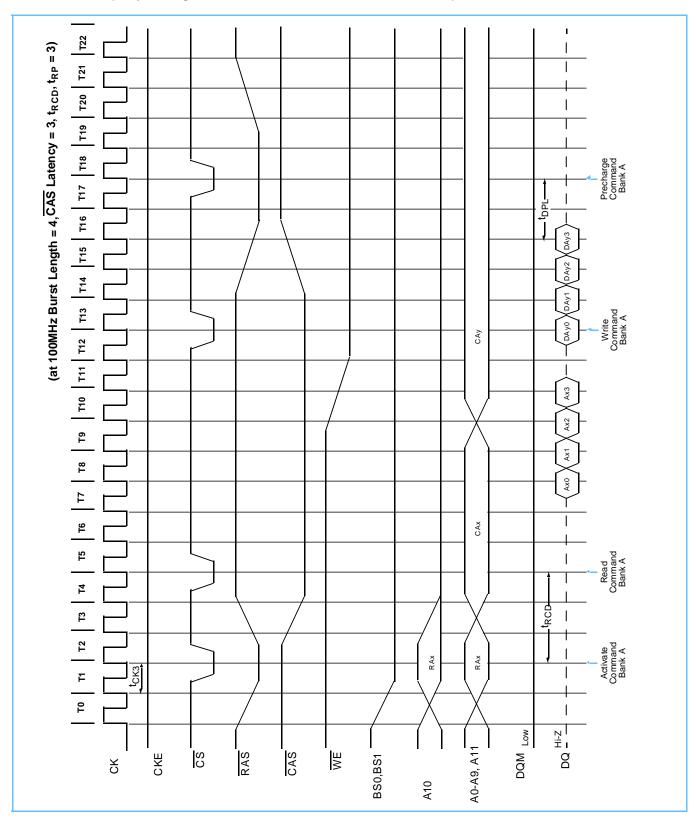



Package Dimensions (400mil; 54 lead; Thin Small Outline Package)

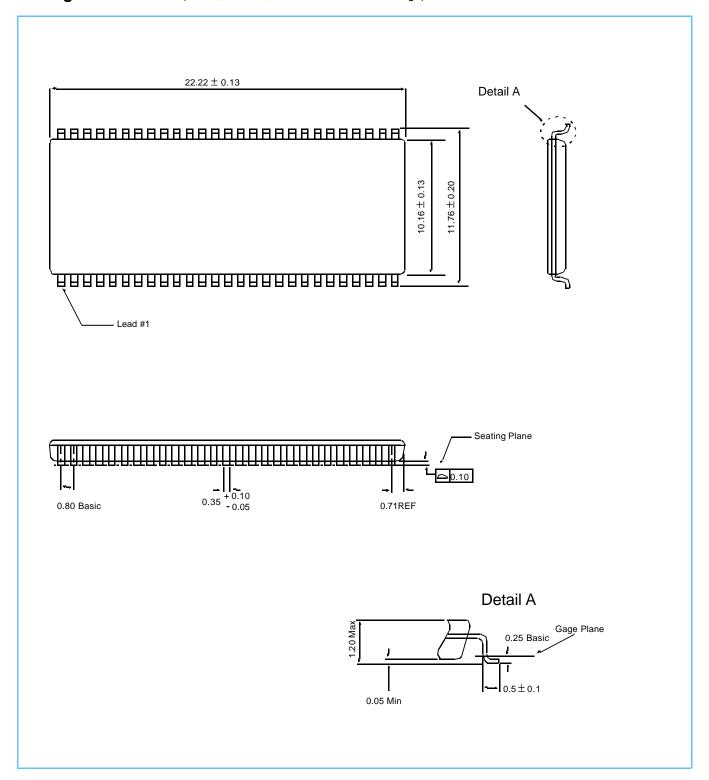



Revision Log

Rev. Date	Contents of Modification
05/2000	Initial release
	Removed stack package and stack references throughout the document.
03/2001	Added a new AC timing parameter t RFC to define the Auto Refresh to Activate Bank/Auto Refresh command period.
00/2001	Updated timing diagrams to reflect the change.
	Updated I _{CC2P} and I _{CC2PS} to 2mAmps.
05/2001	Removed Preliminary



© Nanya Technology Corporation.

All rights reserved.

Printed in Taiwan, R.O.C. May 2001

The following are trademarks of NANYA TECHNOLOGY CORPORATION in R.O.C, or other countries, or both. NANYA NANYA logo

Other company, product and service names may be trademarks or services maeks of others.

NANYA TECHNOLOGY CORPORATION (NTC) reserves the right to make changes without notice. NTC warrants performance of its semiconductor products and related software to the specifications applicable at the time of sale in accordance with NTC's standard warranty. Testing and other quality control techniques are utilize to the extent NTC deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

NTC SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTEND, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS OR OTHER CRITICAL APPLICATIONS.

Inclusion of NTC products in such applications is understood to be fully at the risk of the customer. Use of NTC products in such applications requires the written approval of an appropriate NTC officer. Question concerning potential risk applications should be directed to NTC through a local sales office.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards should be provided by customer to minimize the inherent or procedural hazards.

NTC assumes no liability of applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does NTC warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of NTC covering or relating to any combination, machine, or process in which such semiconductor products or services might be or are used.

NANYA TECHNOLOGY CORPORATION HWA YA Technology Park 669, FU HSING 3rd Rd., Kueishan, Taoyuan, Taiwan, R.O.C.

The NANYA TECHNOLOGY CORPORATION home page can be found at http://www.nanya.com